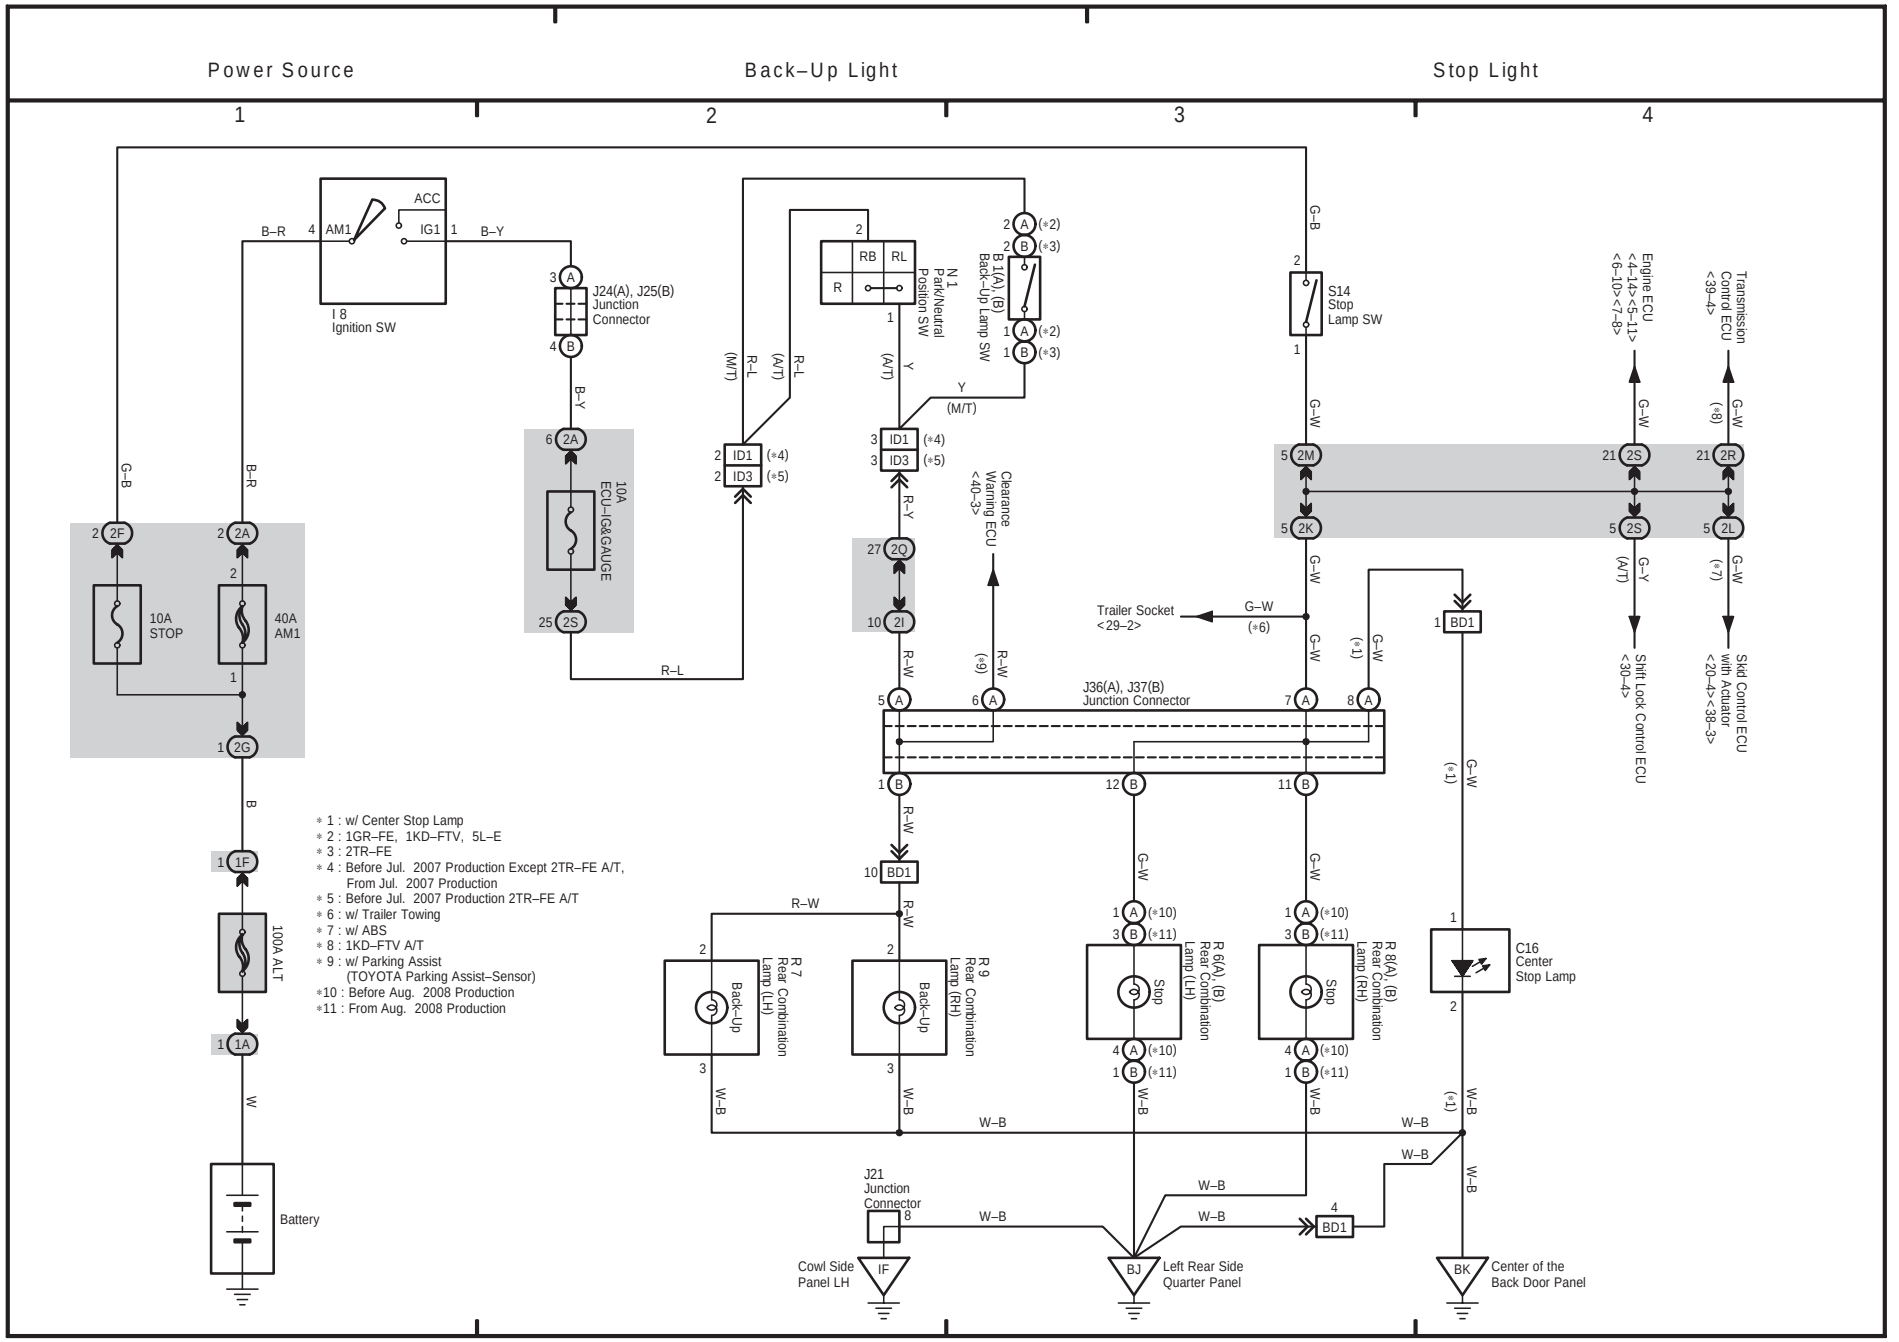

Power Source
Back–Up Light
Stop Light
1
2
3
4
ACC
AM1
IG1
I 8
Ignition SW
B–R
B–Y
J24(A), J25(B)
Junction
Connector
10A
STOP
40A
AM1
10A
ECU–IG&GAUGE
100A ALT
Battery
G–B
B
W
N 1
Park/Neutral
Position SW
B 1(A), (B)
Back–Up Lamp SW
R–L
R–Y
Y
ID1
ID3
Clearance
Warning ECU
<40–3>
S14
Stop
Lamp SW
G–W
G–Y
Trailer Socket
<29–2>
J36(A), J37(B)
Junction Connector
BD1
Engine ECU
<4–14><5–11>
<6–10><7–8>
Transmission
Control ECU
<39–4>
Shift Lock Control ECU
<30–4>
Skid Control ECU
with Actuator
<20–4><38–3>
R–W
W–B
R 7
Rear Combination
Lamp (LH)
Back–Up
R 9
Rear Combination
Lamp (RH)
Back–Up
R 6(A), (B)
Rear Combination
Lamp (LH)
Stop
R 8(A), (B)
Rear Combination
Lamp (RH)
Stop
C16
Center
Stop Lamp
J21
Junction
Connector
Cowl Side
Panel LH
IF
BJ
Left Rear Side
Quarter Panel
BK
Center of the
Back Door Panel
∗ 1 : w/ Center Stop Lamp
∗ 2 : 1GR–FE, 1KD–FTV, 5L–E
∗ 3 : 2TR–FE
∗ 4 : Before Jul. 2007 Production Except 2TR–FE A/T,
From Jul. 2007 Production
∗ 5 : Before Jul. 2007 Production 2TR–FE A/T
∗ 6 : w/ Trailer Towing
∗ 7 : w/ ABS
∗ 8 : 1KD–FTV A/T
∗ 9 : w/ Parking Assist
(TOYOTA Parking Assist–Sensor)
∗10 : Before Aug. 2008 Production
∗11 : From Aug. 2008 Production