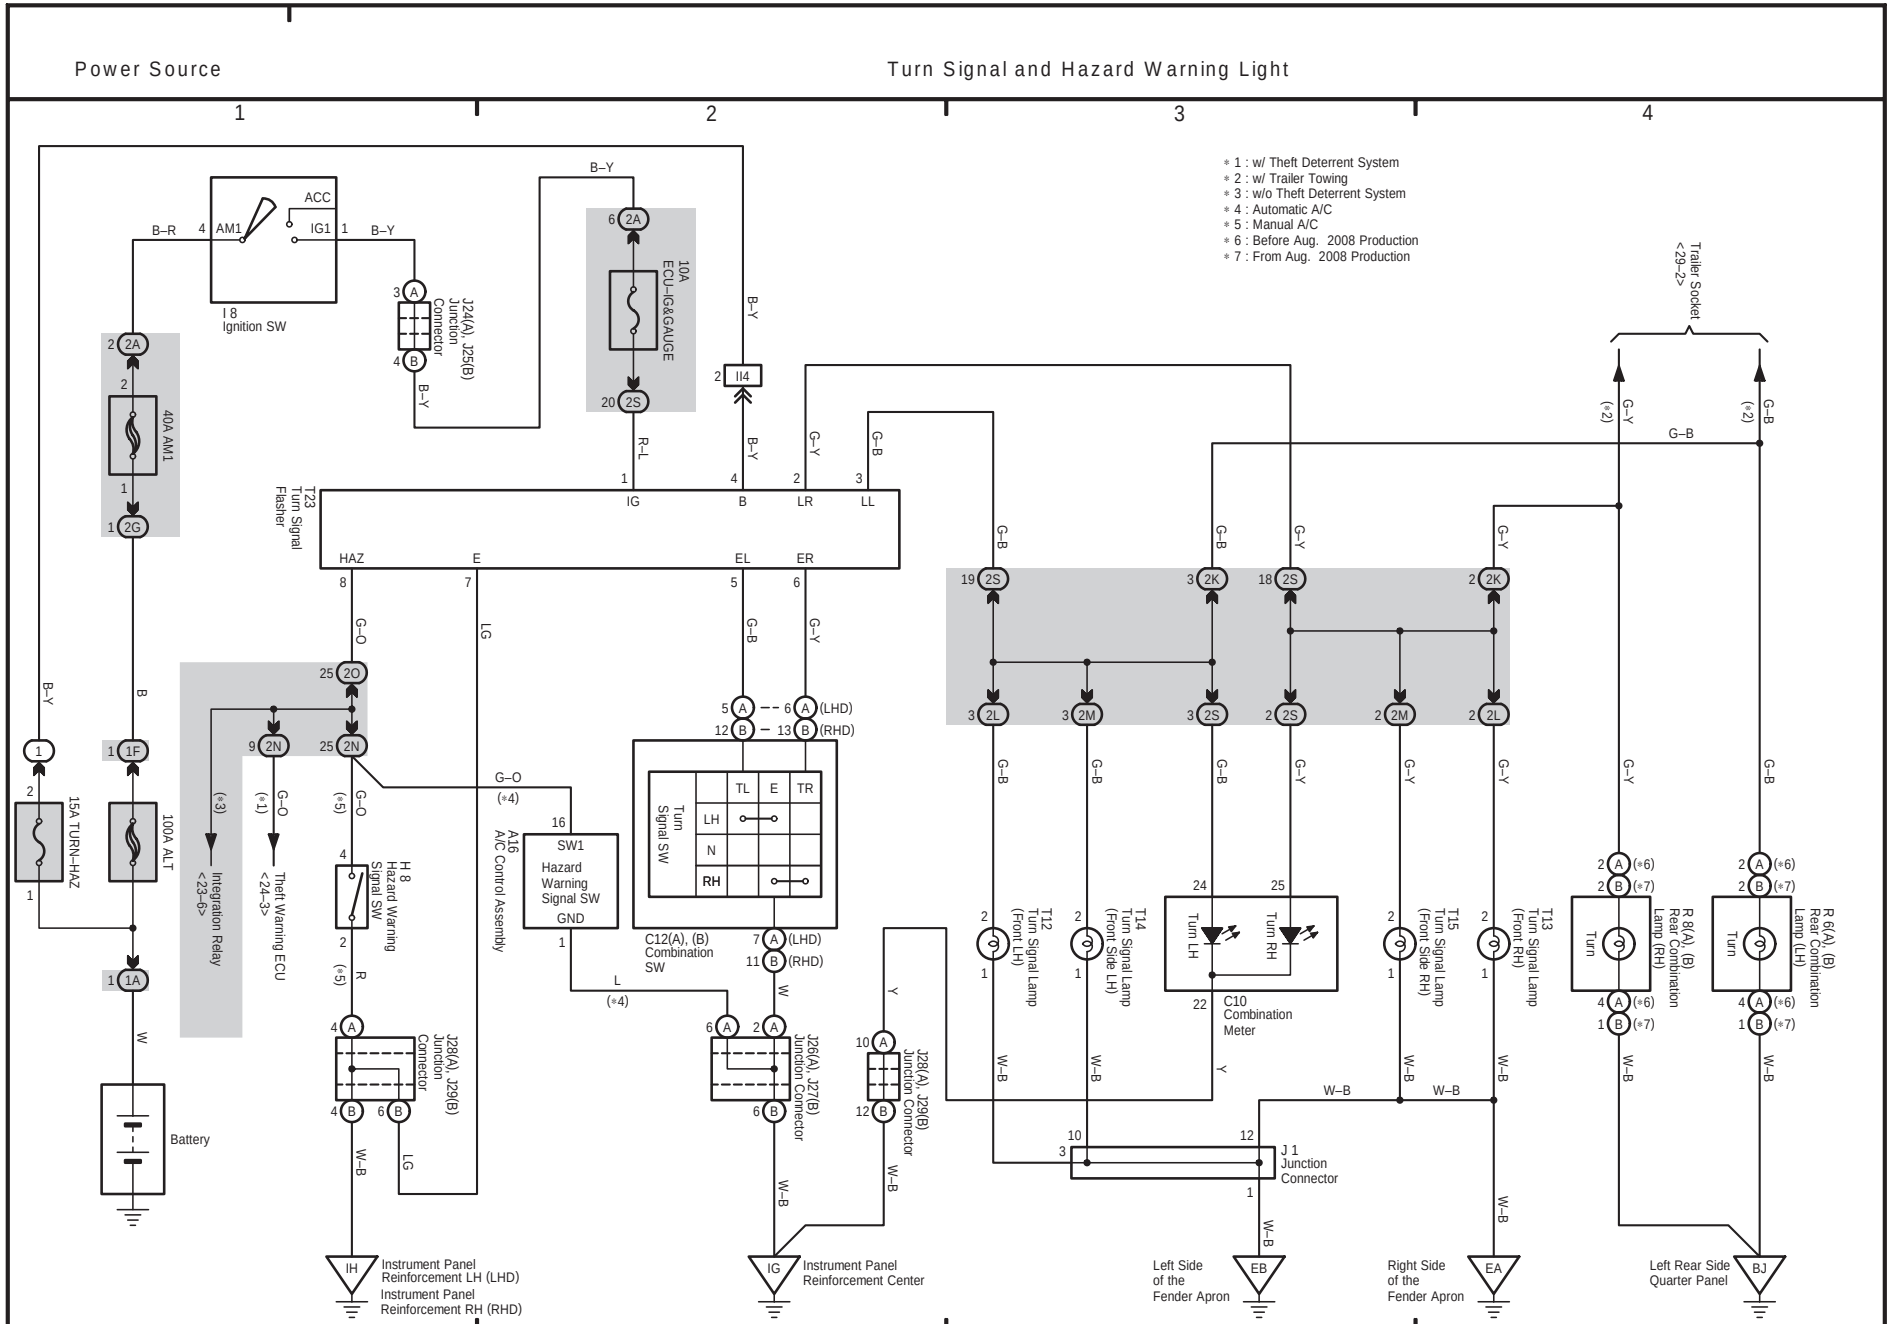

Power Source
Turn Signal and Hazard Warning Light
1
2
3
4
* 1 : w/ Theft Deterrent System
* 2 : w/ Trailer Towing
* 3 : w/o Theft Deterrent System
* 4 : Automatic A/C
* 5 : Manual A/C
* 6 : Before Aug. 2008 Production
* 7 : From Aug. 2008 Production
I 8 Ignition SW
ACC
IG1
AM1
J24(A), J25(B) Junction Connector
10A ECU-IG&GAUGE
40A AM1
T23 Turn Signal Flasher
IG
B
LR
LL
HAZ
E
EL
ER
15A TURN-HAZ
100A ALT
Battery
H 8 Hazard Warning Signal SW
Integration Relay <23-6>
Theft Warning ECU <24-3>
A16 A/C Control Assembly
SW1 Hazard Warning Signal SW
GND
Turn Signal SW
TL
E
TR
LH
N
RH
C12(A), (B) Combination SW
J26(A), J27(B) Junction Connector
J28(A), J29(B) Junction Connector
J 1 Junction Connector
C10 Combination Meter
Turn LH
Turn RH
T12 Turn Signal Lamp (Front LH)
T14 Turn Signal Lamp (Front Side LH)
T15 Turn Signal Lamp (Front Side RH)
T13 Turn Signal Lamp (Front RH)
Trailer Socket <29-2>
R 6(A), (B) Rear Combination Lamp (RH)
R 6(A), (B) Rear Combination Lamp (LH)
Turn
Instrument Panel Reinforcement LH (LHD)
Instrument Panel Reinforcement RH (RHD)
Instrument Panel Reinforcement Center
Left Side of the Fender Apron
Right Side of the Fender Apron
Left Rear Side Quarter Panel
IH
IG
EB
EA
BJ