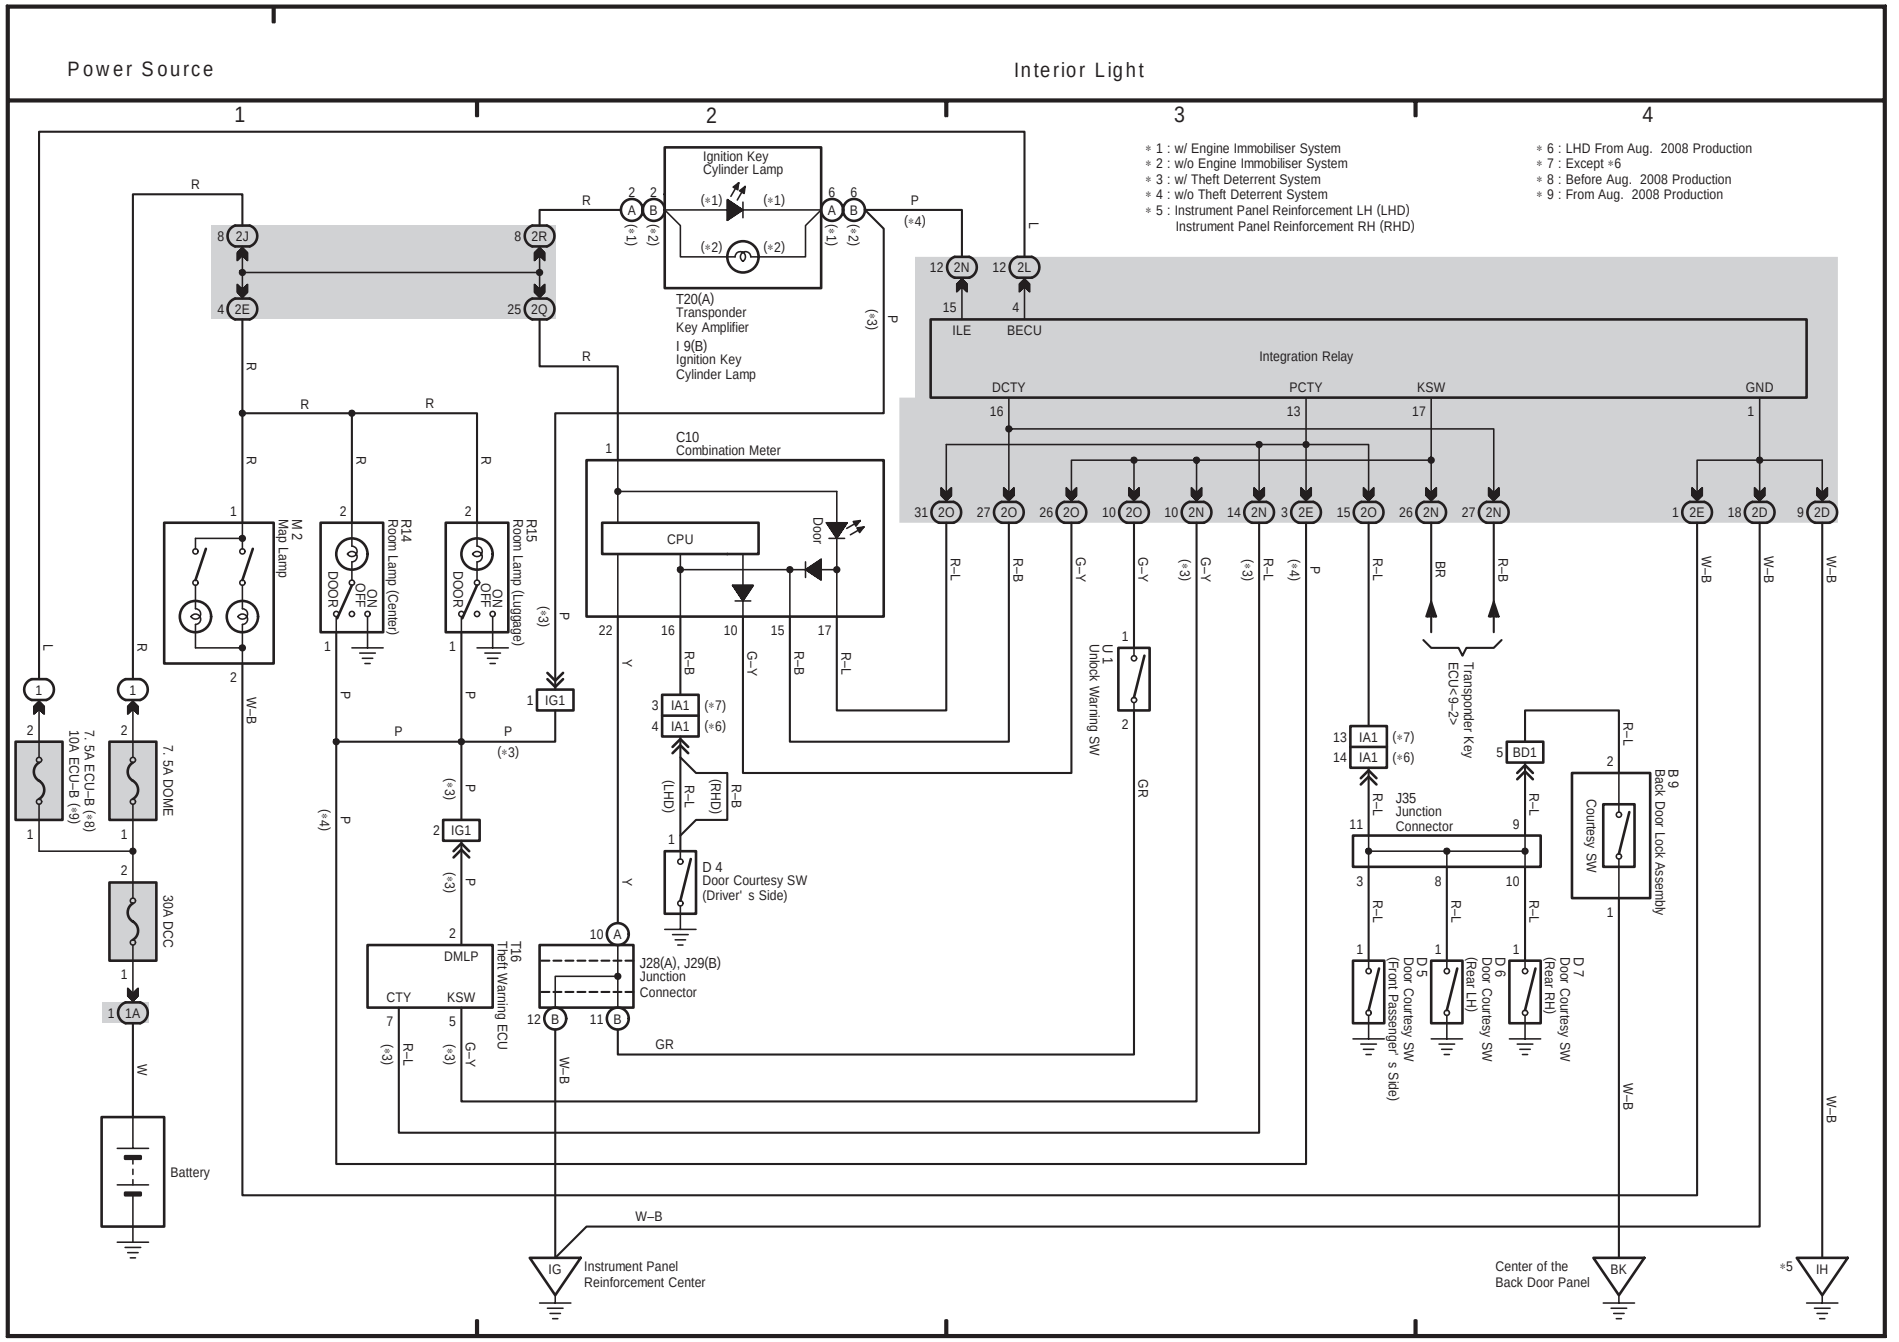

Power Source
Interior Light
1
2
3
4
* 1 : w/ Engine Immobiliser System
* 2 : w/o Engine Immobiliser System
* 3 : w/ Theft Deterrent System
* 4 : w/o Theft Deterrent System
* 5 : Instrument Panel Reinforcement LH (LHD)
Instrument Panel Reinforcement RH (RHD)
* 6 : LHD From Aug. 2008 Production
* 7 : Except *6
* 8 : Before Aug. 2008 Production
* 9 : From Aug. 2008 Production
Ignition Key Cylinder Lamp
T20(A) Transponder Key Amplifier
I 9(B) Ignition Key Cylinder Lamp
Integration Relay
ILE
BECU
DCTY
PCTY
KSW
GND
C10 Combination Meter
CPU
Door
M 2 Map Lamp
R14 Room Lamp (Center)
R15 Room Lamp (Luggage)
DOOR
ON
OFF
U 1 Unlock Warning SW
Transponder Key ECU<3-2>
J35 Junction Connector
B 9 Back Door Lock Assembly
Courtesy SW
D 4 Door Courtesy SW (Driver' s Side)
D 5 Door Courtesy SW (Front Passenger' s Side)
D 6 Door Courtesy SW (Rear LH)
D 7 Door Courtesy SW (Rear RH)
J28(A), J29(B) Junction Connector
T16 Theft Warning ECU
DMLP
CTY
KSW
7. 5A ECU-B (*8)
10A ECU-B (*9)
7. 5A DOME
30A DCC
Battery
IG
Instrument Panel Reinforcement Center
Center of the Back Door Panel
BK
IH
*5