

(Cont. next page)

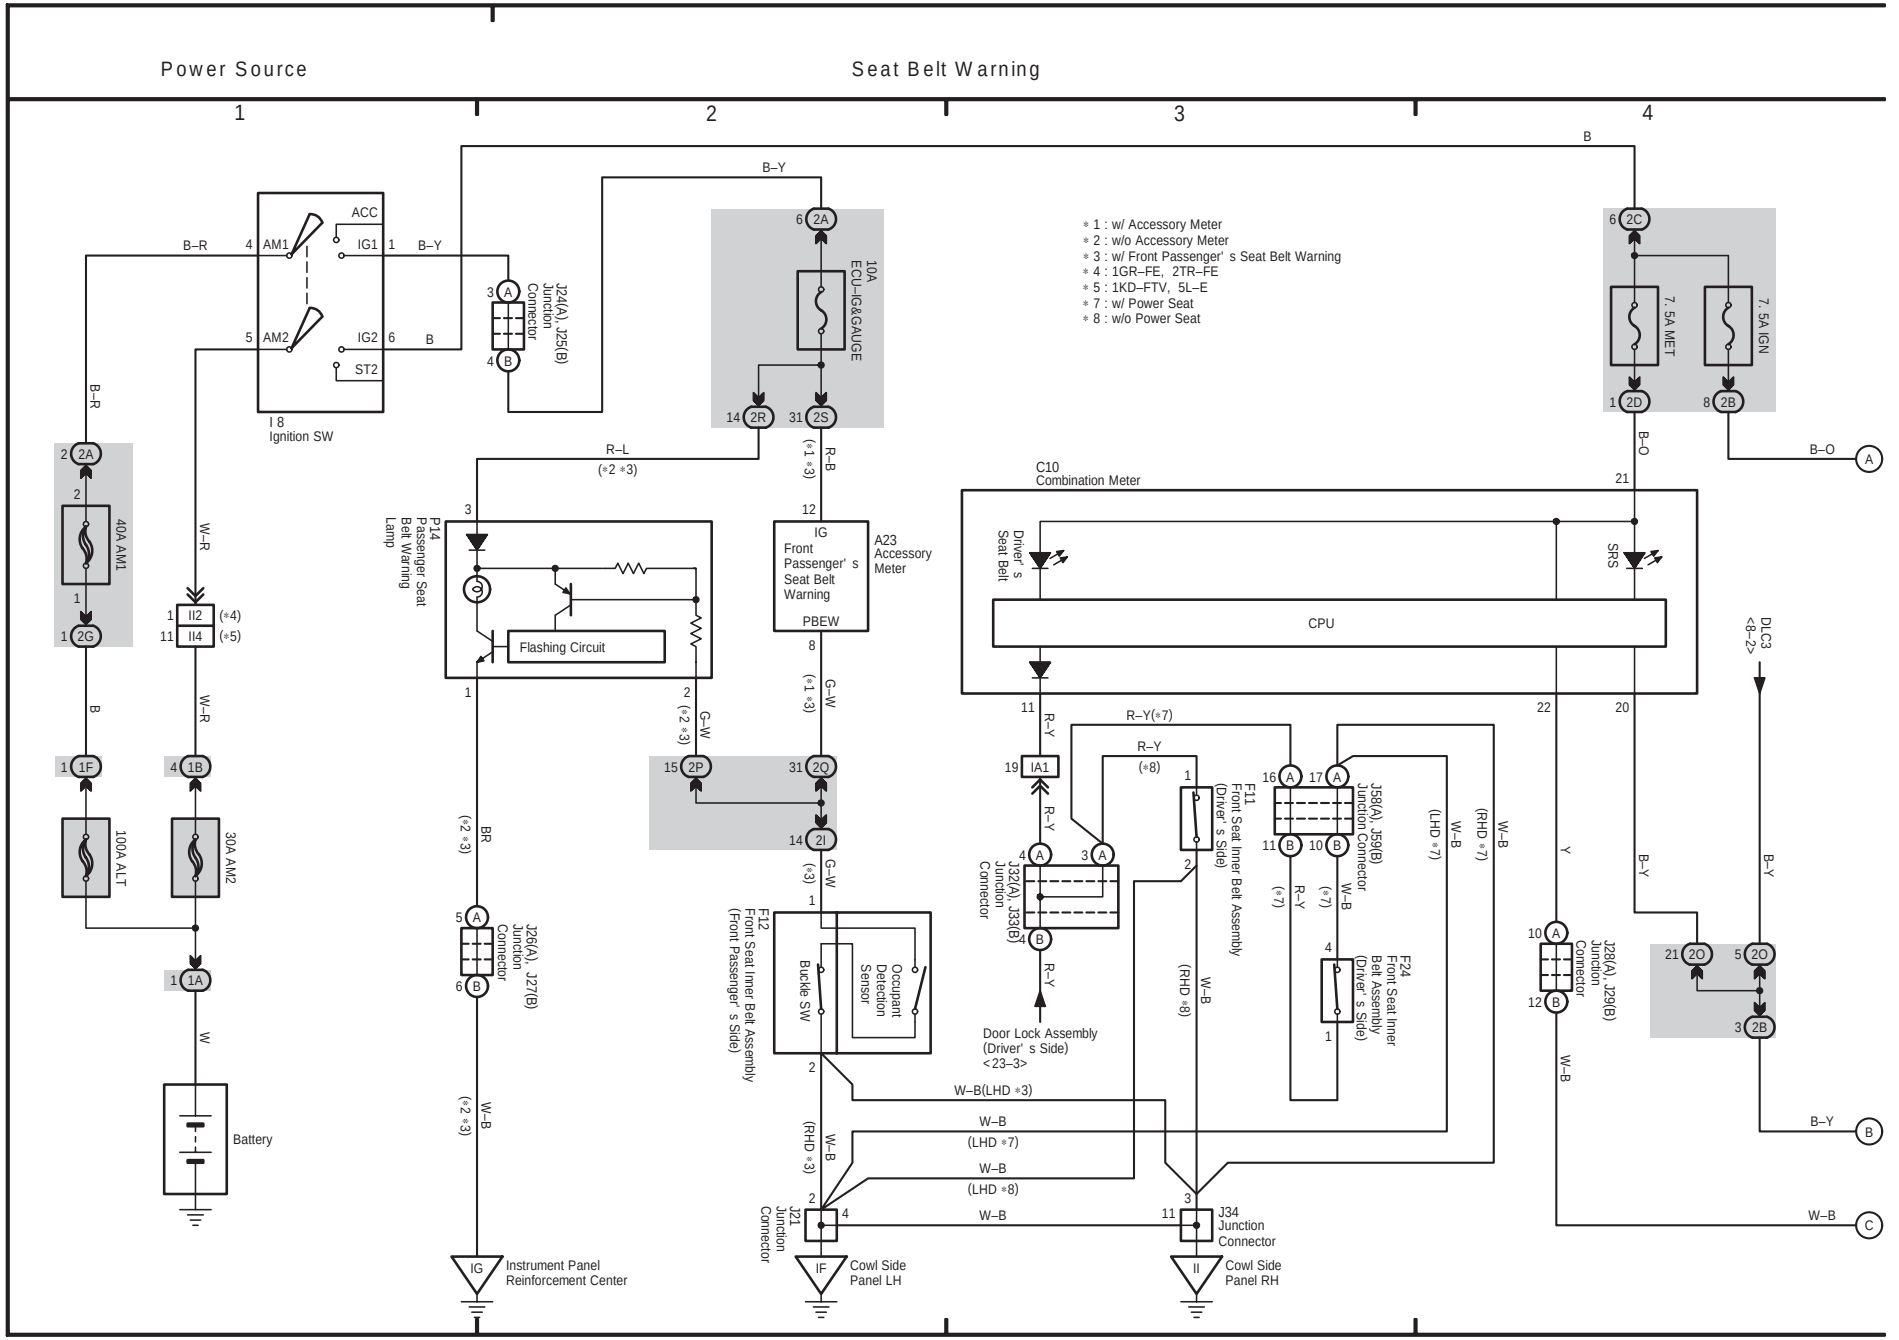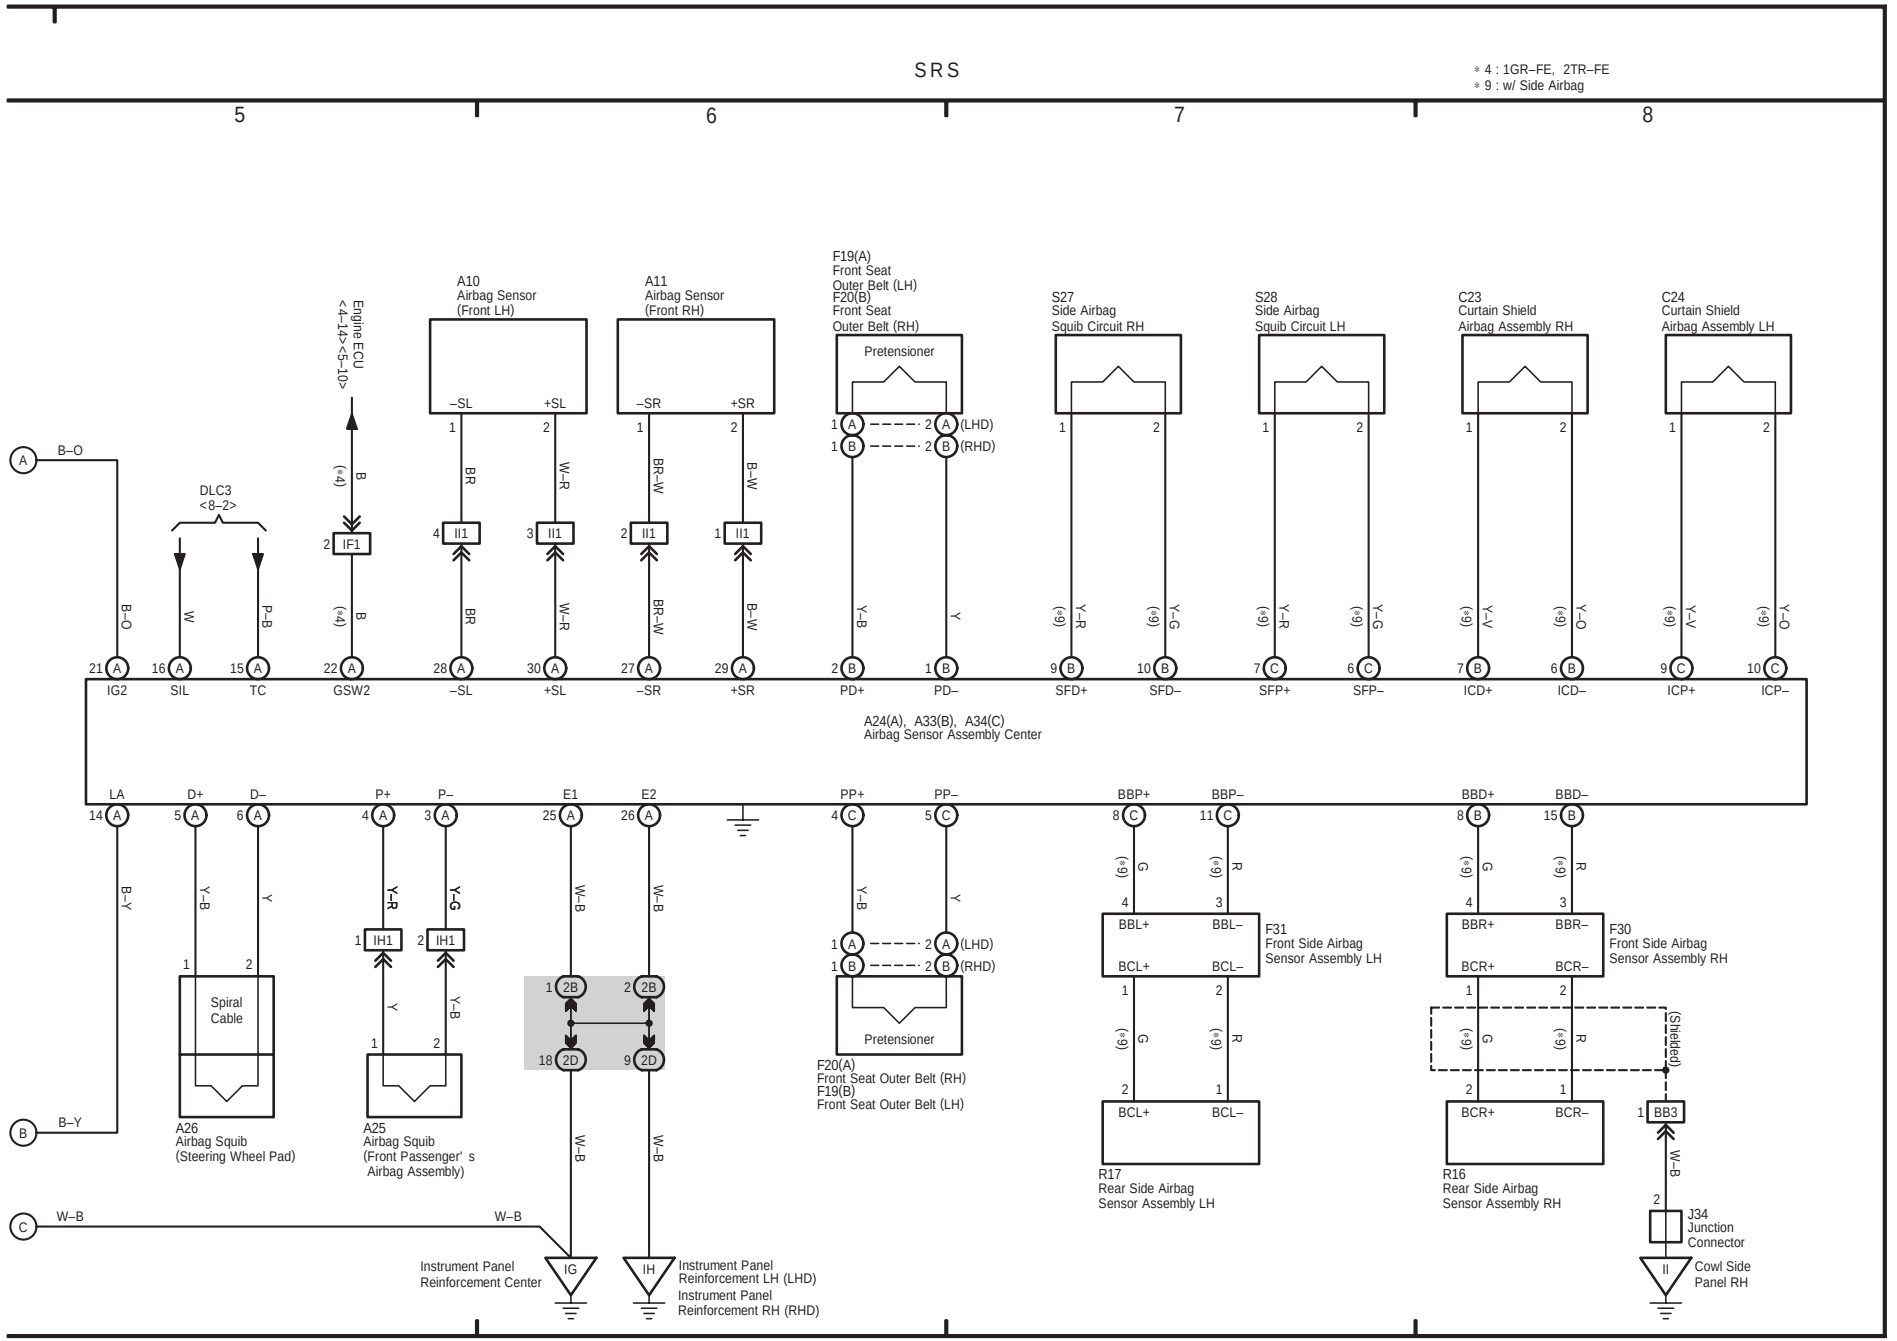


SRS
* 4 : 1GR–FE, 2TR–FE
* 9 : w/ Side Airbag
5
6
7
8
A10
Airbag Sensor
(Front LH)
A11
Airbag Sensor
(Front RH)
F19(A)
Front Seat
Outer Belt (LH)
F20(B)
Front Seat
Outer Belt (RH)
Pretensioner
S27
Side Airbag
Squib Circuit RH
S28
Side Airbag
Squib Circuit LH
C23
Curtain Shield
Airbag Assembly RH
C24
Curtain Shield
Airbag Assembly LH
Engine ECU
<4–14><5–10>
DLC3
<8–2>
IG2
SIL
TC
GSW2
–SL
+SL
–SR
+SR
PD+
PD–
SFD+
SFD–
SFP+
SFP–
ICD+
ICD–
ICP+
ICP–
A24(A), A33(B), A34(C)
Airbag Sensor Assembly Center
LA
D+
D–
P+
P–
E1
E2
PP+
PP–
BBP+
BBP–
BBD+
BBD–
Spiral
Cable
A26
Airbag Squib
(Steering Wheel Pad)
A25
Airbag Squib
(Front Passenger' s
Airbag Assembly)
F20(A)
Front Seat Outer Belt (RH)
F19(B)
Front Seat Outer Belt (LH)
F31
Front Side Airbag
Sensor Assembly LH
R17
Rear Side Airbag
Sensor Assembly LH
F30
Front Side Airbag
Sensor Assembly RH
R16
Rear Side Airbag
Sensor Assembly RH
(Shielded)
BB3
J34
Junction
Connector
Cowl Side
Panel RH
Instrument Panel
Reinforcement Center
IG
IH
Instrument Panel
Reinforcement LH (LHD)
Instrument Panel
Reinforcement RH (RHD)