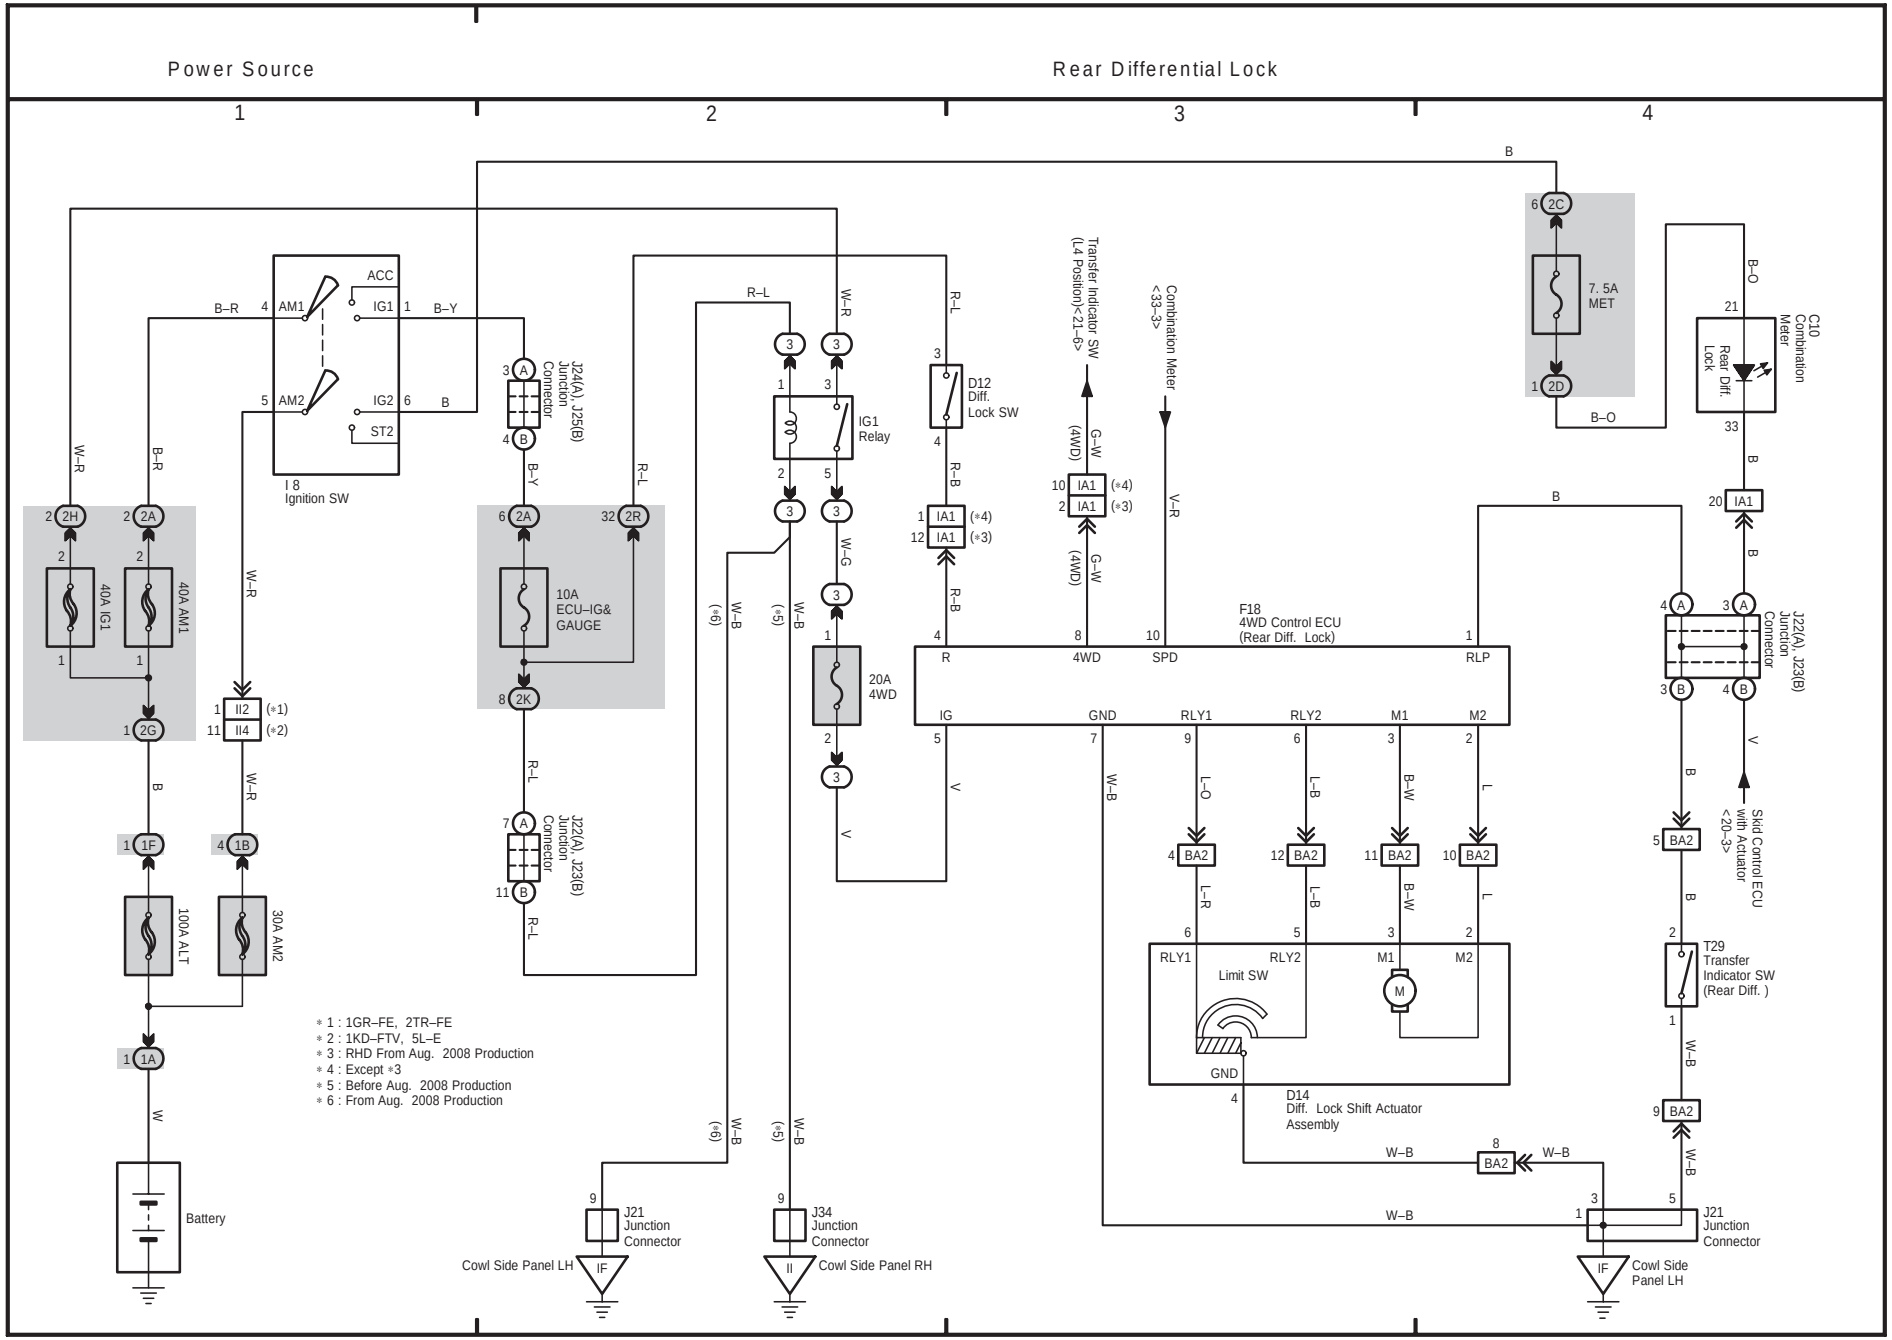

Power Source
Rear Differential Lock
1
2
3
4
ACC
IG1
IG2
ST2
AM1
AM2
I 8
Ignition SW
J24(A), J25(B) Junction Connector
J22(A), J23(B) Junction Connector
IG1 Relay
D12 Diff. Lock SW
Transfer Indicator SW (L4 Position)<21-6>
Combination Meter <33-3>
7. 5A MET
C10 Combination Meter
Rear Diff. Lock
40A IG1
40A AM1
10A ECU-IG& GAUGE
20A 4WD
100A ALT
30A AM2
Battery
F18 4WD Control ECU (Rear Diff. Lock)
R
4WD
SPD
RLP
IG
GND
RLY1
RLY2
M1
M2
Limit SW
D14 Diff. Lock Shift Actuator Assembly
T29 Transfer Indicator SW (Rear Diff.)
Skid Control ECU with Actuator
J21 Junction Connector
J34 Junction Connector
Cowl Side Panel LH
Cowl Side Panel RH
Cowl Side Panel LH
* 1 : 1GR–FE, 2TR–FE
* 2 : 1KD–FTV, 5L–E
* 3 : RHD From Aug. 2008 Production
* 4 : Except *3
* 5 : Before Aug. 2008 Production
* 6 : From Aug. 2008 Production