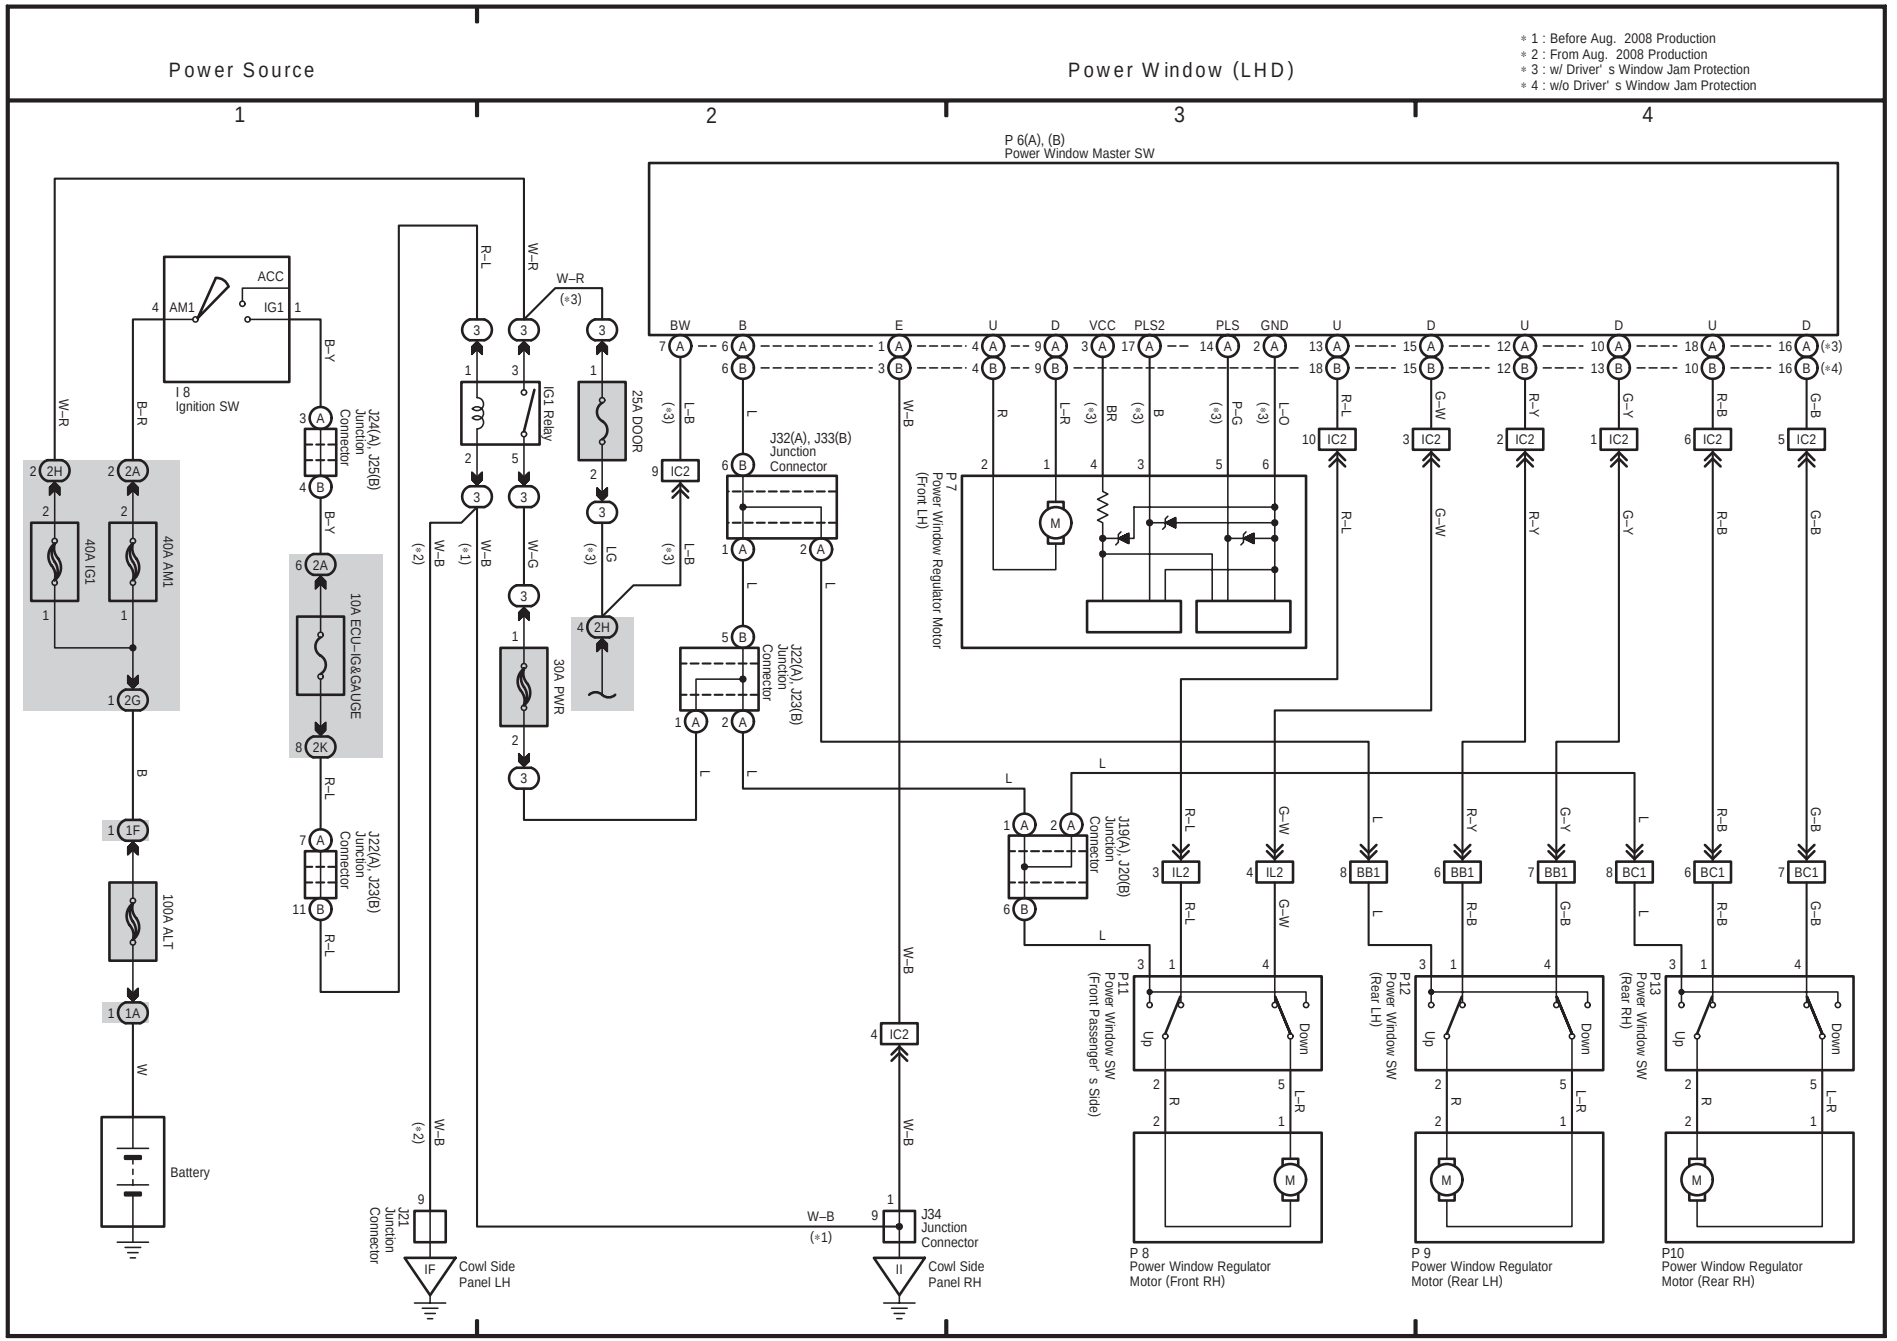

Power Source
Power Window (LHD)
1
2
3
4
* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
* 3 : w/ Driver' s Window Jam Protection
* 4 : w/o Driver' s Window Jam Protection
P 6(A), (B)
Power Window Master SW
BW
B
E
U
D
VCC
PLS2
PLS
GND
ACC
IG1
AM1
I 8
Ignition SW
IG1 Relay
25A DOOR
30A PWR
40A IG1
40A AM1
10A ECU–IG&GAUGE
100A ALT
Battery
J24(A), J25(B)
Junction
Connector
J32(A), J33(B)
Junction
Connector
J22(A), J23(B)
Junction
Connector
J19(A), J20(B)
Junction
Connector
J21
Junction
Connector
J34
Junction
Connector
P 7
Power Window Regulator Motor
(Front LH)
P11
Power Window SW
(Front Passenger' s Side)
P12
Power Window SW
(Rear LH)
P13
Power Window SW
(Rear RH)
Up
Down
P 8
Power Window Regulator
Motor (Front RH)
P 9
Power Window Regulator
Motor (Rear LH)
P10
Power Window Regulator
Motor (Rear RH)
Cowl Side
Panel LH
Cowl Side
Panel RH
IC2
IL2
BB1
BC1
W–R
R–L
B–Y
B–R
W–B
W–G
L–B
L
R
L–R
BR
P–G
L–O
R–Y
G–W
G–Y
R–B
G–B
W
B
(*1)
(*2)
(*3)