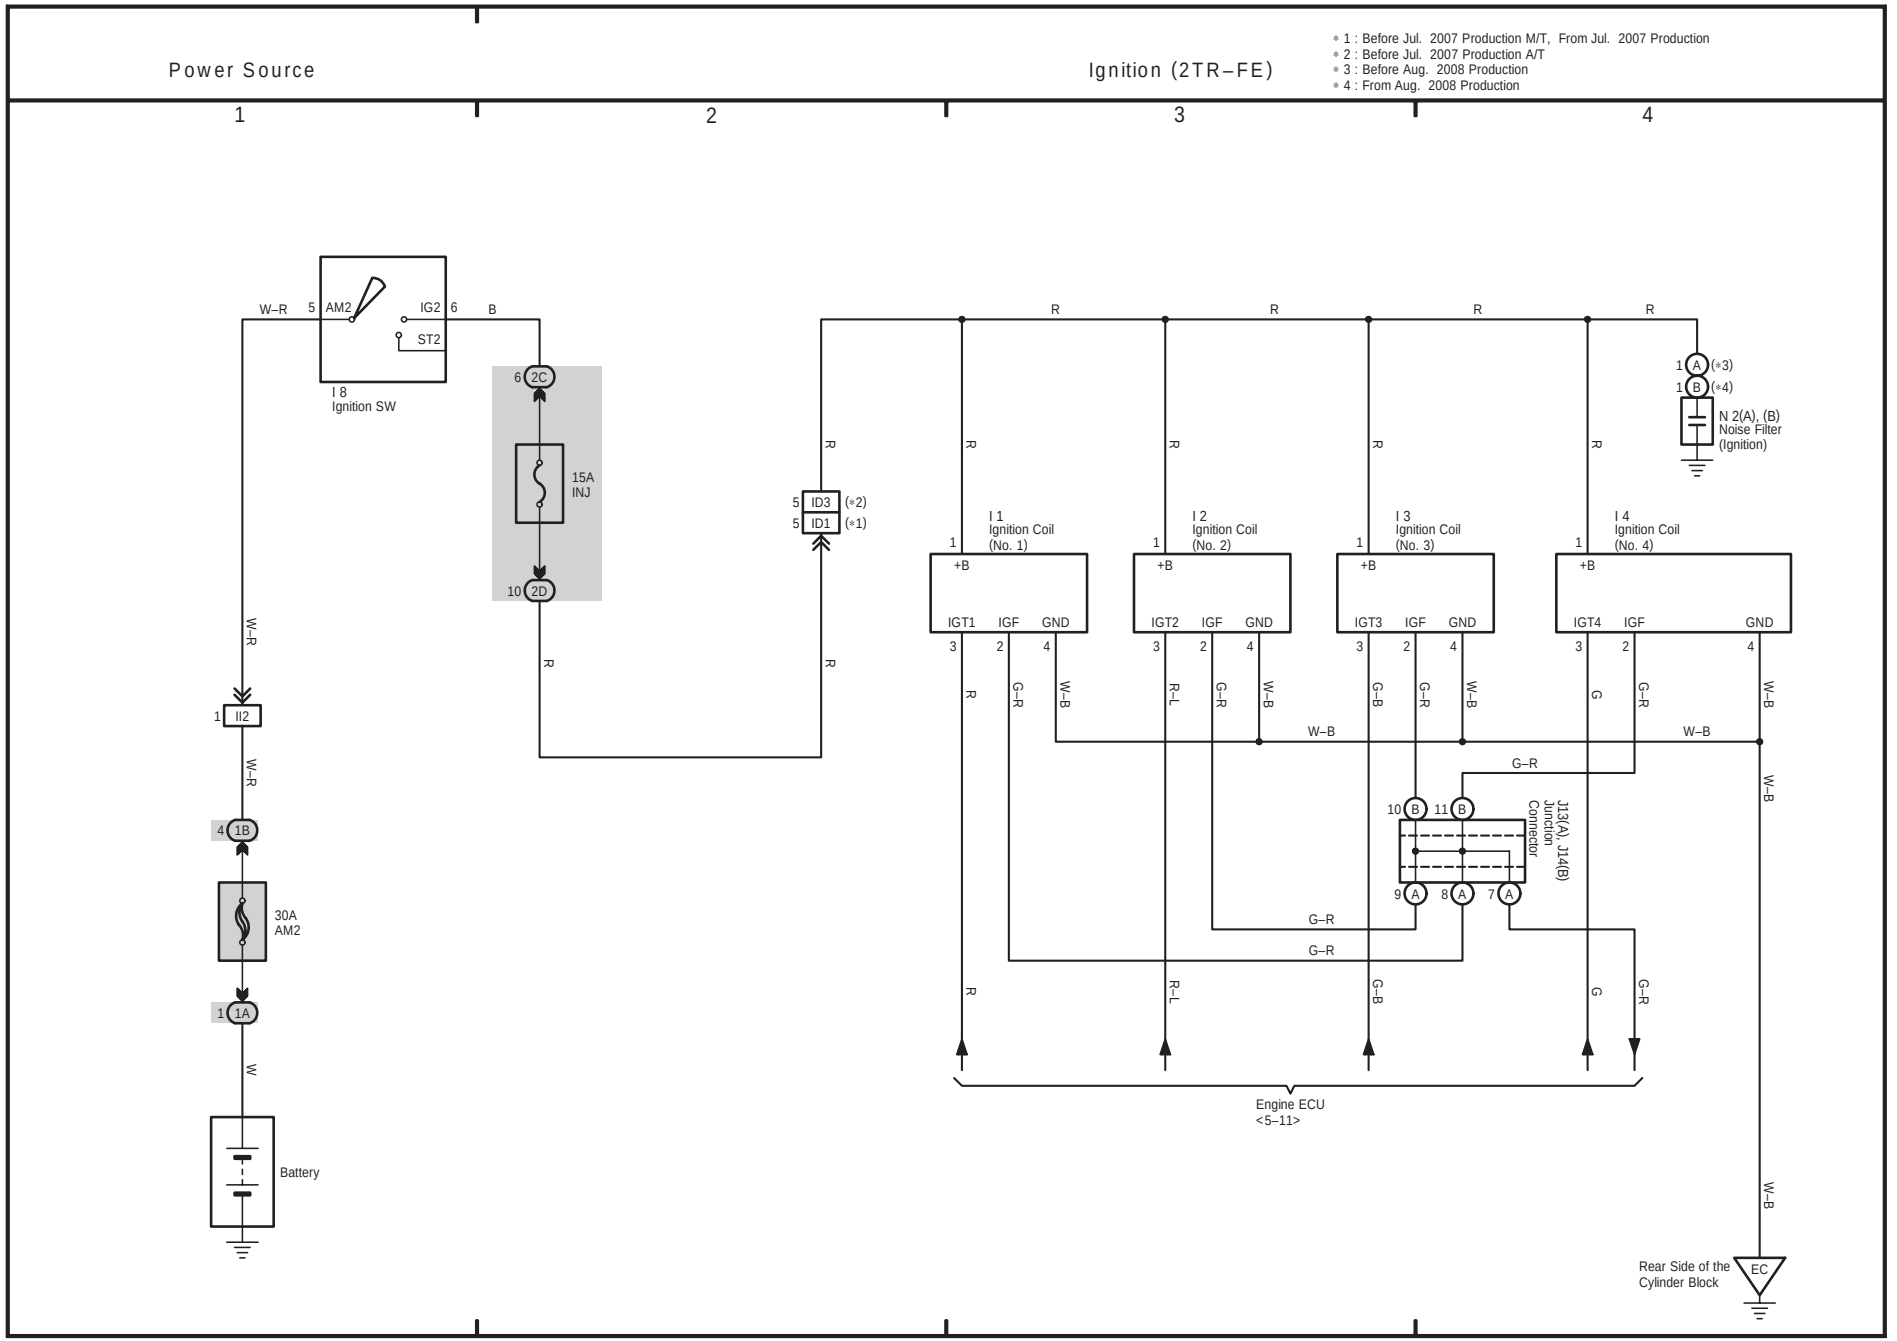

Power Source
Ignition (2TR–FE)
1
2
3
4
* 1 : Before Jul. 2007 Production M/T, From Jul. 2007 Production
* 2 : Before Jul. 2007 Production A/T
* 3 : Before Aug. 2008 Production
* 4 : From Aug. 2008 Production
W–R
5 AM2
IG2 6
B
ST2
I 8
Ignition SW
6 2C
15A
INJ
10 2D
5 ID3 (*2)
5 ID1 (*1)
R
I 1
Ignition Coil
(No. 1)
I 2
Ignition Coil
(No. 2)
I 3
Ignition Coil
(No. 3)
I 4
Ignition Coil
(No. 4)
+B
IGT1 IGF GND
IGT2 IGF GND
IGT3 IGF GND
IGT4 IGF GND
1 A (*3)
1 B (*4)
N 2(A), (B)
Noise Filter
(Ignition)
1 II2
4 1B
30A
AM2
1 1A
W
Battery
G–R
W–B
R–L
G
10 B 11 B
9 A 8 A 7 A
J13(A), J14(B)
Junction
Connector
Engine ECU
<5–11>
Rear Side of the
Cylinder Block
EC