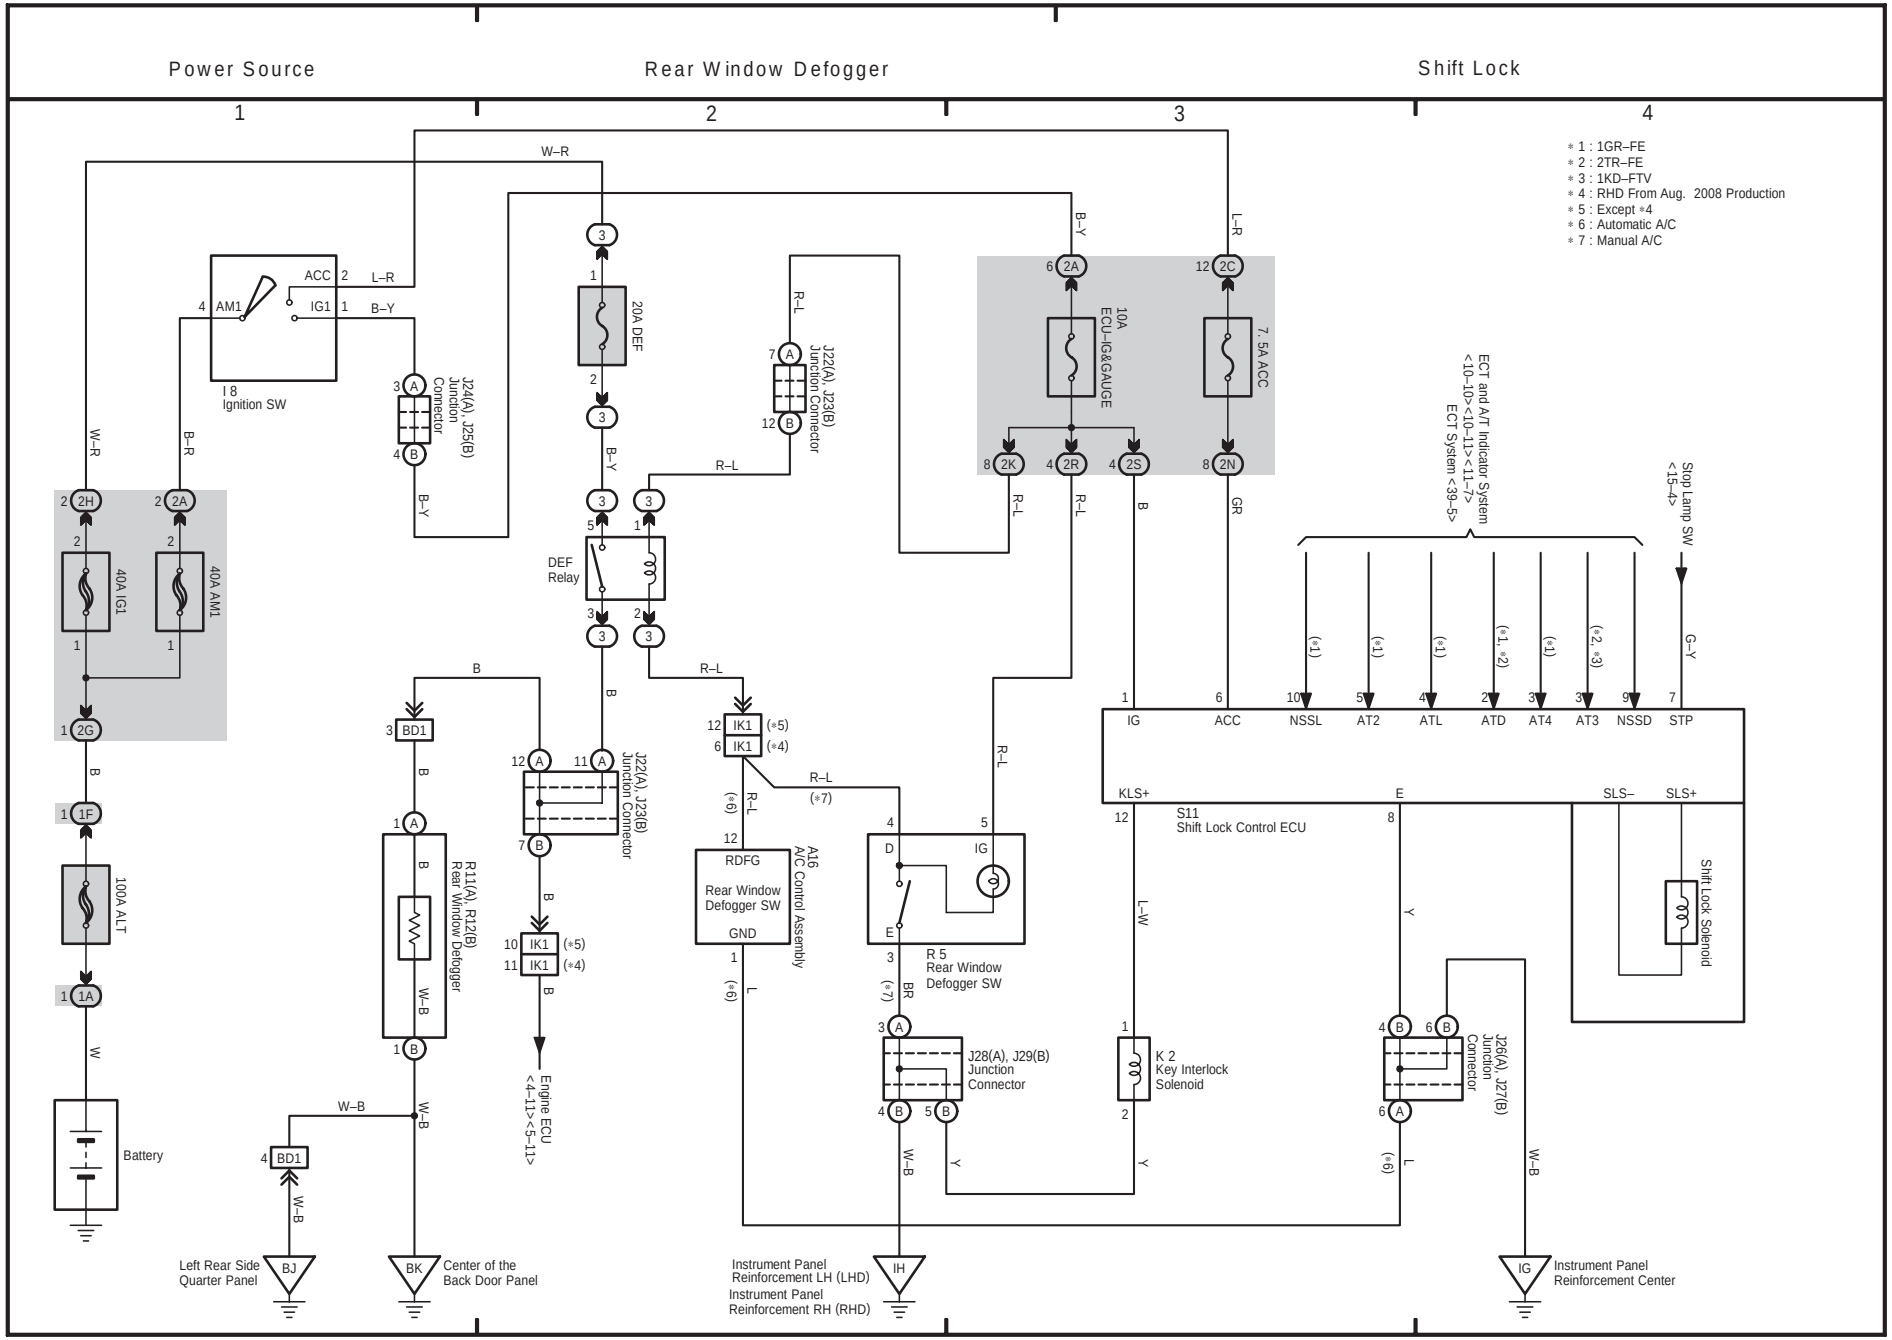

Power Source
Rear Window Defogger
Shift Lock
1
2
3
4
* 1 : 1GR–FE
* 2 : 2TR–FE
* 3 : 1KD–FTV
* 4 : RHD From Aug. 2008 Production
* 5 : Except *4
* 6 : Automatic A/C
* 7 : Manual A/C
W–R
B–R
L–R
B–Y
R–L
B
W–B
L–W
Y
BR
L
G–Y
GR
I 8
Ignition SW
ACC
AM1
IG1
J24(A), J25(B)
Junction
Connector
20A DEF
J22(A), J23(B)
Junction Connector
10A
ECU–IG&GAUGE
7. 5A ACC
DEF
Relay
40A IG1
40A AM1
100A ALT
Battery
BD1
R11(A), R12(B)
Rear Window Defogger
J22(A), J23(B)
Junction Connector
IK1
(*5)
(*4)
(*6)
(*7)
RDFG
Rear Window
Defogger SW
GND
A16
A/C Control Assembly
R 5
Rear Window
Defogger SW
J28(A), J29(B)
Junction
Connector
K 2
Key Interlock
Solenoid
S11
Shift Lock Control ECU
KLS+
E
SLS–
SLS+
Shift Lock Solenoid
IG
ACC
NSSL
AT2
ATL
ATD
AT4
AT3
NSSD
STP
ECT and A/T Indicator System
<10–10><10–11><11–7>
ECT System <39–5>
Stop Lamp SW
<15–4>
(*1)
(*1, *2)
(*2, *3)
J26(A), J27(B)
Junction
Connector
Engine ECU
<4–11><5–11>
Left Rear Side
Quarter Panel
BJ
BK
Center of the
Back Door Panel
Instrument Panel
Reinforcement LH (LHD)
Instrument Panel
Reinforcement RH (RHD)
IH
IG
Instrument Panel
Reinforcement Center