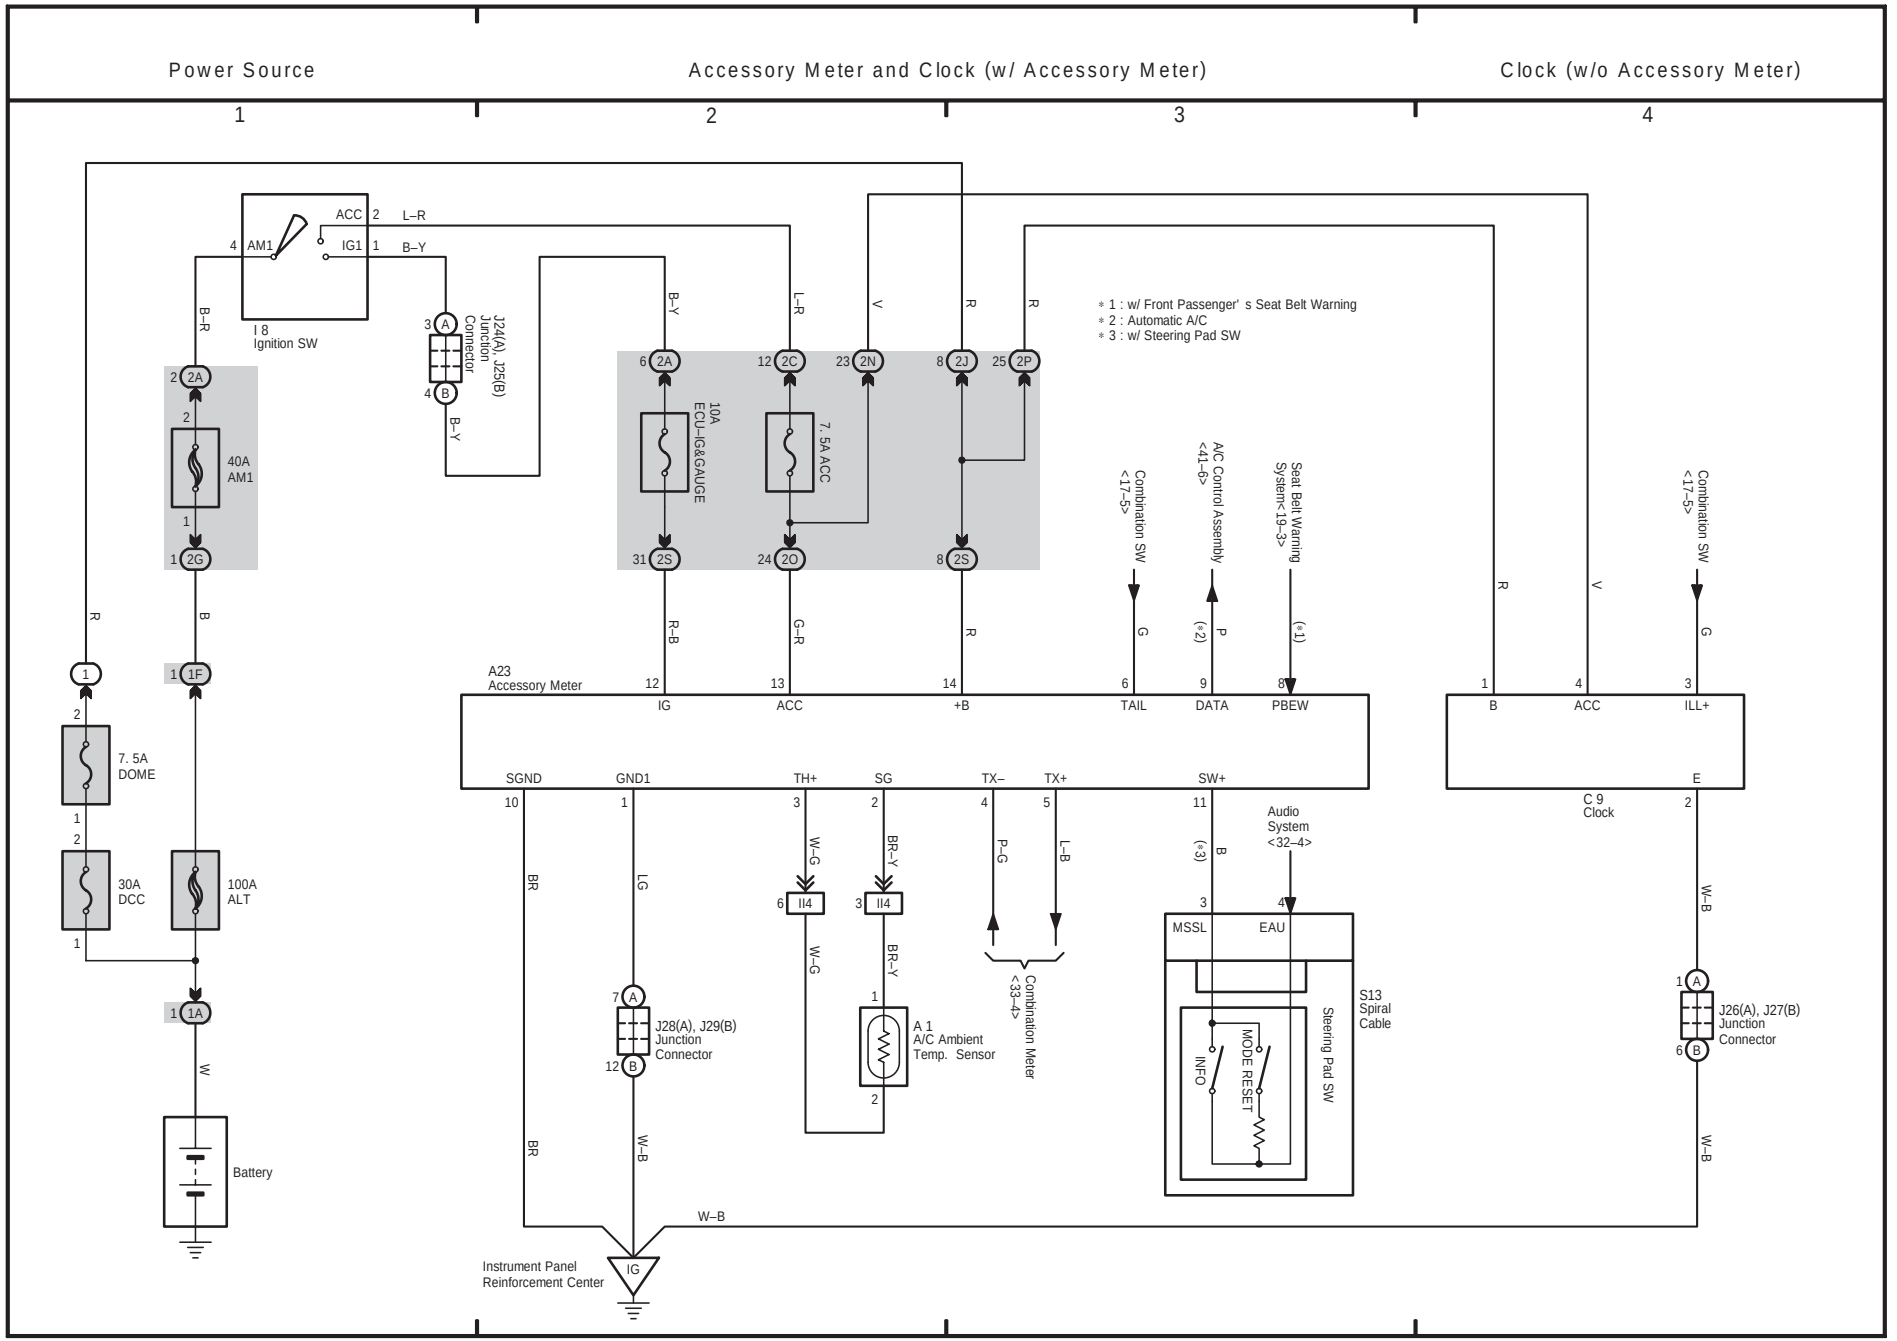

Power Source
Accessory Meter and Clock (w/ Accessory Meter)
Clock (w/o Accessory Meter)
1
2
3
4
ACC
AM1
IG1
L–R
B–Y
I 8
Ignition SW
J24(A), J25(B)
Junction
Connector
40A
AM1
10A
ECU–IG&GAUGE
7. 5A ACC
* 1 : w/ Front Passenger' s Seat Belt Warning
* 2 : Automatic A/C
* 3 : w/ Steering Pad SW
Combination SW
<17–5>
A/C Control Assembly
<41–6>
Seat Belt Warning
System< 19–3>
A23
Accessory Meter
IG
ACC
+B
TAIL
DATA
PBEW
B
ACC
ILL+
C 9
Clock
7. 5A
DOME
30A
DCC
100A
ALT
Battery
SGND
GND1
TH+
SG
TX–
TX+
SW+
Audio
System
<32–4>
MSSL
EAU
S13
Spiral
Cable
Steering Pad SW
MODE RESET
INFO
J28(A), J29(B)
Junction
Connector
A 1
A/C Ambient
Temp. Sensor
Combination Meter
<33–4>
J26(A), J27(B)
Junction
Connector
Instrument Panel
Reinforcement Center
IG