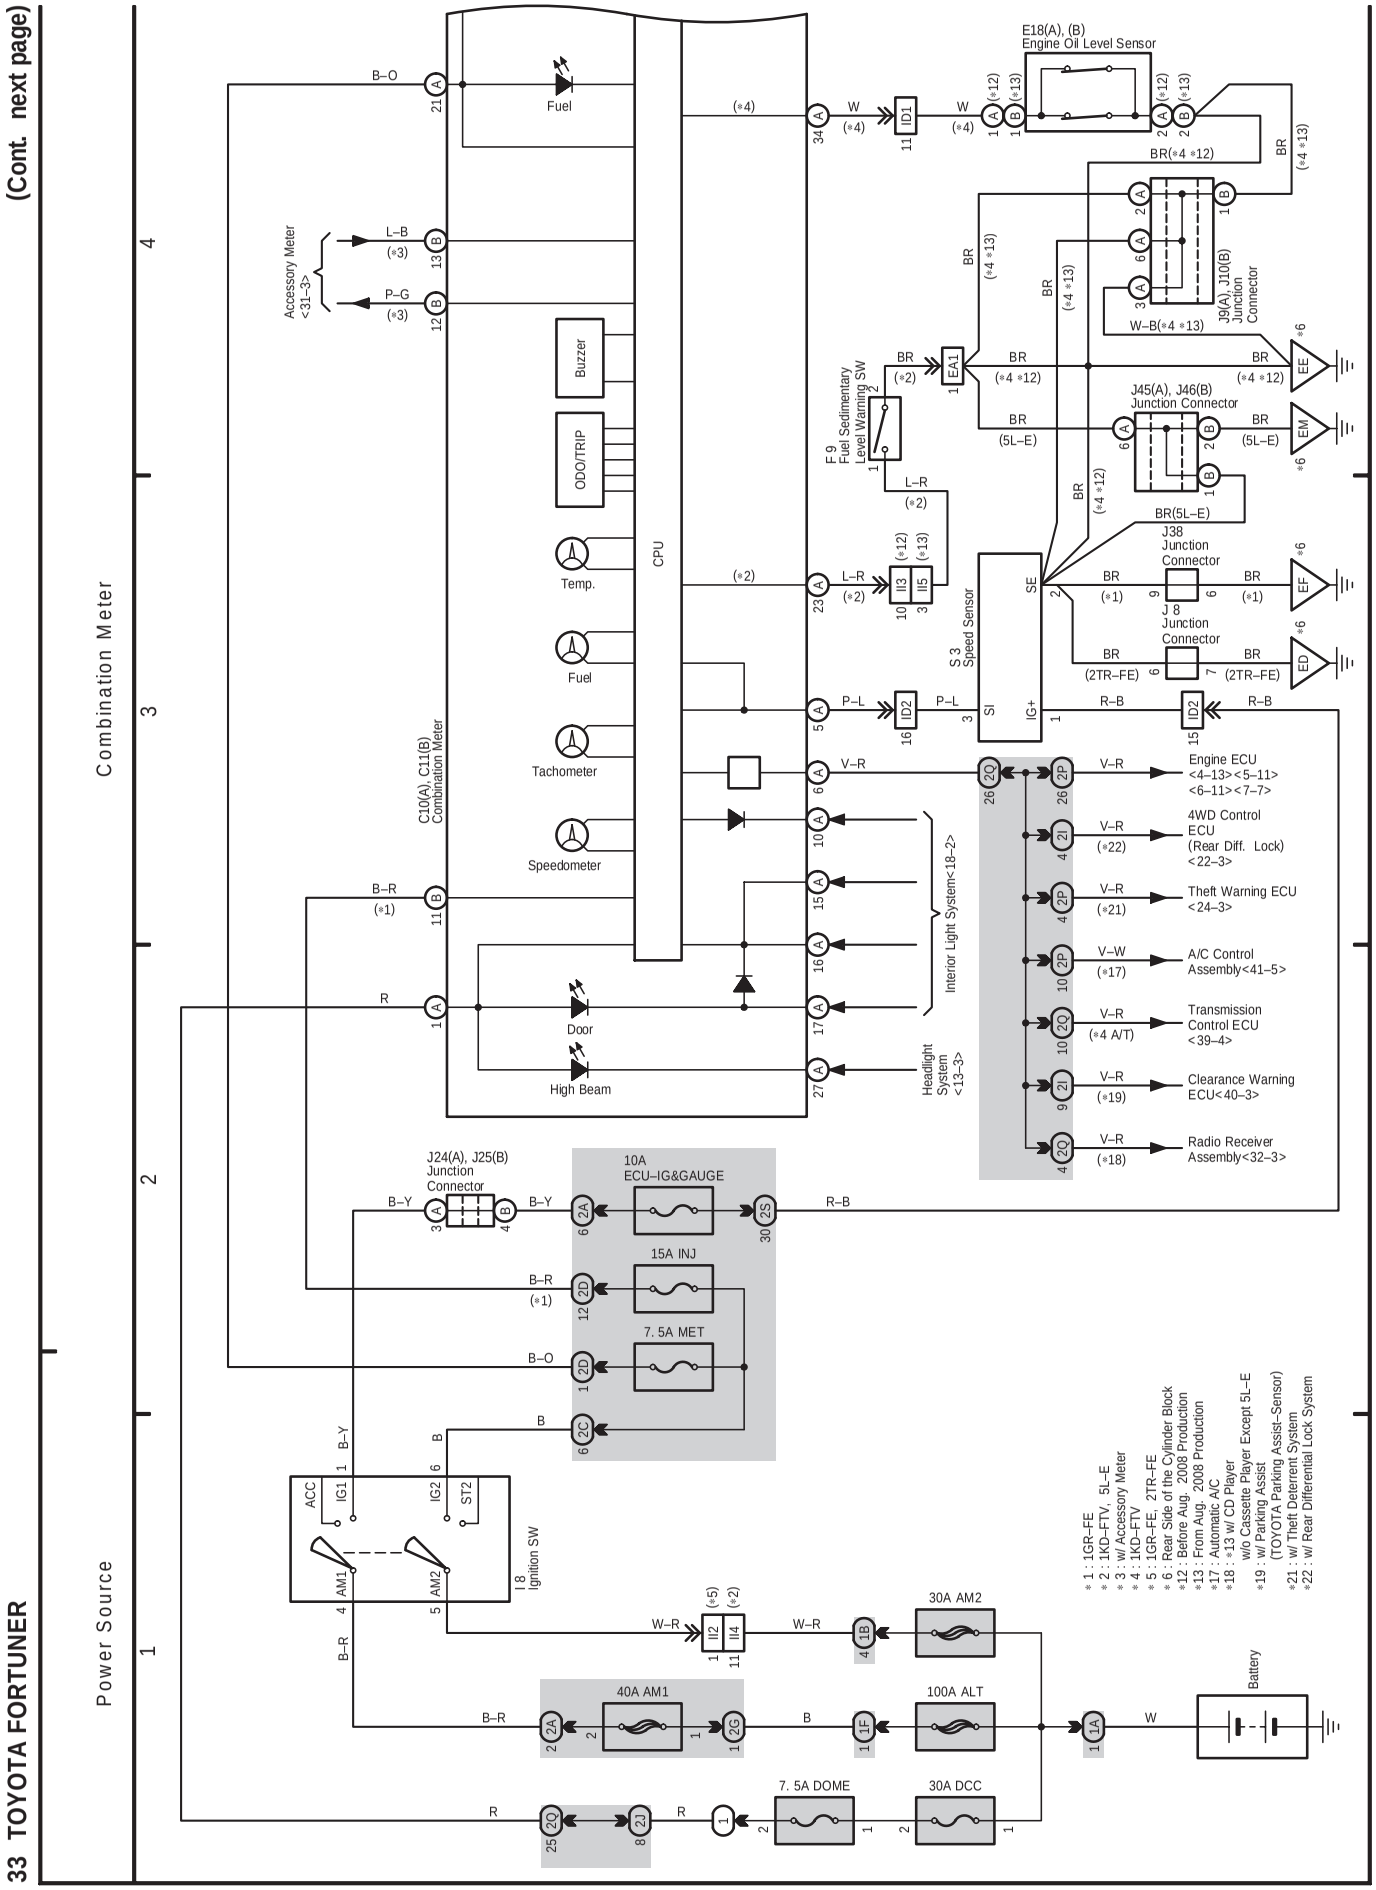
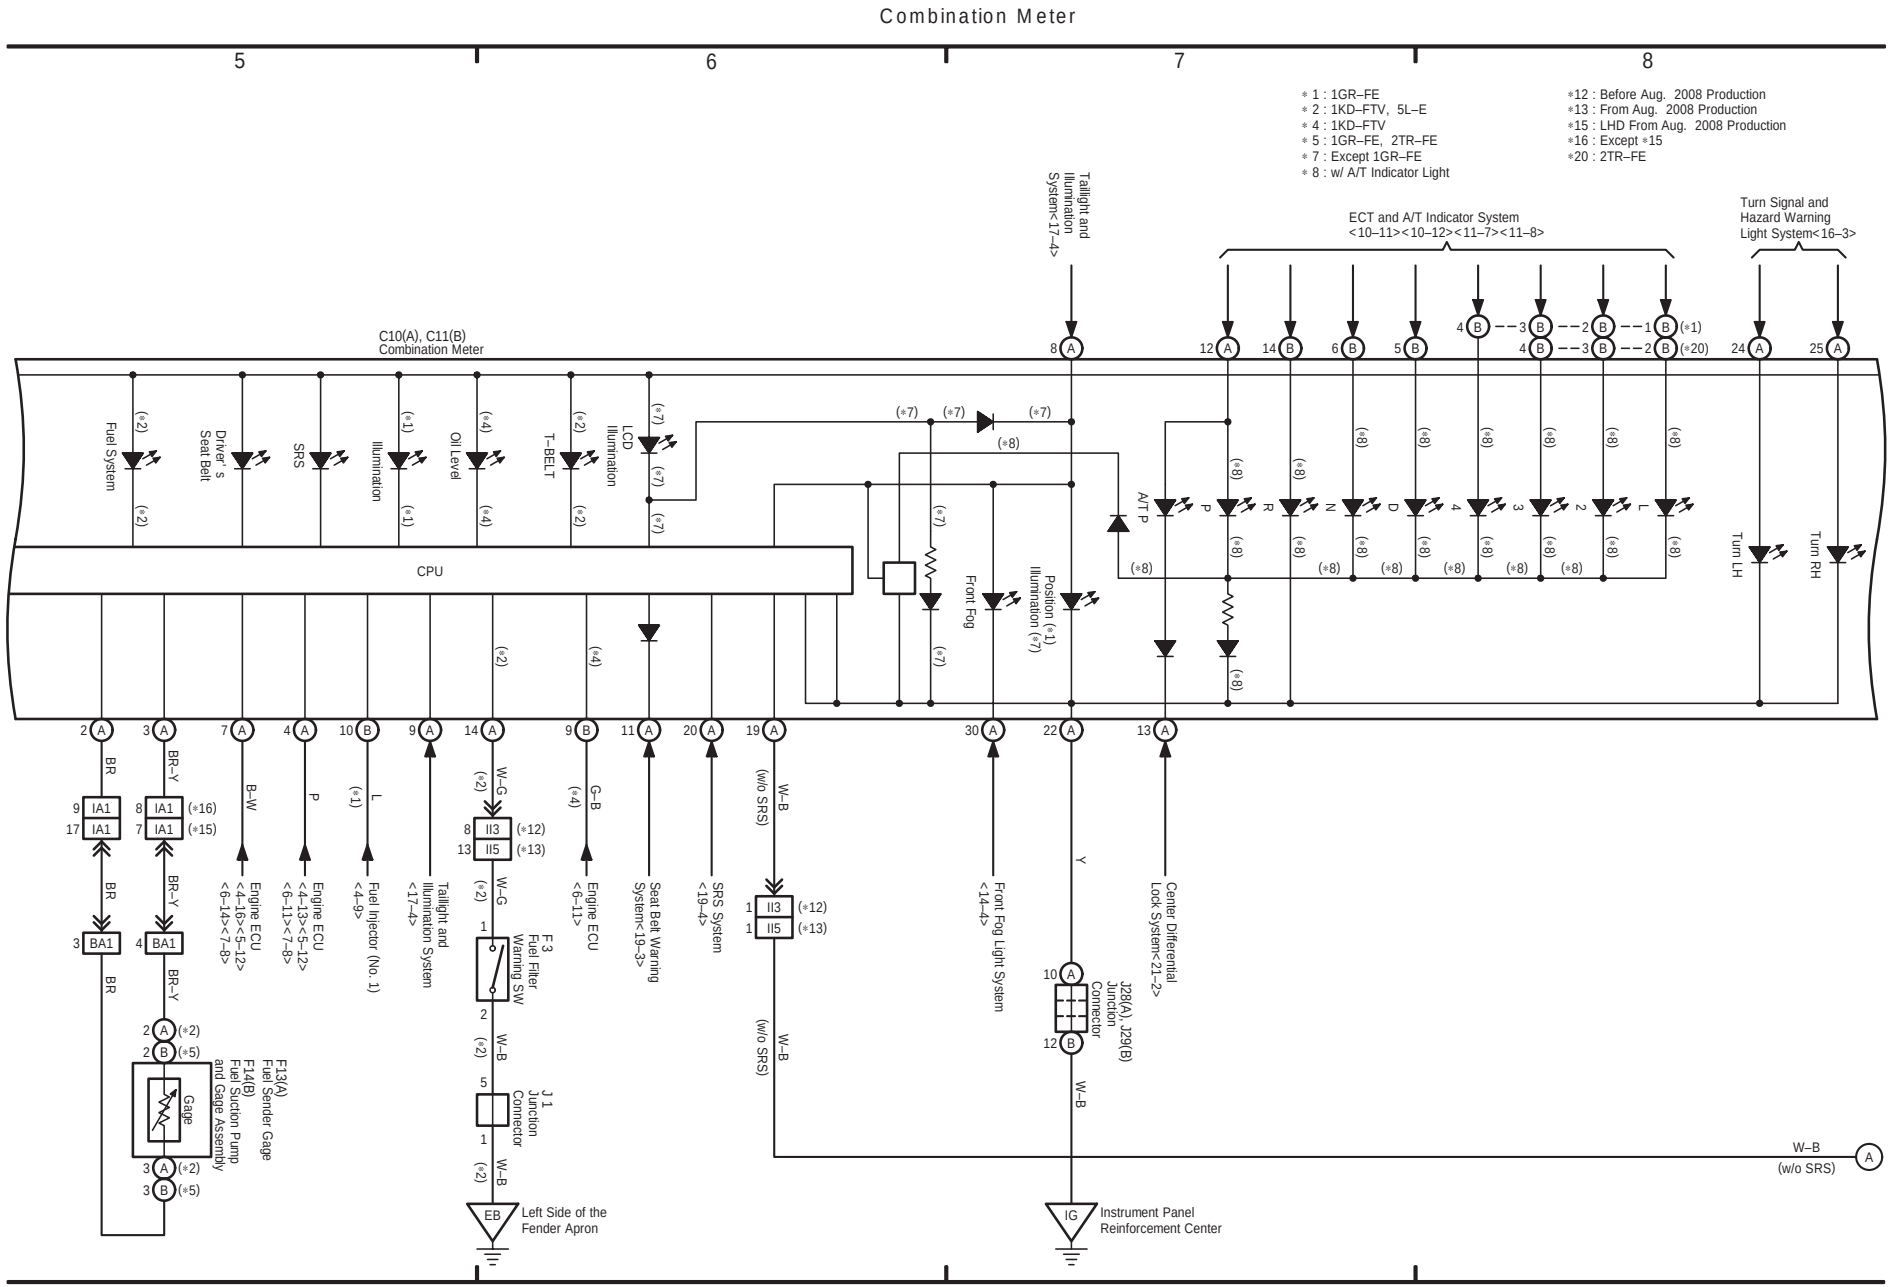
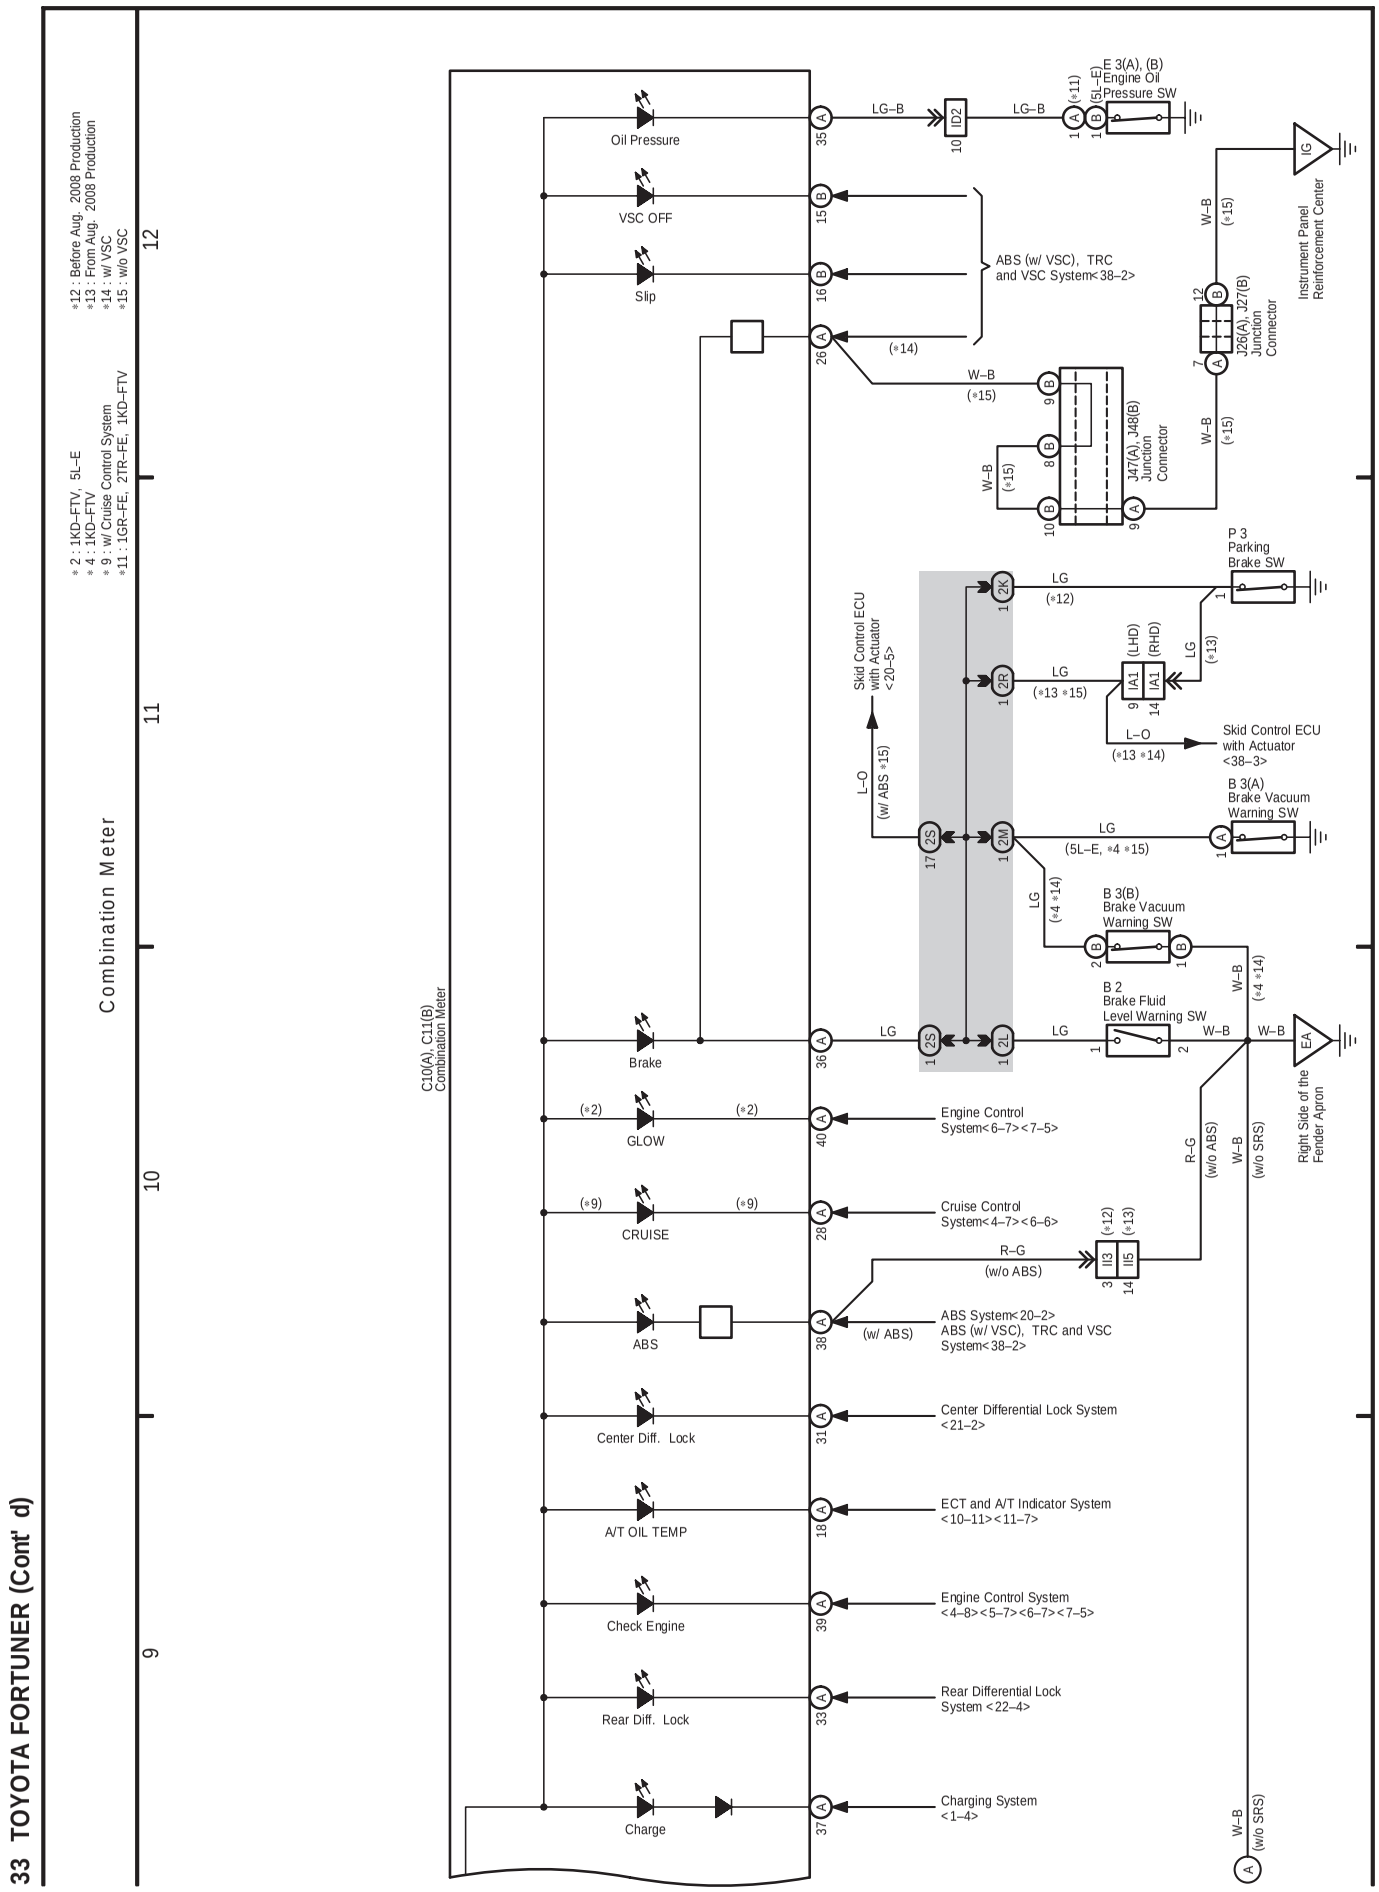

(Cont. next page)
Power Source
Combination Meter
1
2
3
4
33 TOYOTA FORTUNER
Fuel
Buzzer
ODO/TRIP
Temp.
Fuel
Tachometer
Speedometer
Door
High Beam
CPU
C10(A), C11(B) Combination Meter
Accessory Meter <31–3>
E18(A), (B) Engine Oil Level Sensor
J9(A), J10(B) Junction Connector
J45(A), J46(B) Junction Connector
J38 Junction Connector
J 8 Junction Connector
F 9 Fuel Sedimentary Level Warning SW
S 3 Speed Sensor
Interior Light System<18–2>
Headlight System <13–3>
Engine ECU <4–13><5–11><6–11><7–7>
4WD Control ECU (Rear Diff. Lock) <22–3>
Theft Warning ECU <24–3>
A/C Control Assembly<41–5>
Transmission Control ECU <39–4>
Clearance Warning ECU<40–3>
Radio Receiver Assembly<32–3>
J24(A), J25(B) Junction Connector
10A ECU–IG&GAUGE
15A INJ
7. 5A MET
I 8 Ignition SW
40A AM1
30A AM2
100A ALT
7. 5A DOME
30A DCC
Battery
* 1 : 1GR–FE
* 2 : 1KD–FTV, 5L–E
* 3 : w/ Accessory Meter
* 4 : 1KD–FTV
* 5 : 1GR–FE, 2TR–FE
* 6 : Rear Side of the Cylinder Block
*12 : Before Aug. 2008 Production
*13 : From Aug. 2008 Production
*17 : Automatic A/C
*18 : *13 w/ CD Player w/o Cassette Player Except 5L–E
*19 : w/ Parking Assist (TOYOTA Parking Assist–Sensor)
*21 : w/ Theft Deterrent System
*22 : w/ Rear Differential Lock System

(Cont. next page)




Combination Meter
C10(A), C11(B)
Combination Meter
Oil Pressure
VSC OFF
Slip
Brake
GLOW
CRUISE
ABS
Center Diff. Lock
A/T OIL TEMP
Check Engine
Rear Diff. Lock
Charge
ABS (w/ VSC), TRC and VSC System<38–2>
E 3(A), (B) Engine Oil Pressure SW
P 3 Parking Brake SW
B 3(A) Brake Vacuum Warning SW
B 3(B) Brake Vacuum Warning SW
B 2 Brake Fluid Level Warning SW
Skid Control ECU with Actuator <20–5>
Skid Control ECU with Actuator <38–3>
Instrument Panel Reinforcement Center
J26(A), J27(B) Junction Connector
J47(A), J48(B) Junction Connector
Right Side of the Fender Apron
Engine Control System<6–7><7–5>
Cruise Control System<4–7><6–6>
ABS System<20–2>
ABS (w/ VSC), TRC and VSC System<38–2>
Center Differential Lock System <21–2>
ECT and A/T Indicator System <10–11><11–7>
Engine Control System <4–8><5–7><6–7><7–5>
Rear Differential Lock System <22–4>
Charging System <1–4>
∗2 : 1KD–FTV, 5L–E
∗4 : 1KD–FTV
∗9 : w/ Cruise Control System
∗11 : 1GR–FE, 2TR–FE, 1KD–FTV
∗12 : Before Aug. 2008 Production
∗13 : From Aug. 2008 Production
∗14 : w/ VSC
∗15 : w/o VSC