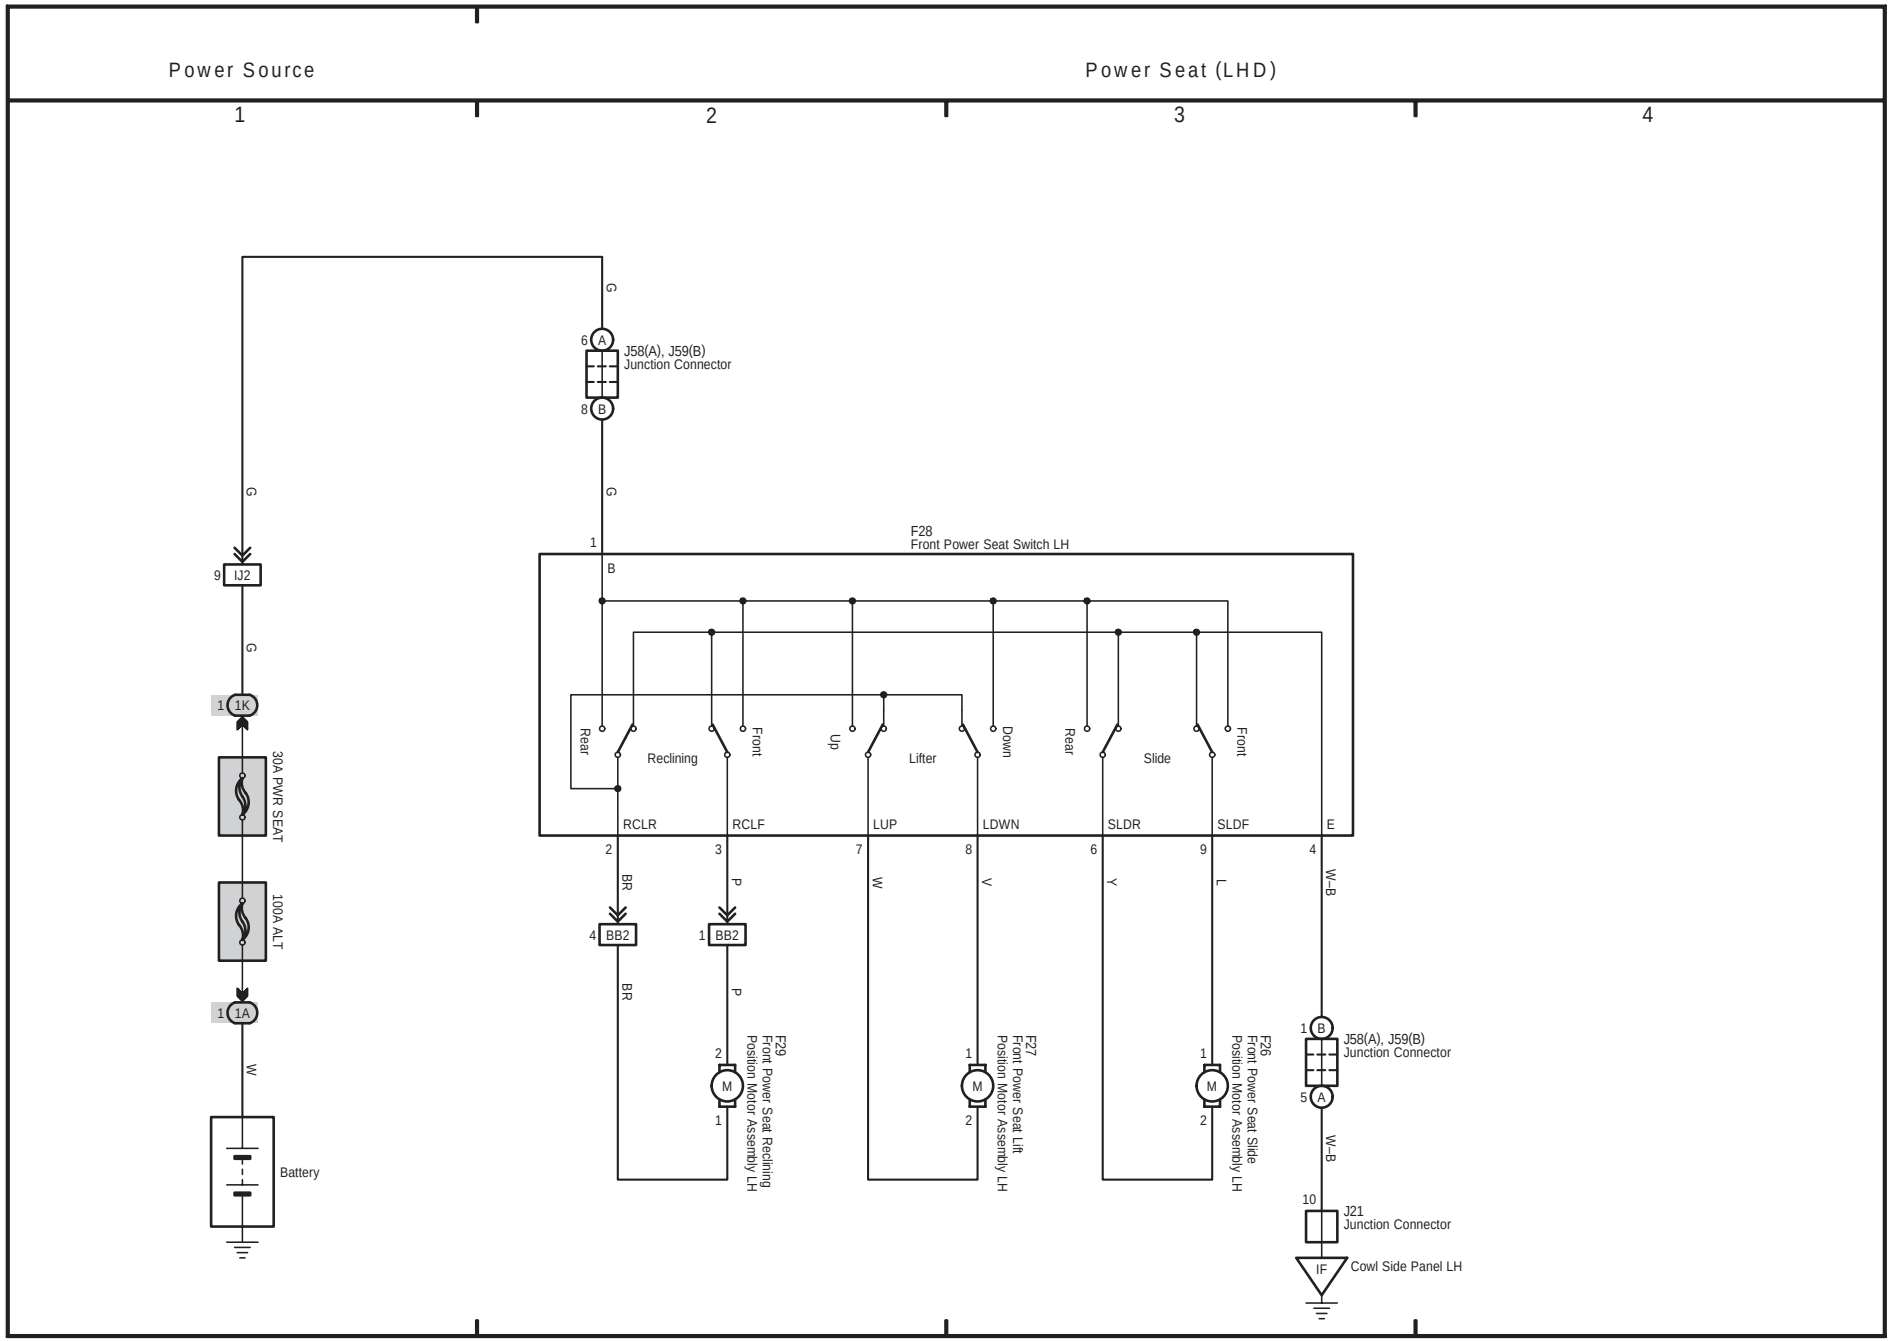

Power Source
Power Seat (LHD)
1
2
3
4
G
6 A
J58(A), J59(B)
Junction Connector
8 B
G
9 IJ2
G
1 1K
30A PWR SEAT
100A ALT
1 1A
W
Battery
F28
Front Power Seat Switch LH
1
B
Rear
Reclining
Front
Up
Lifter
Down
Rear
Slide
Front
RCLR
RCLF
LUP
LDWN
SLDR
SLDF
E
2
3
7
8
6
9
4
BR
P
W
V
Y
L
W–B
4 BB2
1 BB2
BR
P
2
M
1
F29
Front Power Seat Reclining
Position Motor Assembly LH
1
M
2
F27
Front Power Seat Lift
Position Motor Assembly LH
1
M
2
F26
Front Power Seat Slide
Position Motor Assembly LH
1 B
J58(A), J59(B)
Junction Connector
5 A
W–B
10
J21
Junction Connector
IF
Cowl Side Panel LH