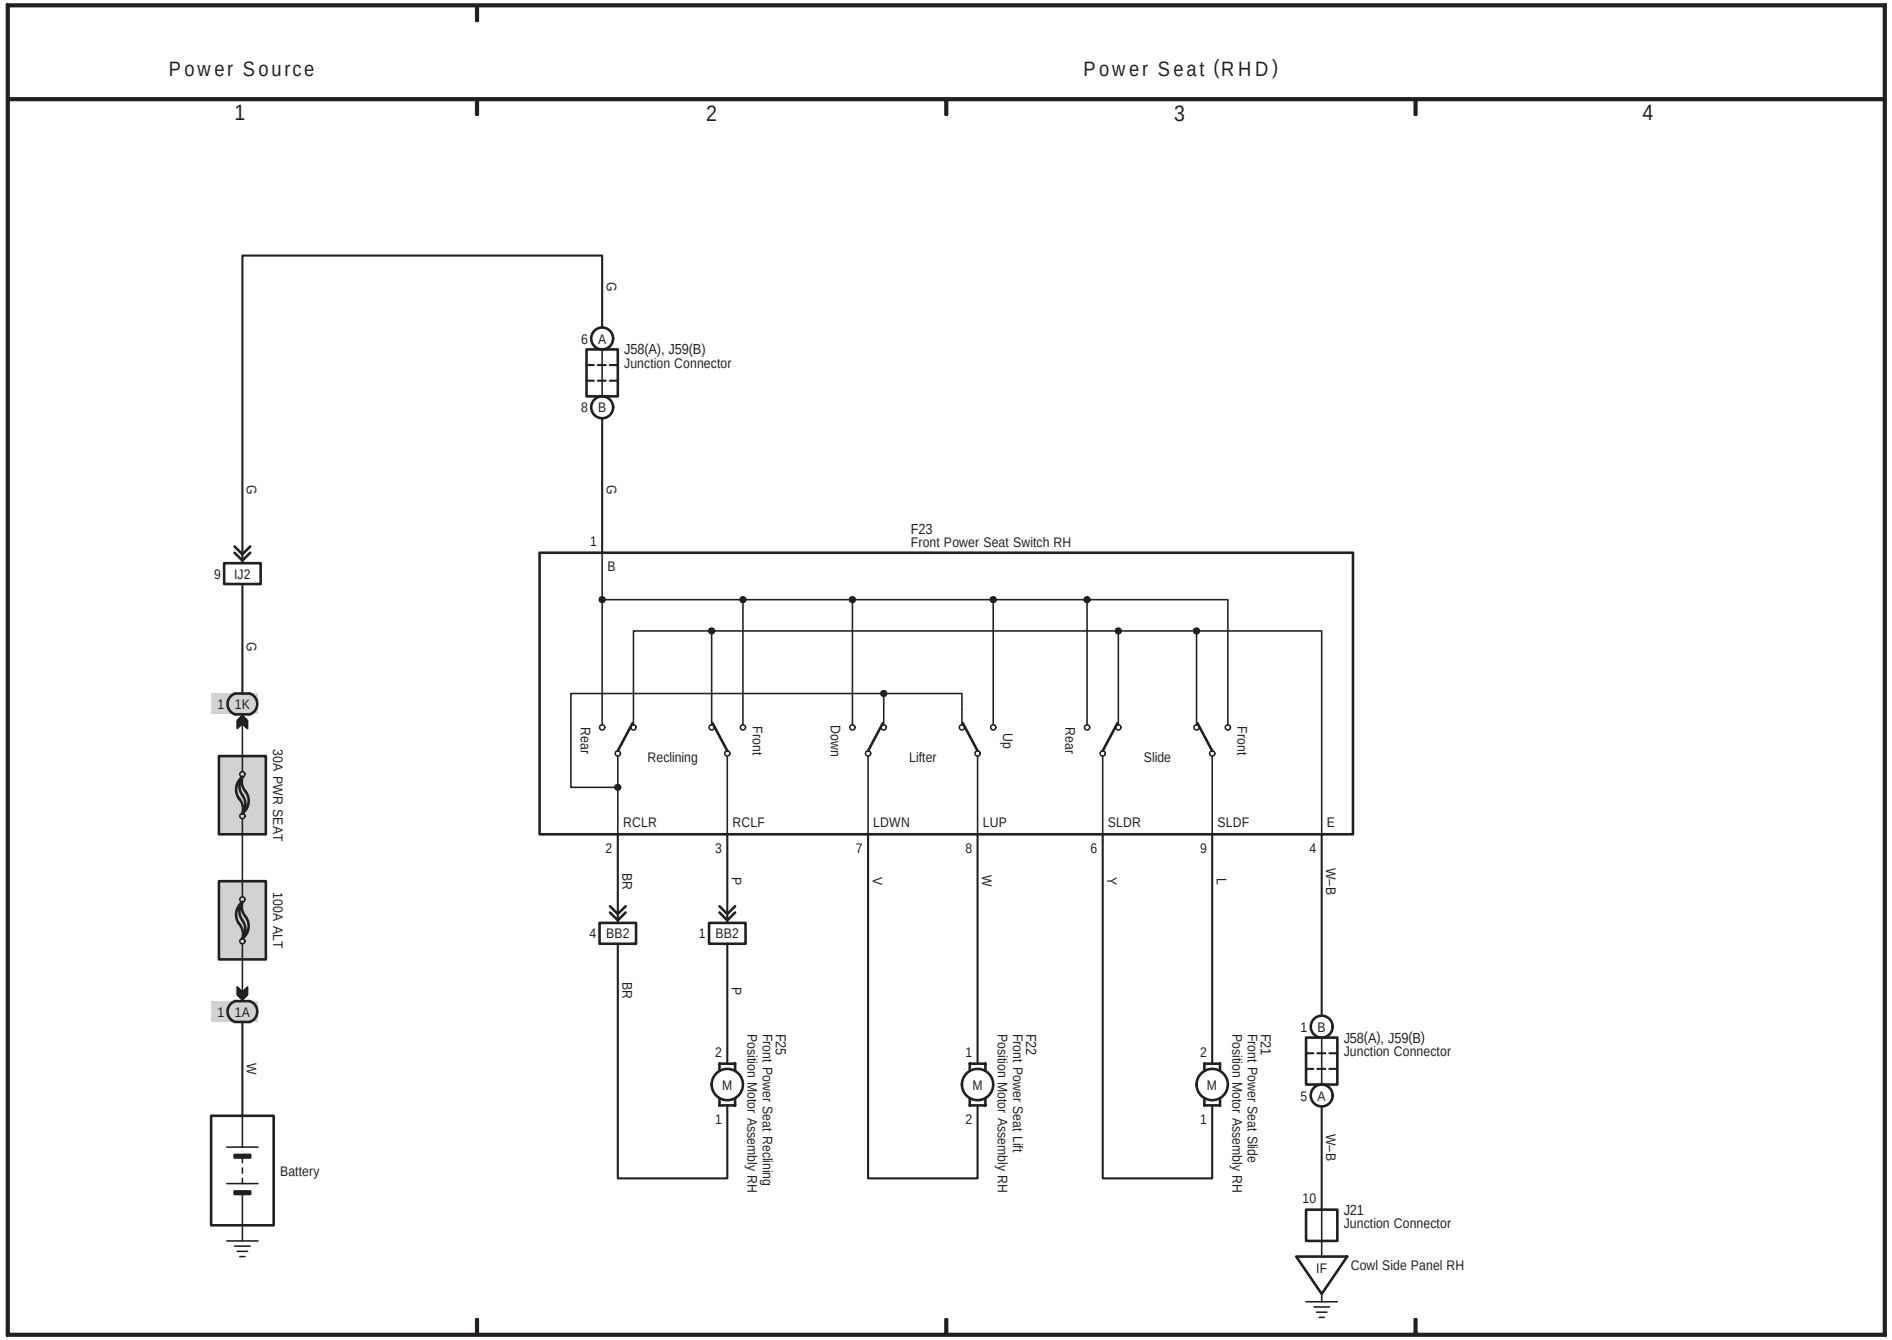

Power Source
Power Seat (RHD)
1
2
3
4
G
6 A
J58(A), J59(B)
Junction Connector
8 B
G
F23
Front Power Seat Switch RH
1
B
9 IJ2
G
1 1K
30A PWR SEAT
100A ALT
1 1A
W
Battery
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
RCLR
RCLF
LDWN
LUP
SLDR
SLDF
E
2
3
7
8
6
9
4
BR
P
V
W
Y
L
W-B
4 BB2
1 BB2
BR
P
2
M
1
F25
Front Power Seat Reclining
Position Motor Assembly RH
1
M
2
F22
Front Power Seat Lift
Position Motor Assembly RH
2
M
1
F21
Front Power Seat Slide
Position Motor Assembly RH
1 B
J58(A), J59(B)
Junction Connector
5 A
W-B
10
J21
Junction Connector
IF
Cowl Side Panel RH