

(Cont. next page)

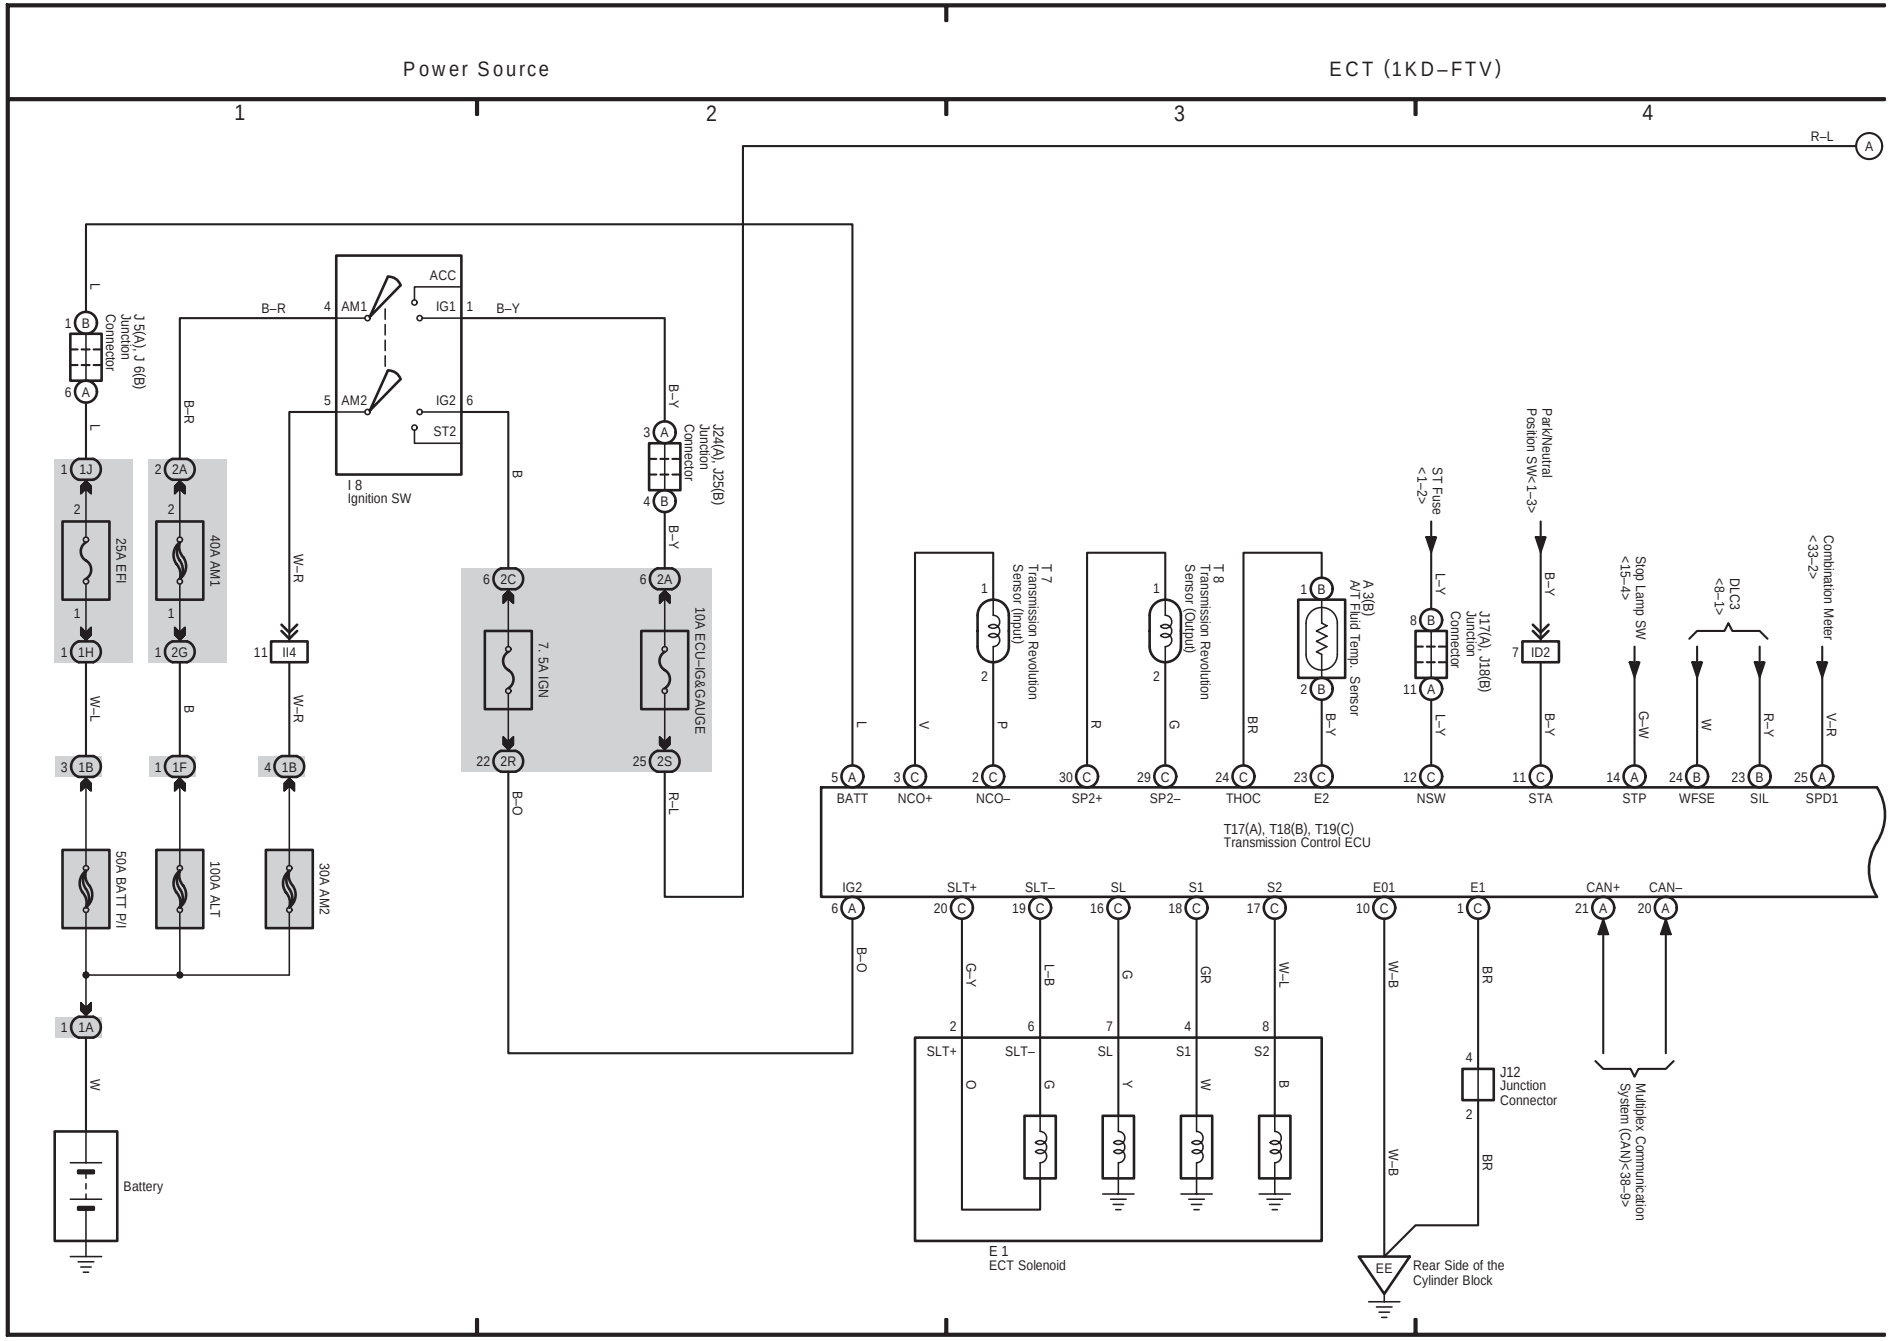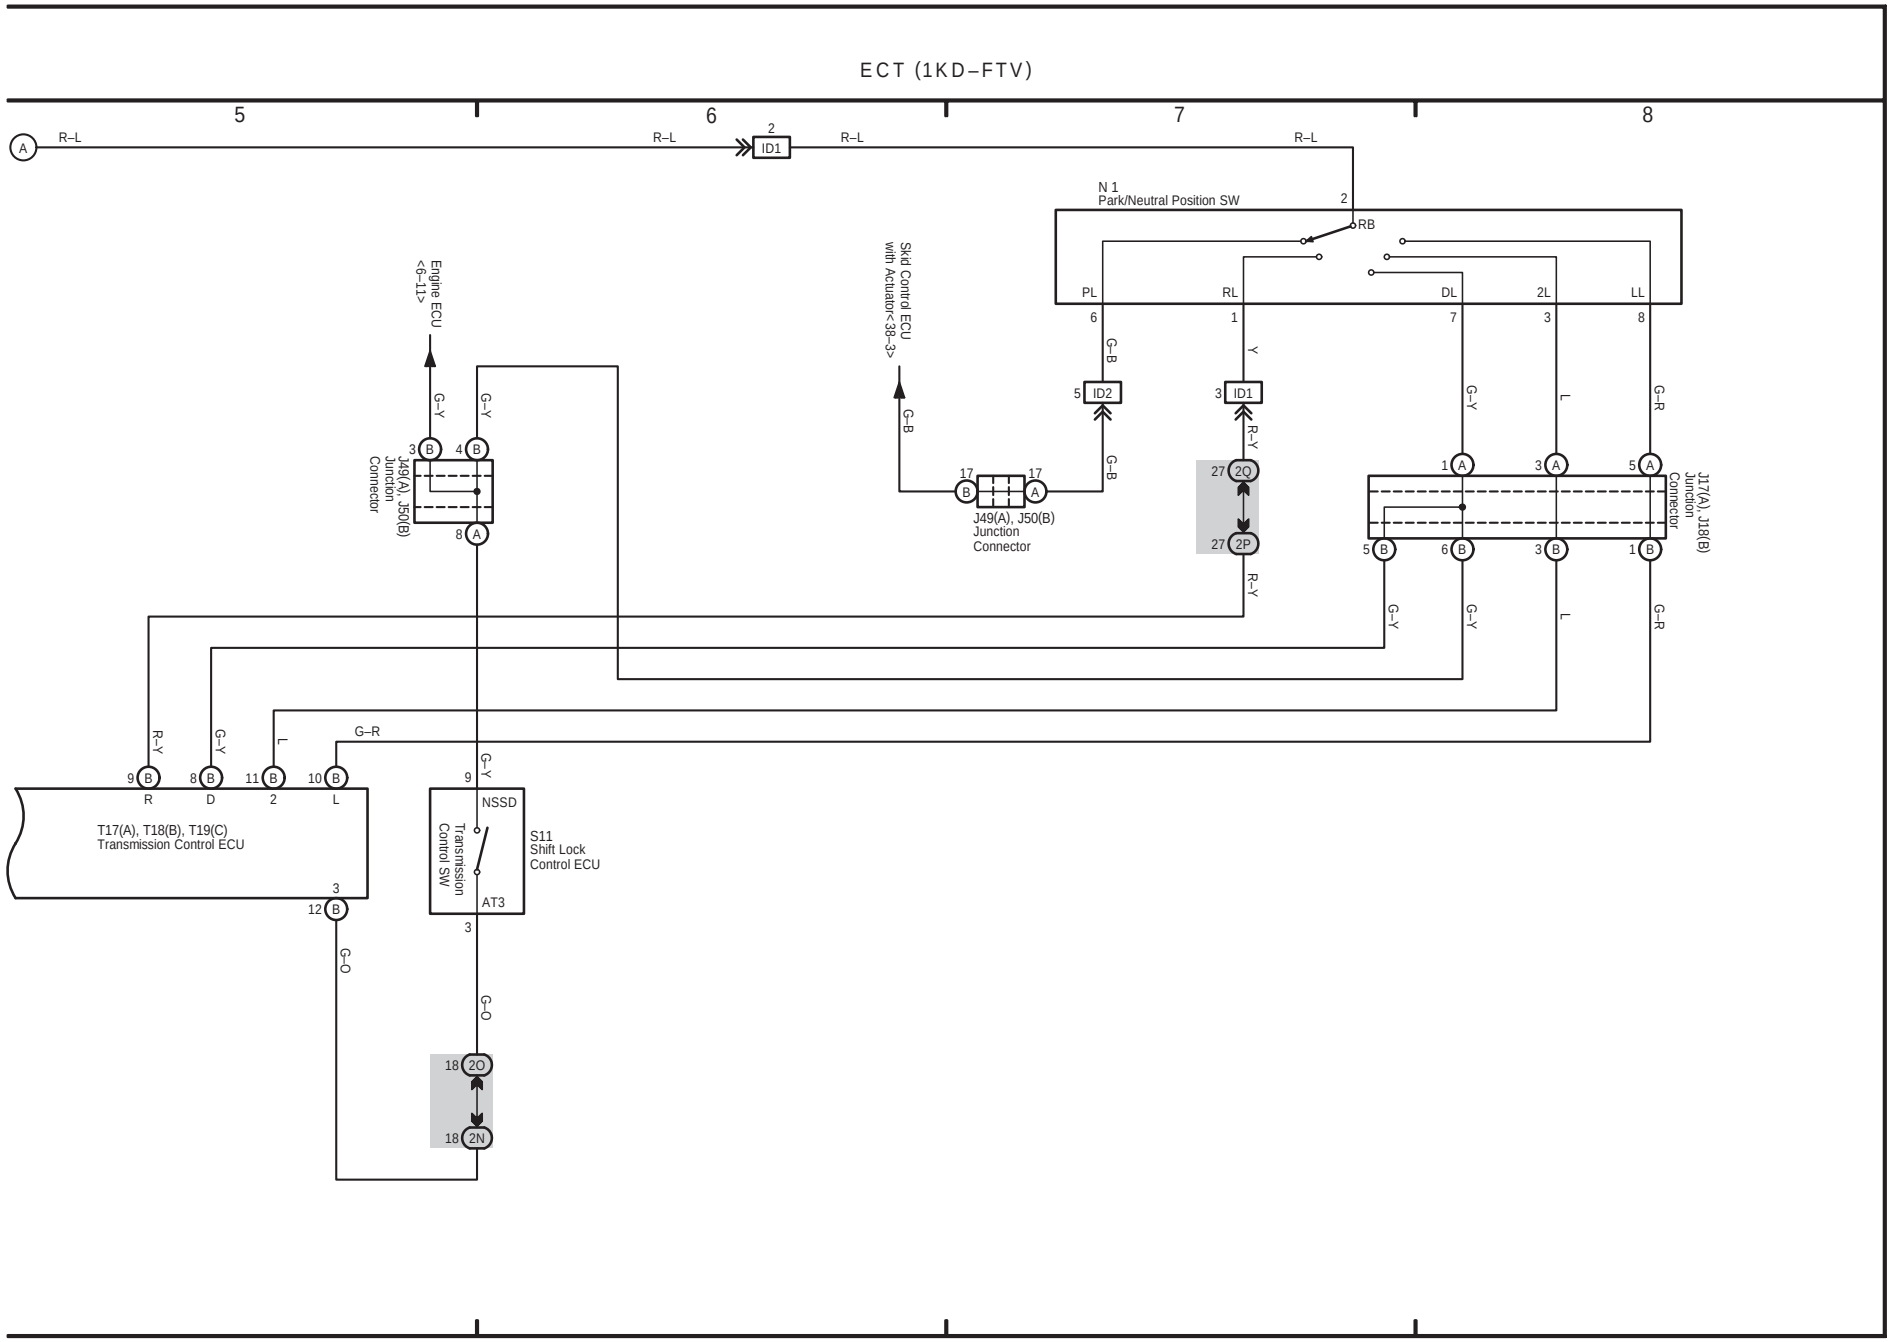


ECT (1KD–FTV)
5
6
7
8
A
R–L
ID1
N 1
Park/Neutral Position SW
RB
PL
RL
DL
2L
LL
Engine ECU
<6–11>
Skid Control ECU
with Actuator<38–3>
J49(A), J50(B)
Junction
Connector
J17(A), J18(B)
Junction
Connector
ID2
G–B
G–Y
R–Y
L
G–R
2Q
2P
T17(A), T18(B), T19(C)
Transmission Control ECU
R
D
2
L
NSSD
Transmission
Control SW
S11
Shift Lock
Control ECU
AT3
G–O
2O
2N