

(Cont. next page)

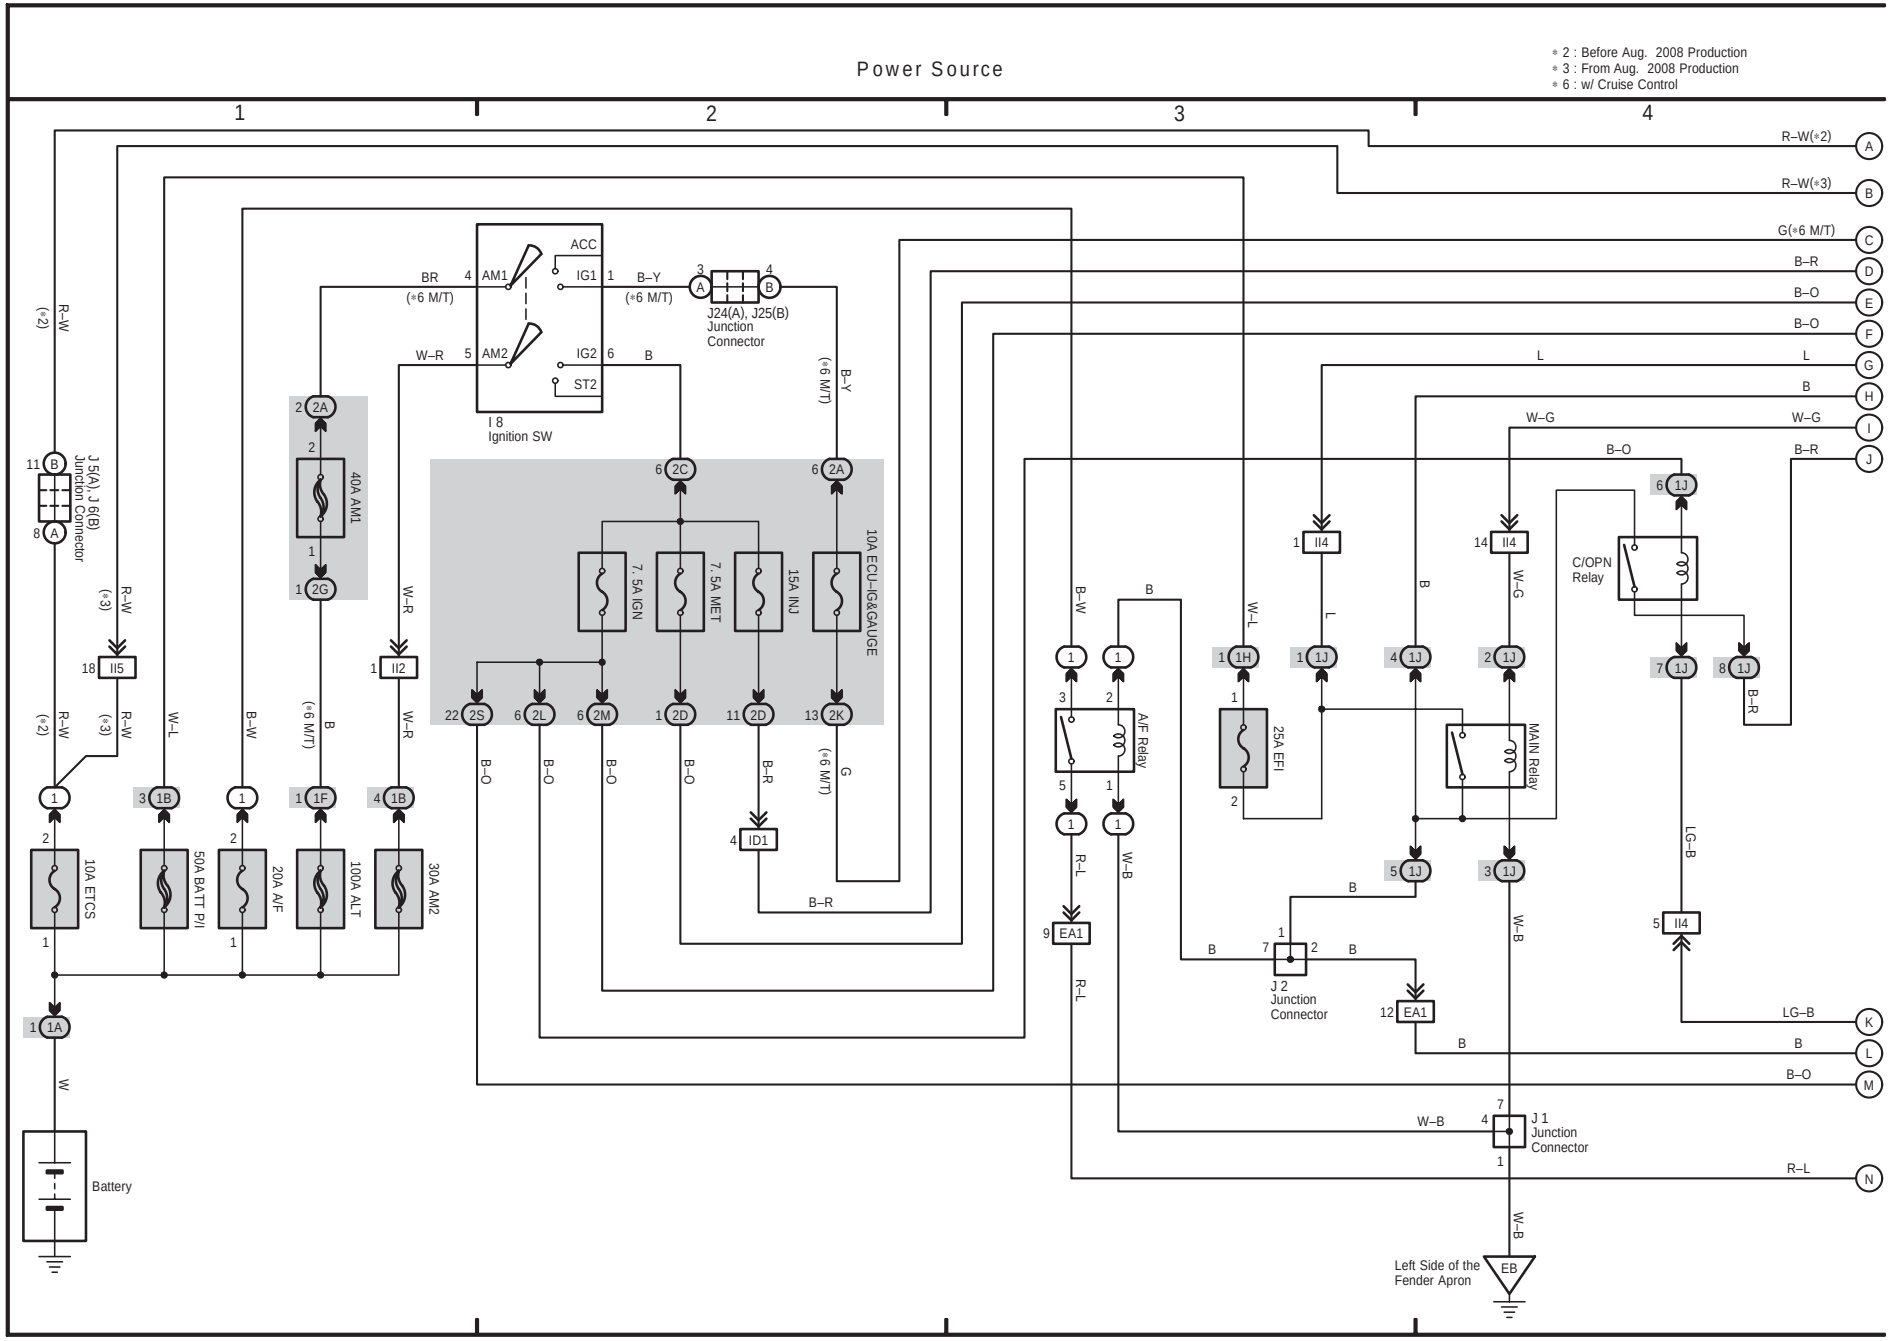

(Cont. next page)

Cruise Control (1GR–FE)


∗ 2 : Before Aug. 2008 Production
∗ 3 : From Aug. 2008 Production
∗ 6 : w/ Cruise Control

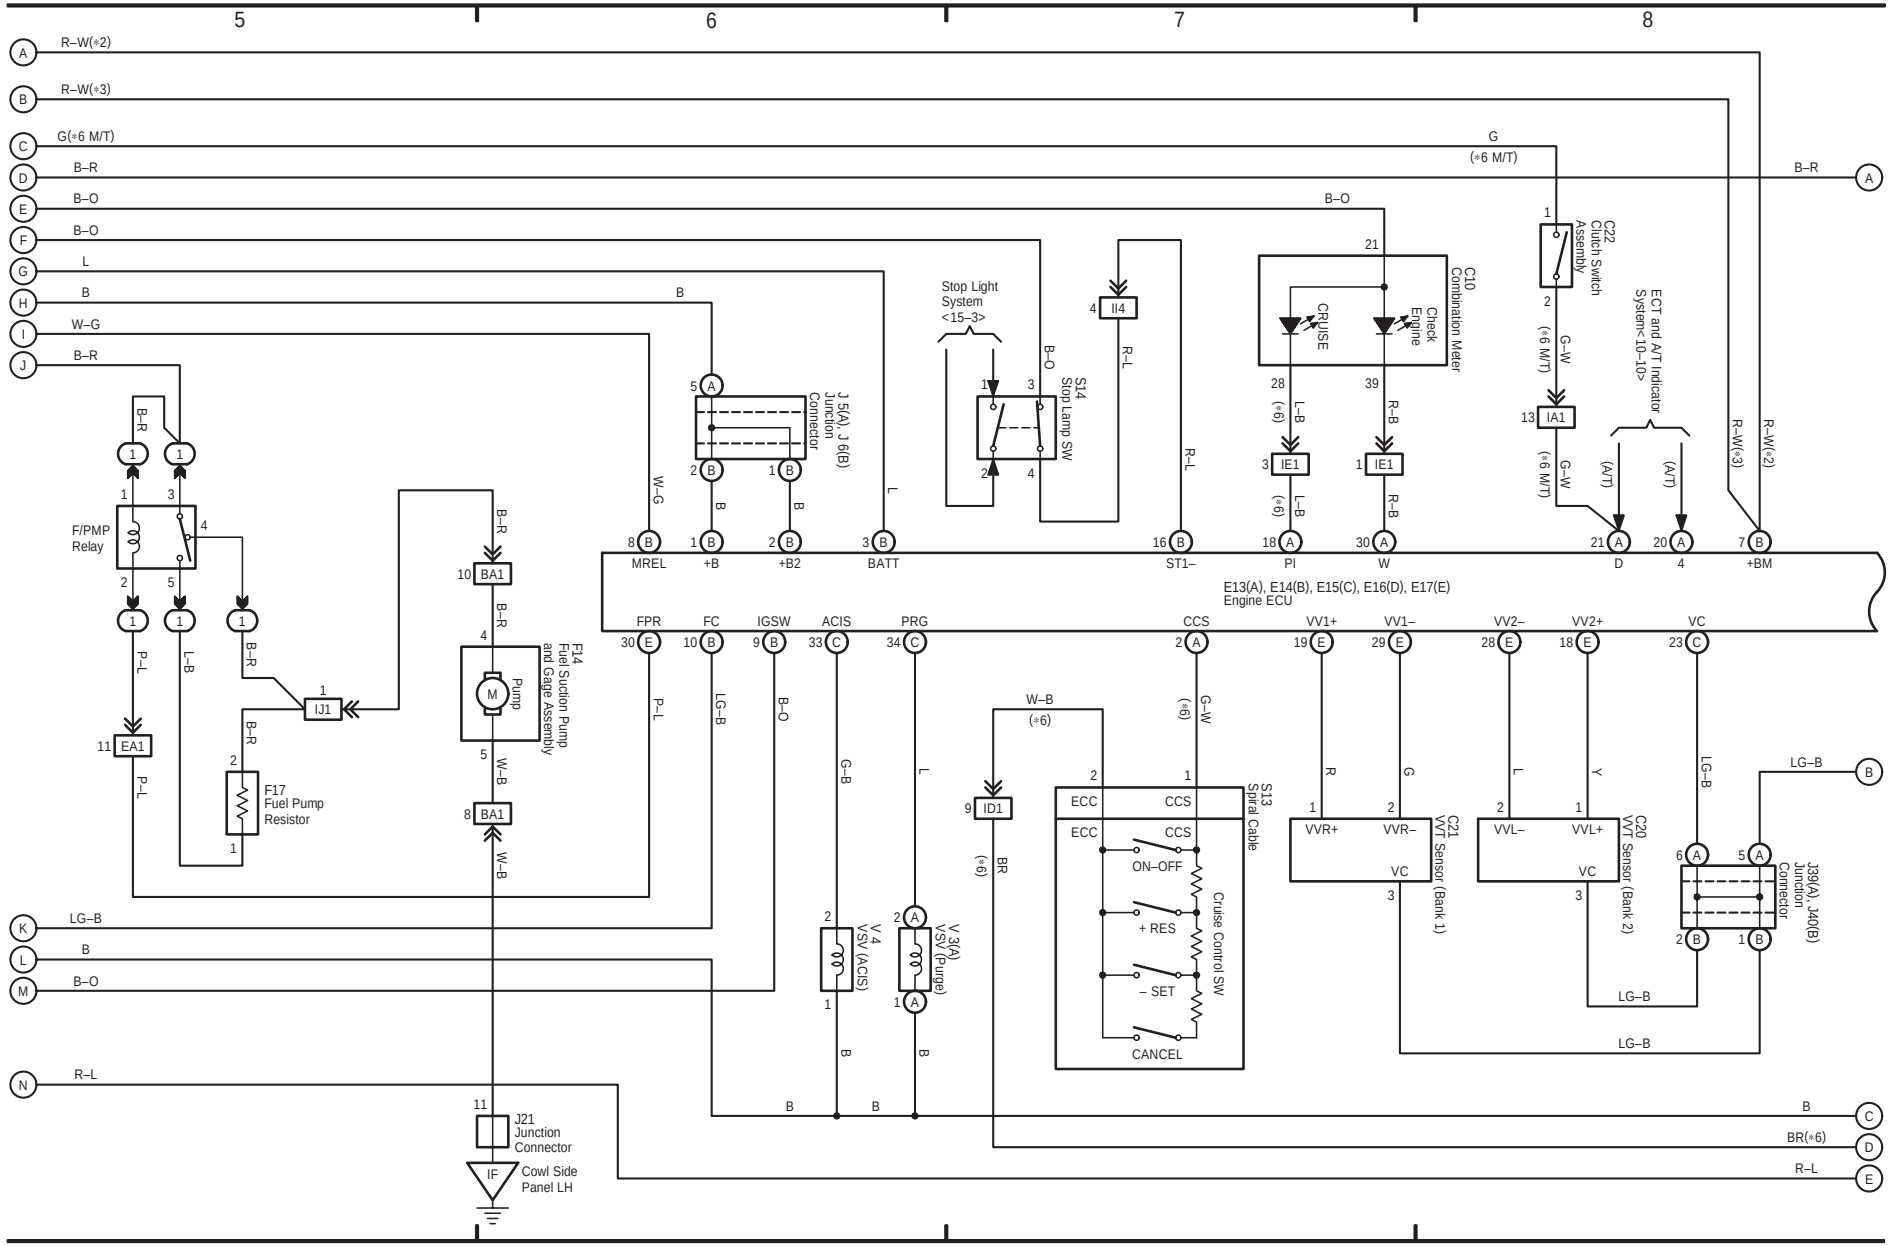


(Cont. next page)

Engine Control (1GR–FE)

* 6 : w/ Cruise Control

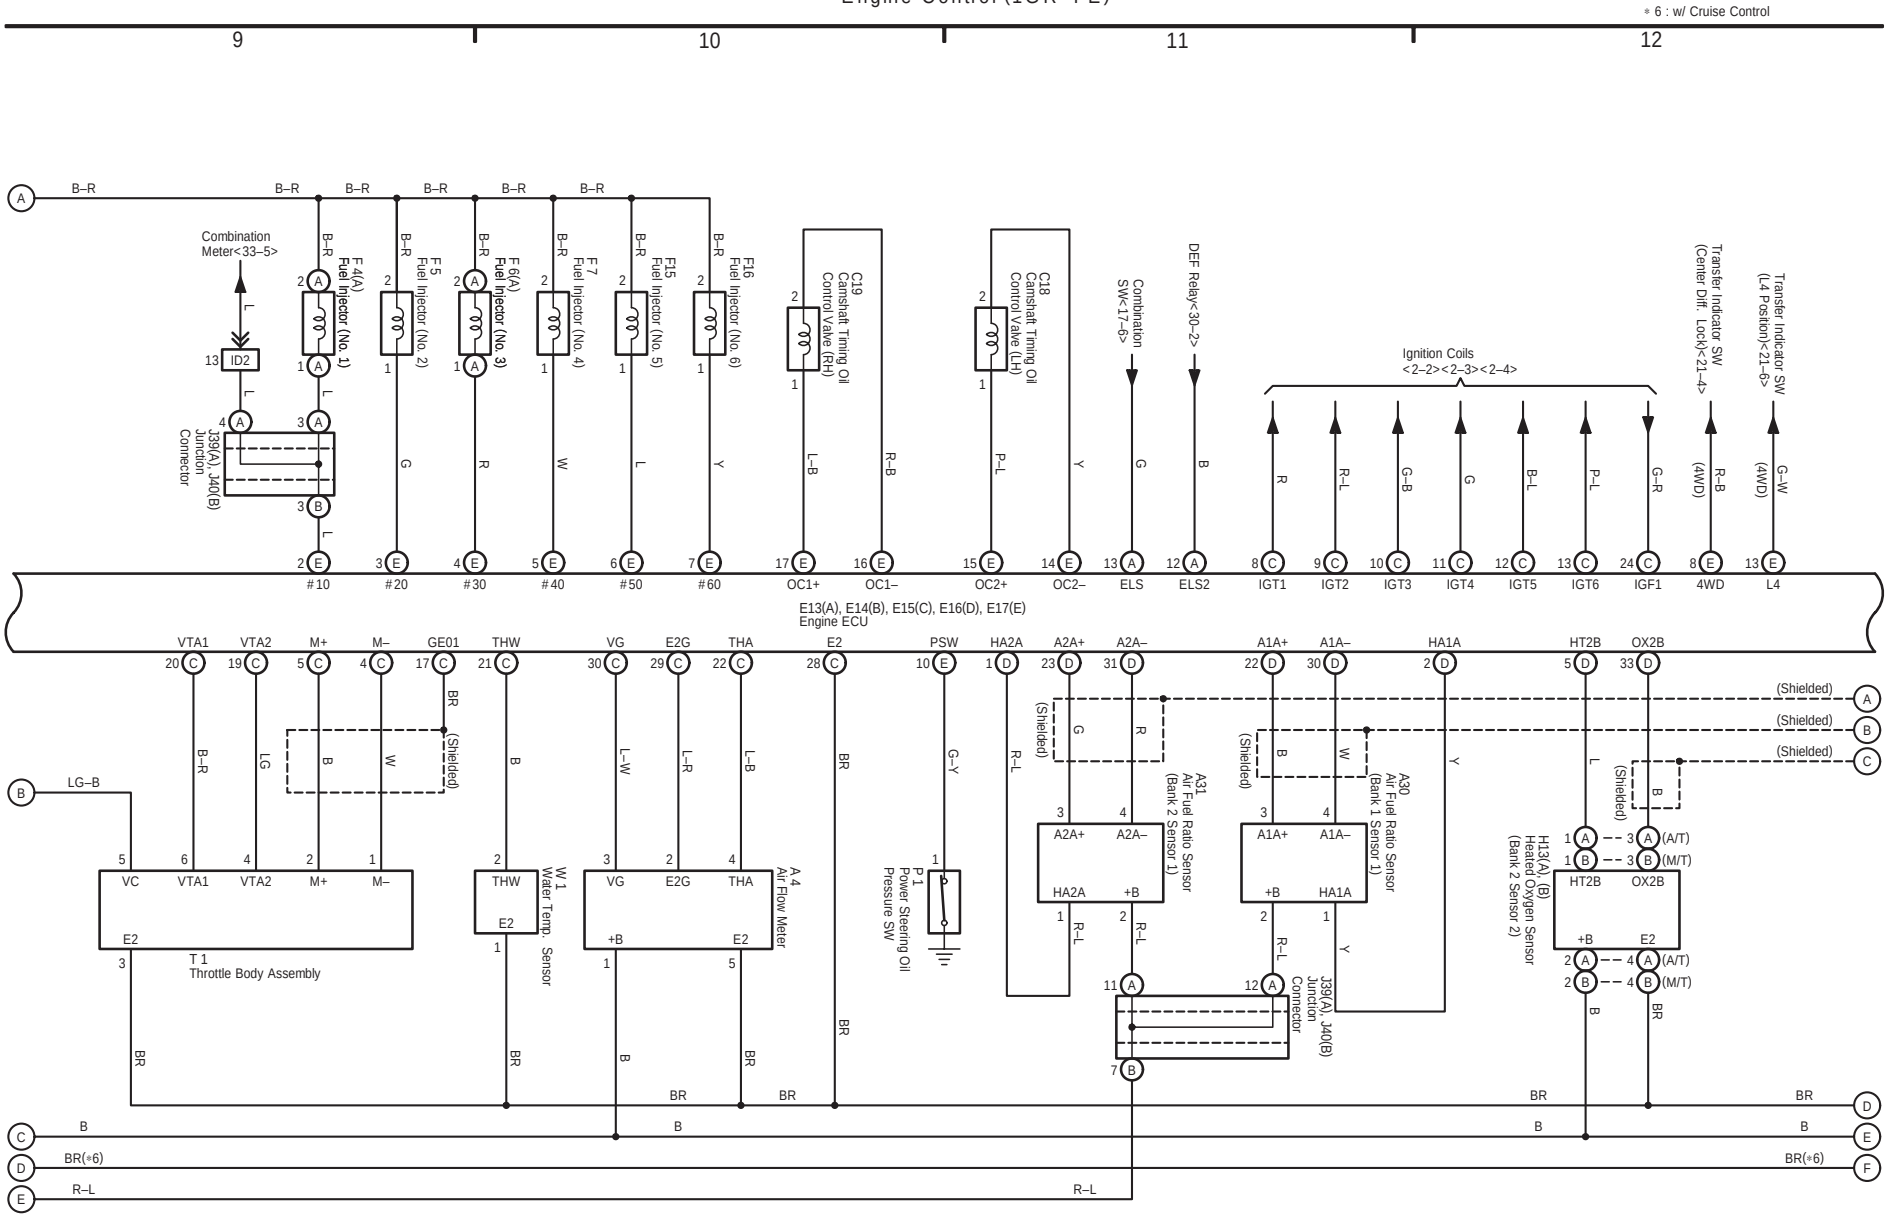

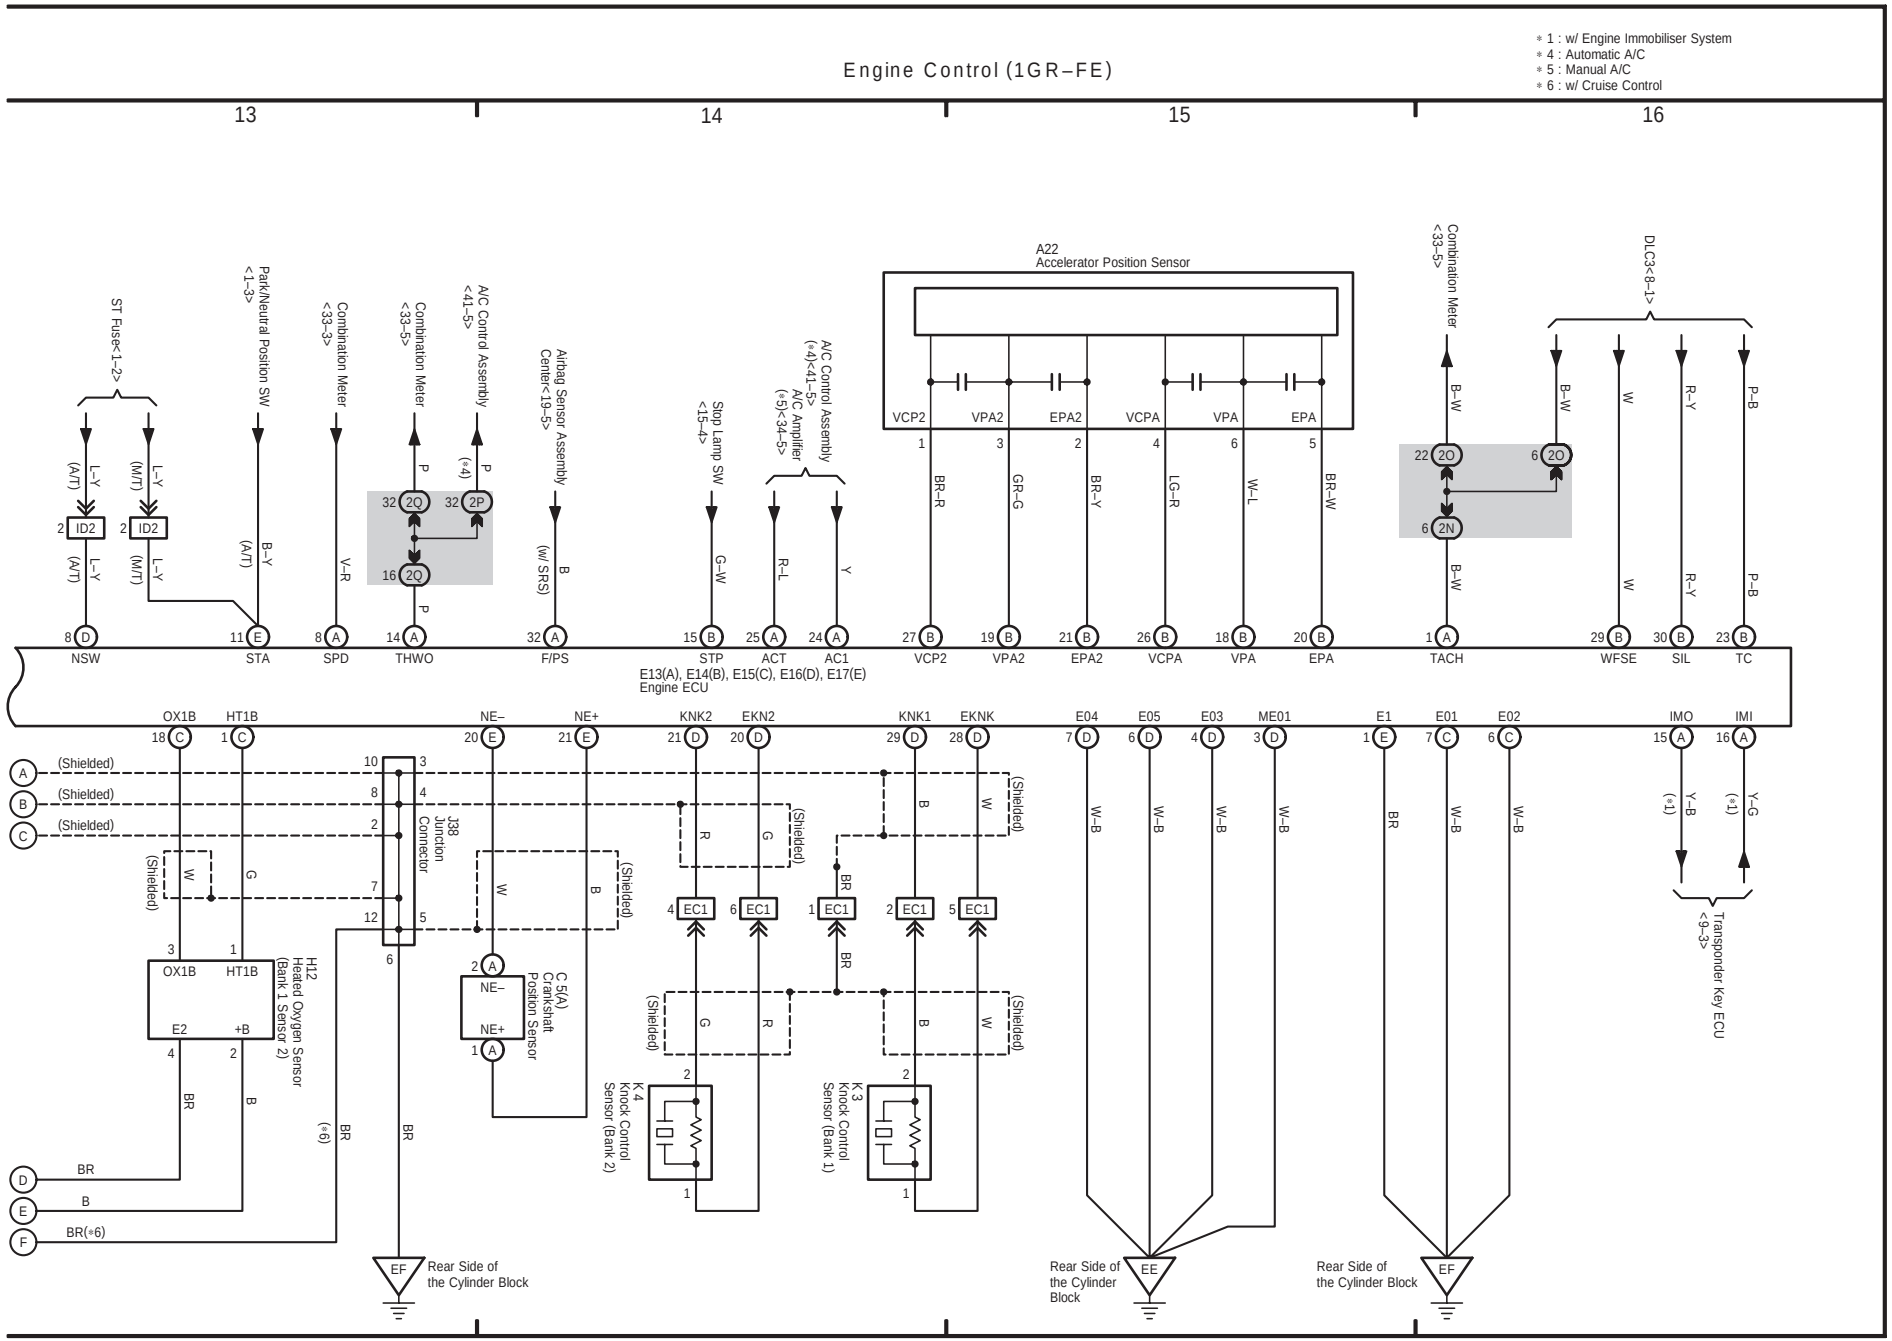
Engine Control (1GR–FE)
* 1 : w/ Engine Immobiliser System
* 4 : Automatic A/C
* 5 : Manual A/C
* 6 : w/ Cruise Control
13
14
15
16
ST Fuse<1–2>
Park/Neutral Position SW <1–3>
Combination Meter <33–3>
Combination Meter <33–5>
A/C Control Assembly <41–5>
Airbag Sensor Assembly Center<19–5>
Stop Lamp SW <15–4>
A/C Control Assembly (*4)<41–5> A/C Amplifier (*5)<34–5>
A22 Accelerator Position Sensor
VCP2 VPA2 EPA2 VCPA VPA EPA
Combination Meter <33–5>
DLC3<8–1>
NSW STA SPD THWO F/PS STP ACT AC1 VCP2 VPA2 EPA2 VCPA VPA EPA TACH WFSE SIL TC
E13(A), E14(B), E15(C), E16(D), E17(E) Engine ECU
OX1B HT1B NE– NE+ KNK2 EKN2 KNK1 EKNK E04 E05 E03 ME01 E1 E01 E02 IMO IMI
(Shielded)
J38 Junction Connector
H12 Heated Oxygen Sensor (Bank 1 Sensor 2)
C 5(A) Crankshaft Position Sensor
K 4 Knock Control Sensor (Bank 2)
K 3 Knock Control Sensor (Bank 1)
Transponder Key ECU <9–3>
Rear Side of the Cylinder Block
EF
EE