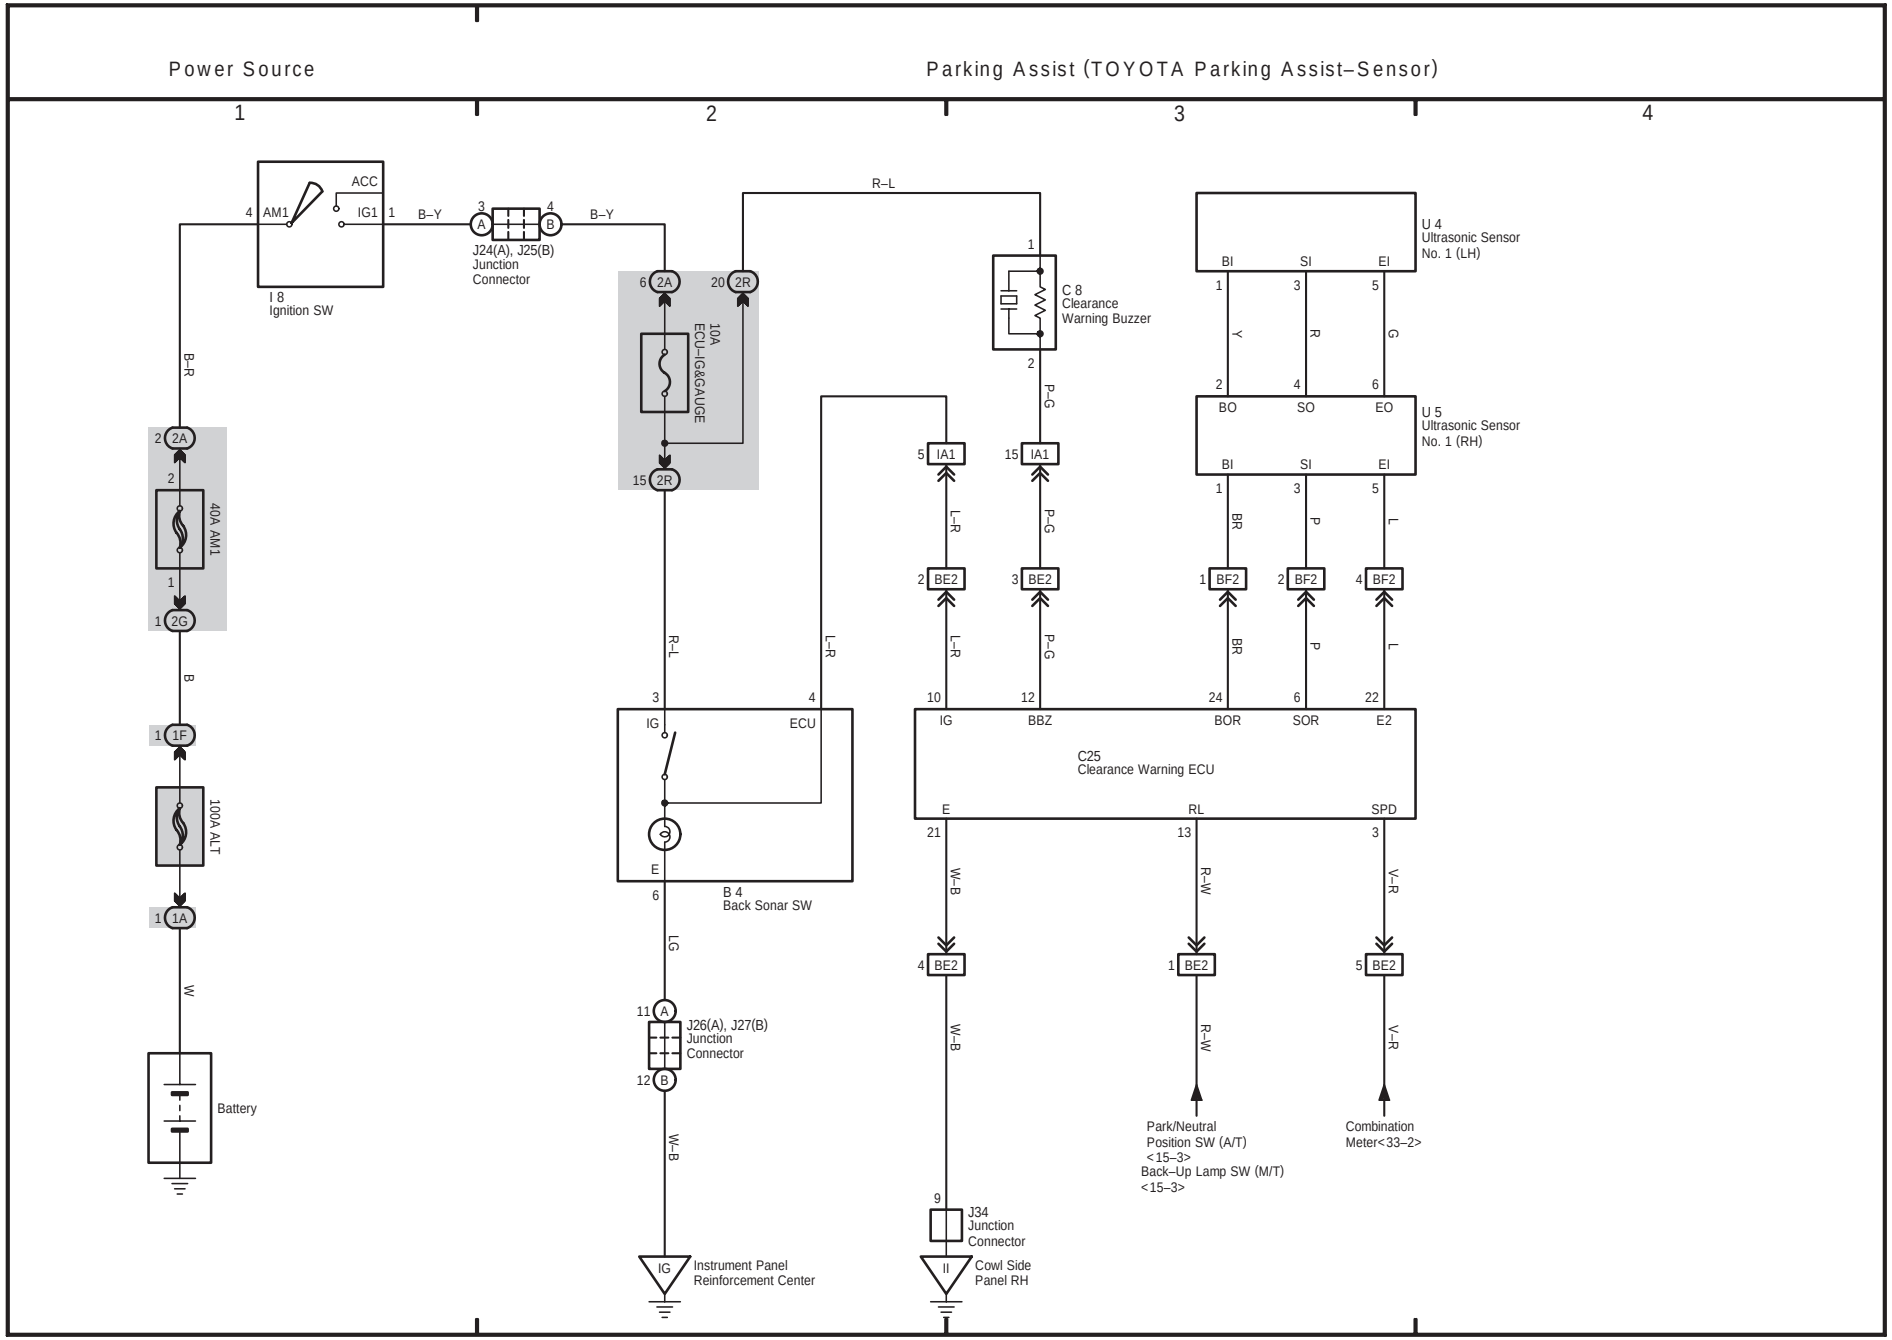

Power Source
Parking Assist (TOYOTA Parking Assist–Sensor)
1
2
3
4
ACC
AM1
IG1
I 8
Ignition SW
B–Y
J24(A), J25(B)
Junction
Connector
R–L
C 8
Clearance
Warning Buzzer
U 4
Ultrasonic Sensor
No. 1 (LH)
U 5
Ultrasonic Sensor
No. 1 (RH)
BI
SI
EI
BO
SO
EO
Y
R
G
BR
P
L
10A
ECU–IG&GAUGE
40A AM1
100A ALT
B–R
B
W
Battery
P–G
L–R
R–L
W–B
LG
R–W
V–R
IA1
BE2
BF2
IG
ECU
BBZ
BOR
SOR
E2
E
RL
SPD
C25
Clearance Warning ECU
B 4
Back Sonar SW
J26(A), J27(B)
Junction
Connector
J34
Junction
Connector
Instrument Panel
Reinforcement Center
Cowl Side
Panel RH
Park/Neutral
Position SW (A/T)
<15–3>
Back–Up Lamp SW (M/T)
<15–3>
Combination
Meter<33–2>