


(Cont. next page)

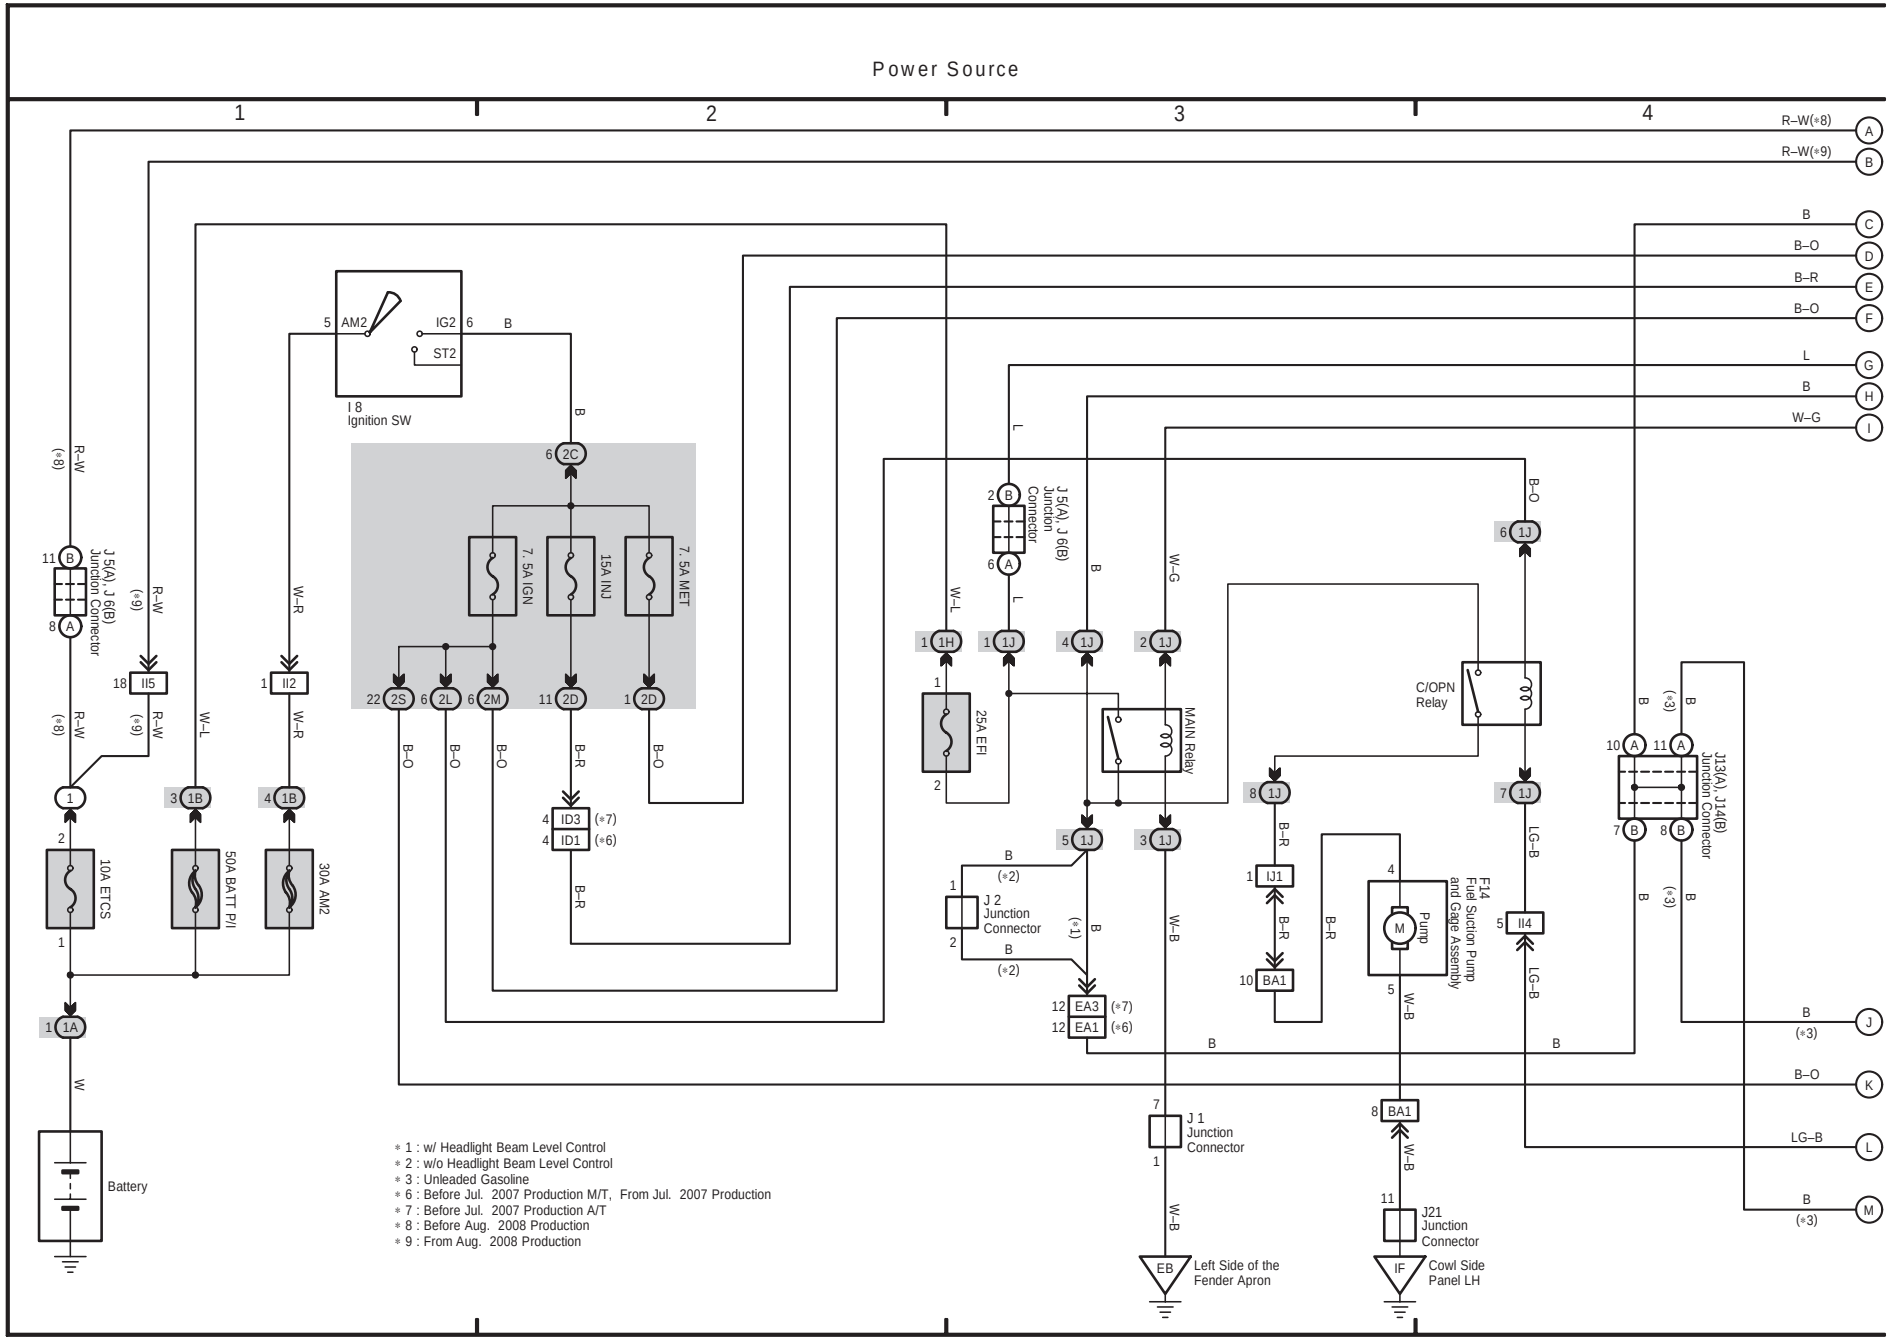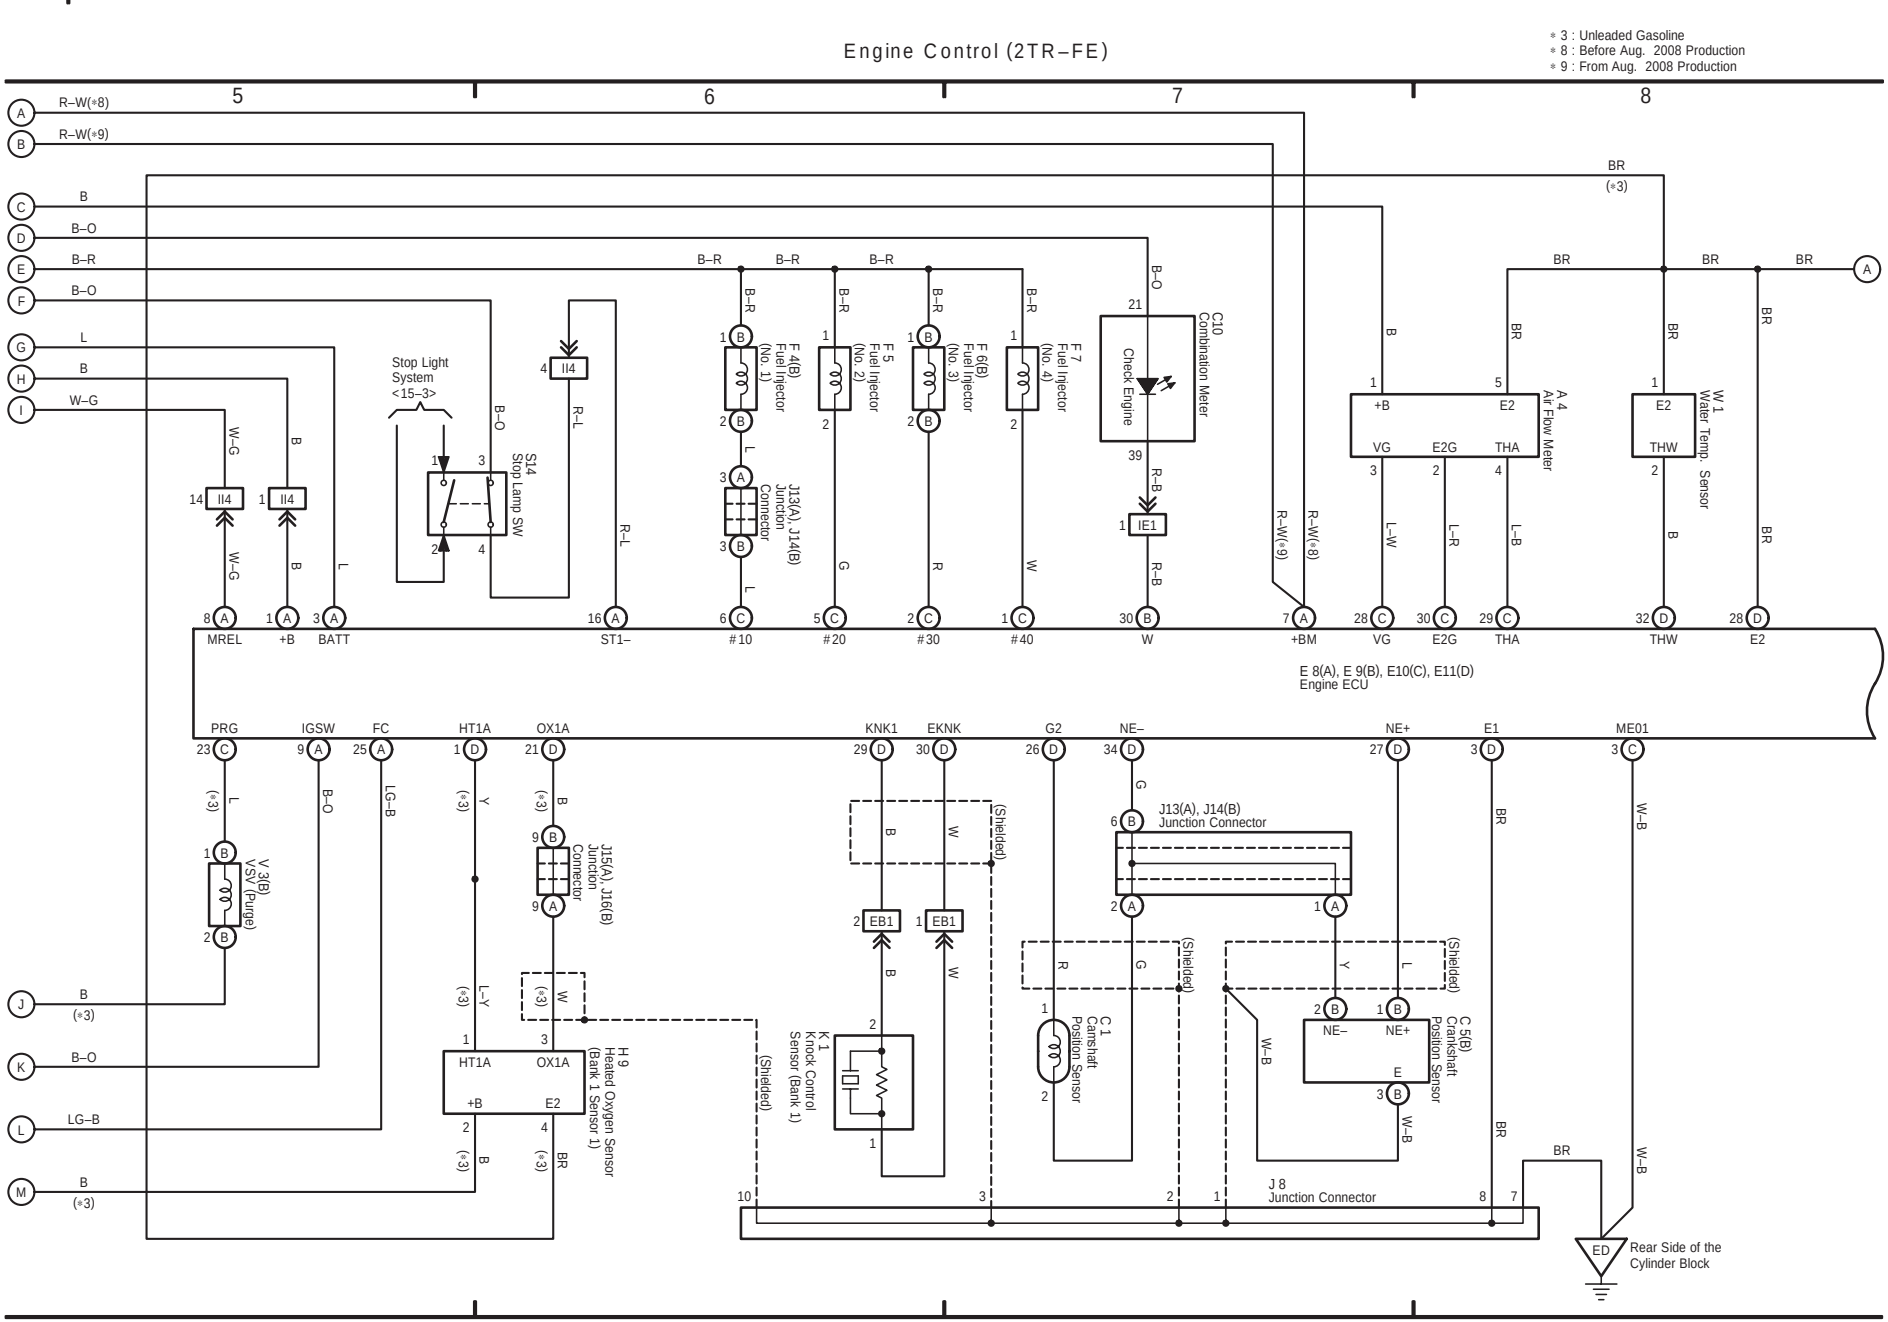

(Cont. next page)

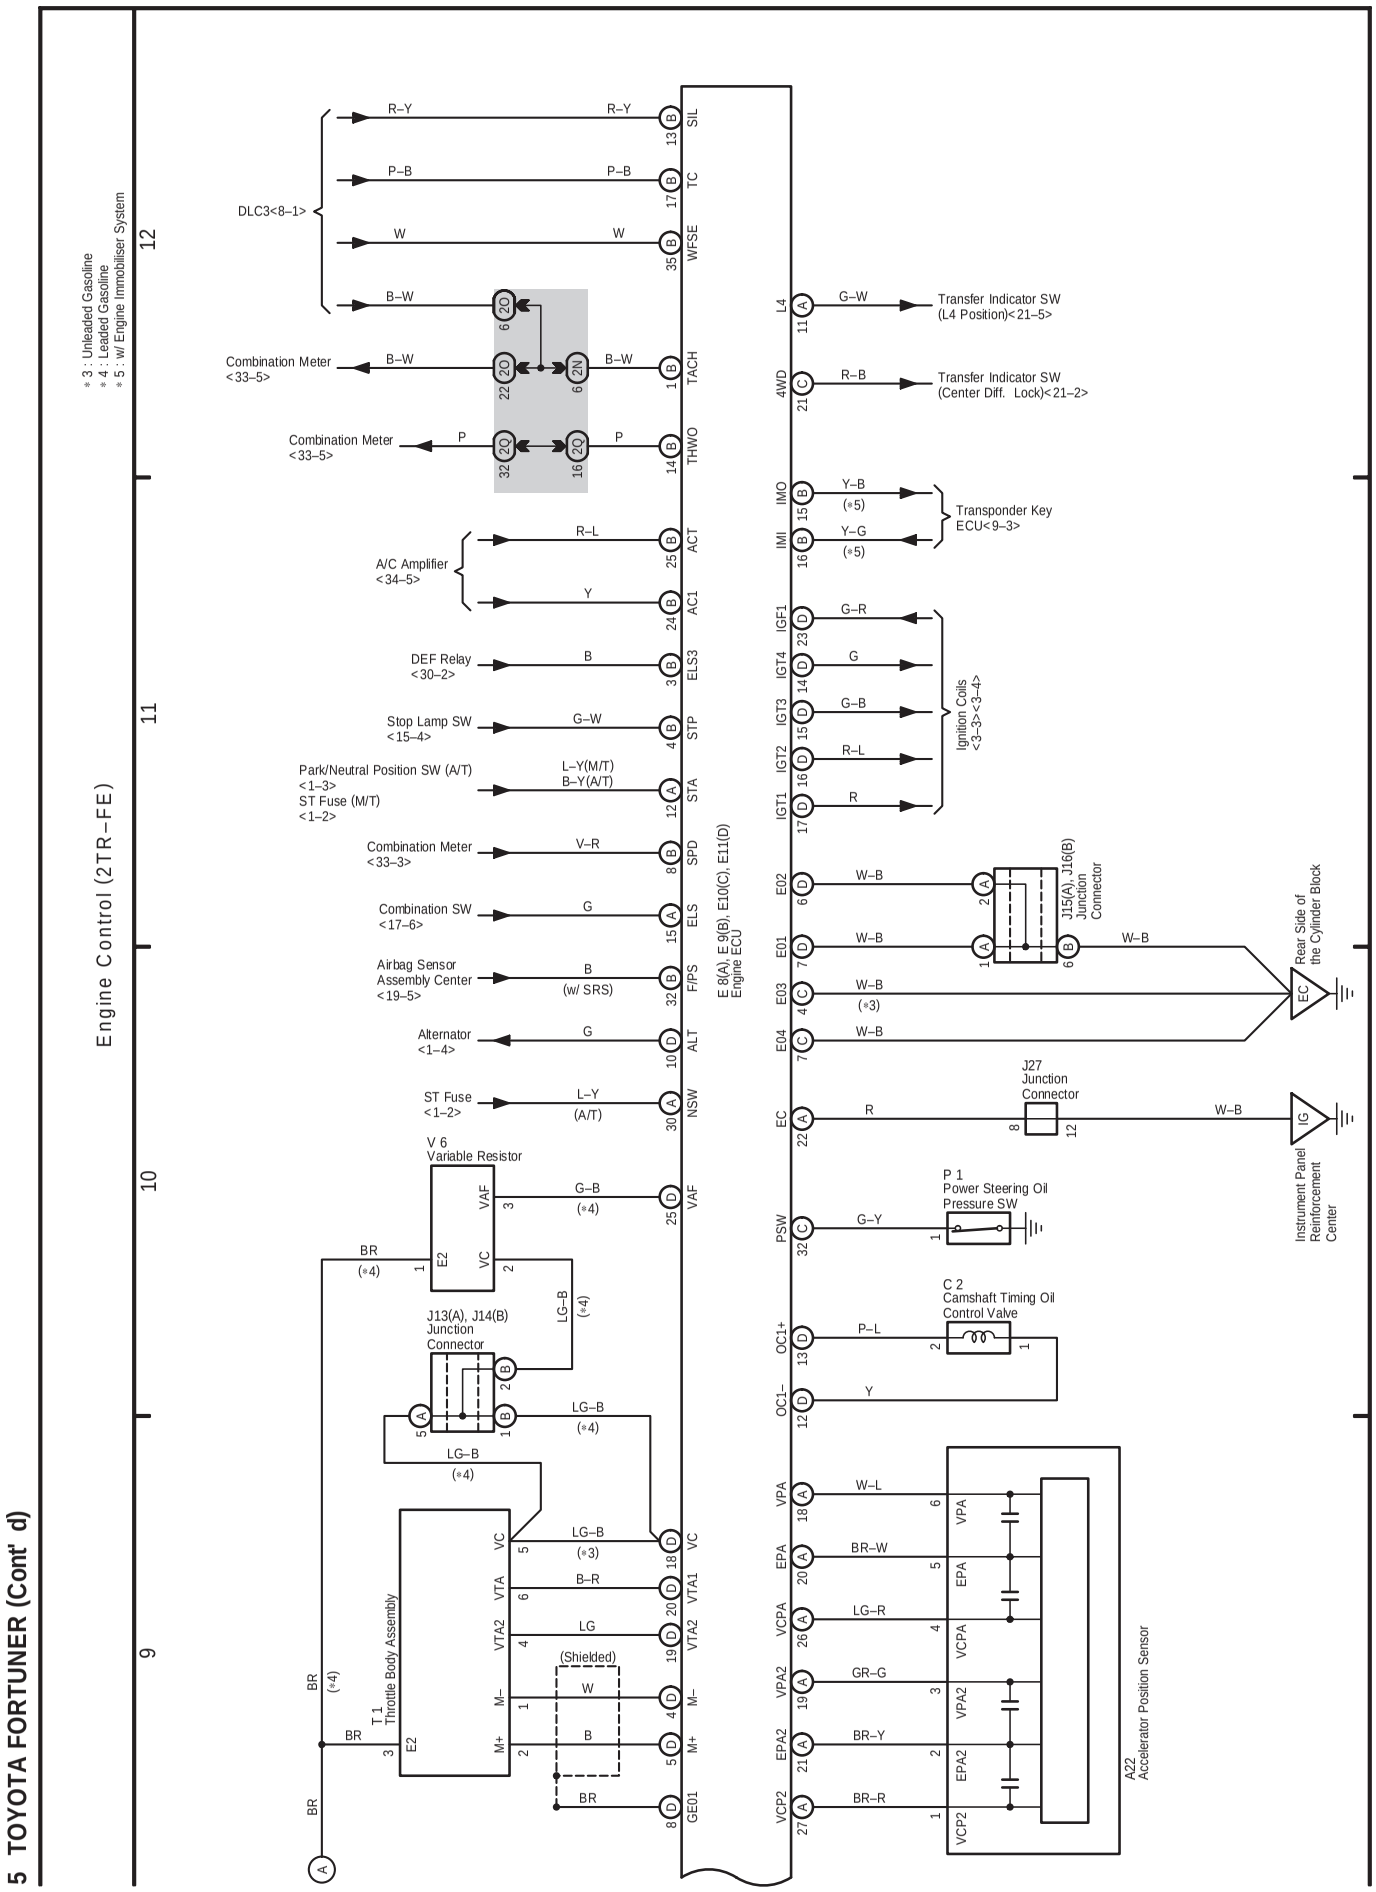


5 TOYOTA FORTUNER (Cont' d)
Engine Control (2TR–FE)
9
10
11
12
* 3 : Unleaded Gasoline
* 4 : Leaded Gasoline
* 5 : w/ Engine Immobiliser System
DLC3<8–1>
Combination Meter <33–5>
A/C Amplifier <34–5>
DEF Relay <30–2>
Stop Lamp SW <15–4>
Park/Neutral Position SW (A/T) <1–3>
ST Fuse (M/T) <1–2>
Combination Meter <33–3>
Combination SW <17–6>
Airbag Sensor Assembly Center <19–5>
Alternator <1–4>
ST Fuse <1–2>
V 6 Variable Resistor
J13(A), J14(B) Junction Connector
T 1 Throttle Body Assembly
(Shielded)
E 8(A), E 9(B), E10(C), E11(D) Engine ECU
Transfer Indicator SW (L4 Position)<21–5>
Transfer Indicator SW (Center Diff. Lock)<21–2>
Transponder Key ECU<9–3>
Ignition Coils <3–3><3–4>
J15(A), J16(B) Junction Connector
Rear Side of the Cylinder Block
J27 Junction Connector
Instrument Panel Reinforcement Center
P 1 Power Steering Oil Pressure SW
C 2 Camshaft Timing Oil Control Valve
A22 Accelerator Position Sensor