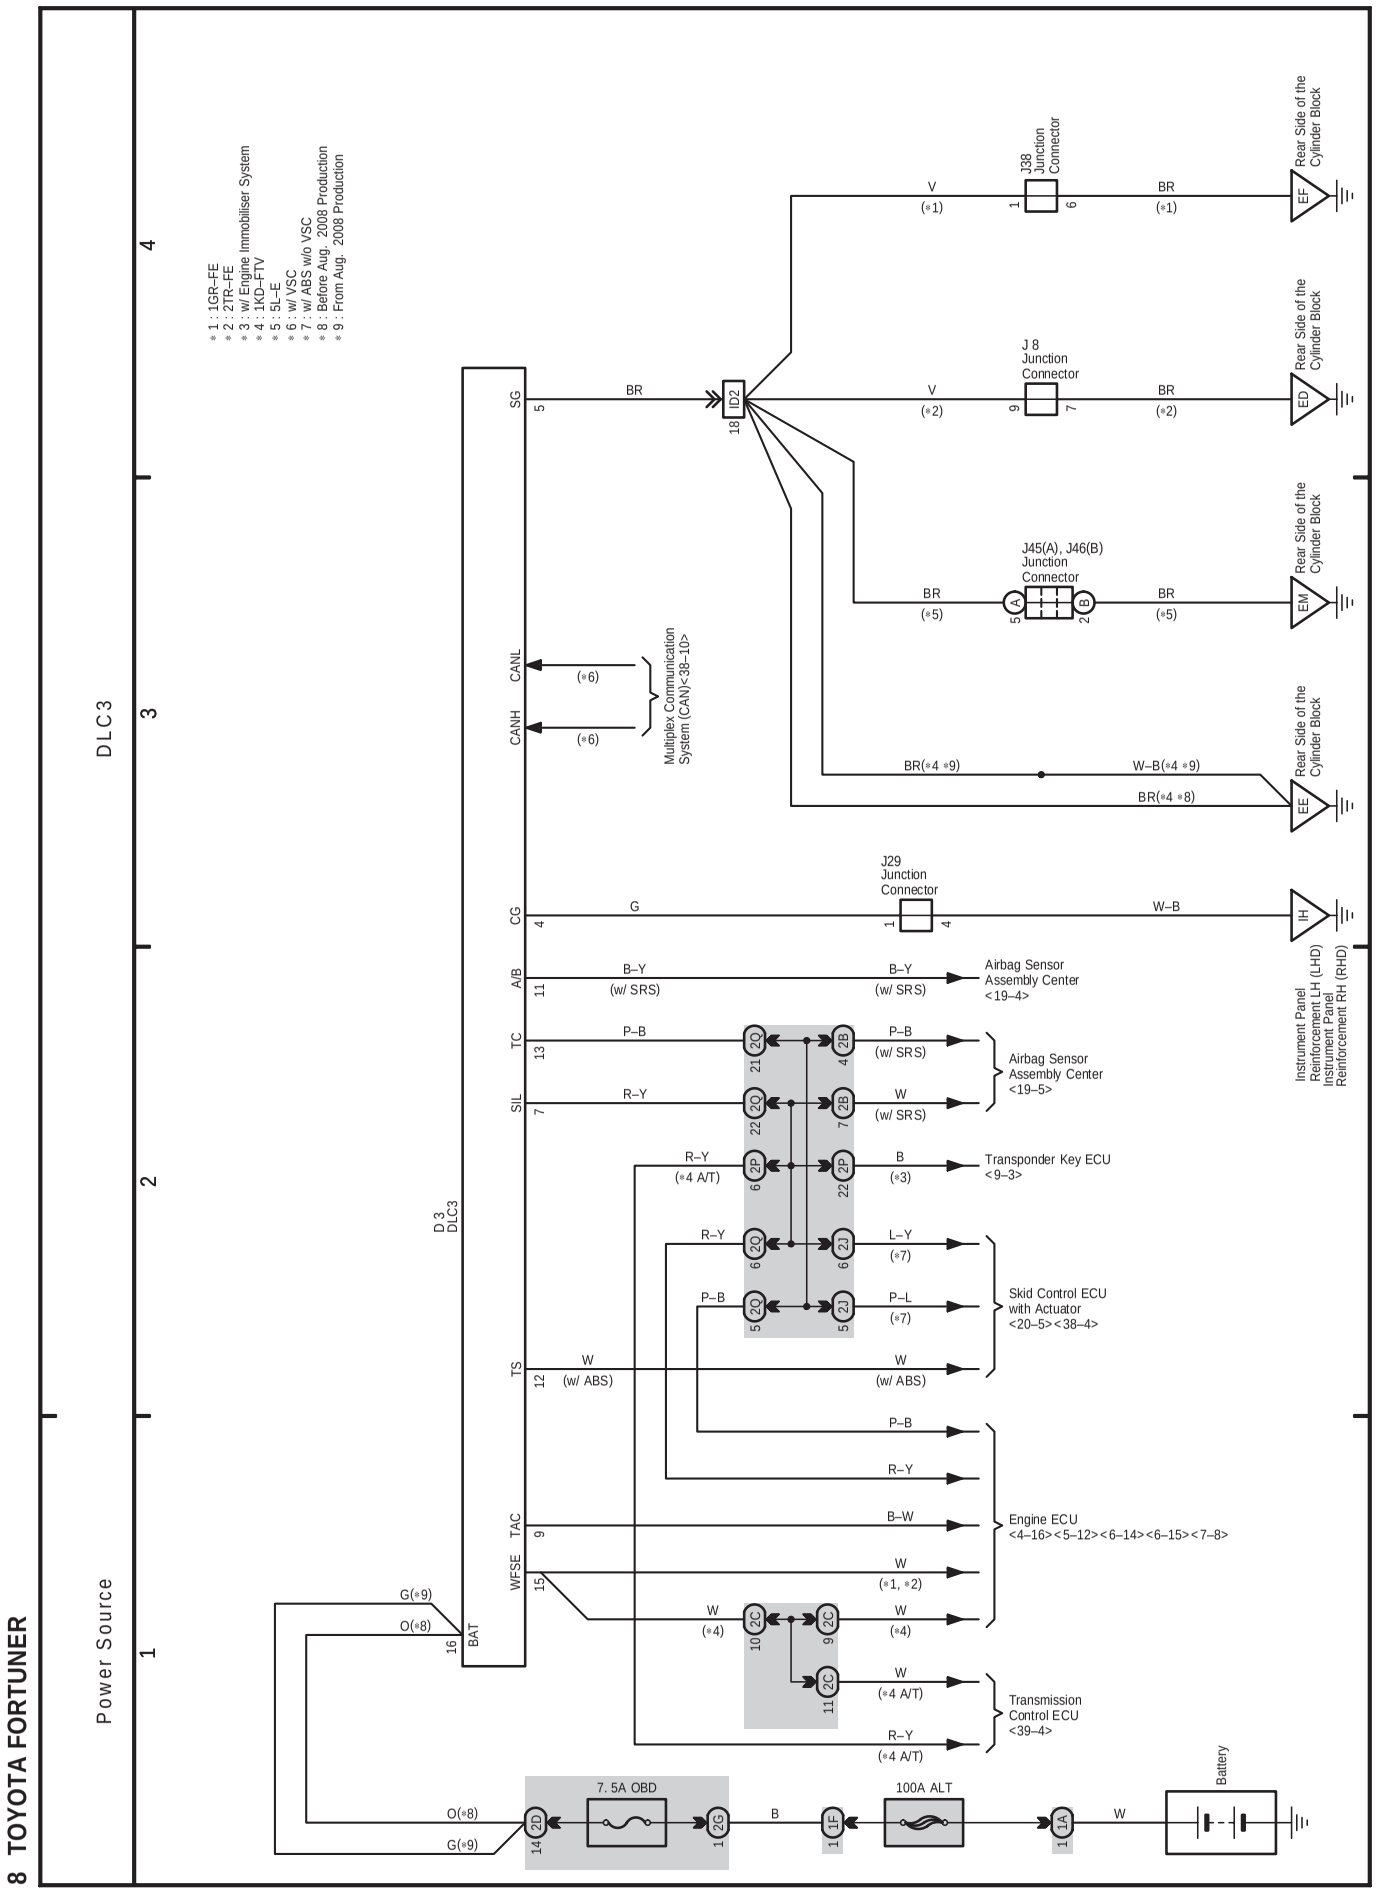

＊1 : 1GR–FE
＊2 : 2TR–FE
＊3 : w/ Engine Immobiliser System
＊4 : 1KD–FTV
＊5 : 5L–E
＊6 : w/ VSC
＊7 : w/ ABS w/o VSC
＊8 : Before Aug. 2008 Production
＊9 : From Aug. 2008 Production
DLC3
Power Source
J38 Junction Connector
J 8 Junction Connector
J45(A), J46(B) Junction Connector
J29 Junction Connector
Rear Side of the Cylinder Block
Instrument Panel Reinforcement LH (LHD)
Instrument Panel Reinforcement RH (RHD)
Multiplex Communication System (CAN)<38–10>
Airbag Sensor Assembly Center <19–4>
Airbag Sensor Assembly Center <19–5>
Transponder Key ECU <9–3>
Skid Control ECU with Actuator <20–5><38–4>
Engine ECU <4–16><5–12><6–14><6–15><7–8>
Transmission Control ECU <39–4>
7. 5A OBD
100A ALT
Battery
CANL
CANH
SG
CG
A/B
TC
SIL
TS
TAC
WFSE
BAT