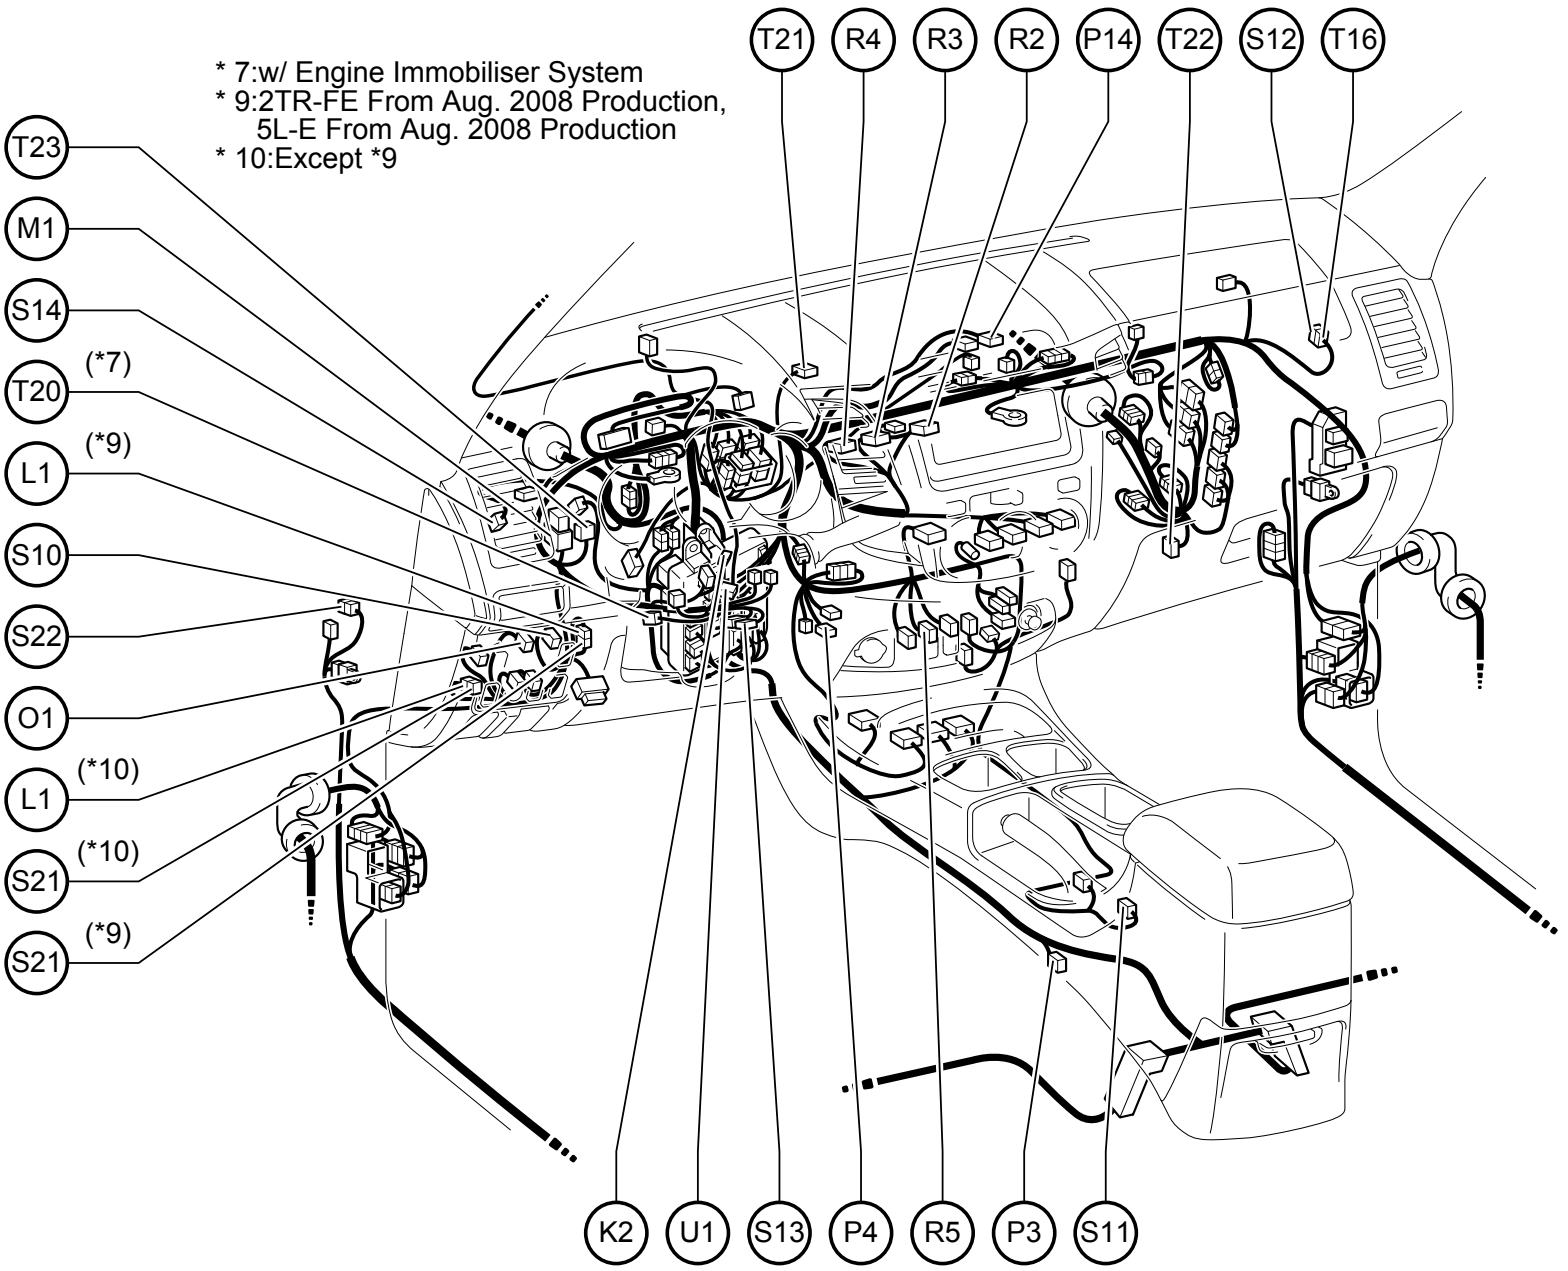

* 7:w/ Engine Immobiliser System
* 9:2TR-FE From Aug. 2008 Production,
5L-E From Aug. 2008 Production
* 10:Except *9
T21
R4
R3
R2
P14
T22
S12
T16
T23
M1
S14
T20
(*7)
L1
(*9)
S10
S22
O1
L1
(*10)
S21
(*10)
S21
(*9)
K2
U1
S13
P4
R5
P3
S11

K 2 Key Interlock Solenoid

L 1 Light Control Rheostat , Short Connector (Light Control Rheostat)

M 1 Magnet Clutch Relay

O 1 Outer Mirror SW

P 3 Parking Brake SW
P 4 Power Outlet Socket (Front)
P 14 Passenger Seat Belt Warning Lamp


R 2 Radio Receiver Assembly
R 3 Radio Receiver Assembly
R 4 Radio Receiver Assembly
R 5 Rear Window Defogger SW

S 10 Security Indicator Lamp
S 11 Shift Lock Control ECU
S 12 Short Pin (Theft Warning ECU)
S 13 Spiral Cable
S 14 Stop Lamp SW
S 21 Short Connector (Light Control Rheostat)
S 22 Short Connector (4WD Control)


T 16 Theft Warning ECU
T 20 Transponder Key Amplifier
T 21 Transponder Key ECU
T 22 Turbo Motor Driver
T 23 Turn Signal Flasher

U 1 Unlock Warning SW


K 2
Black




L 1
White



M 1
White

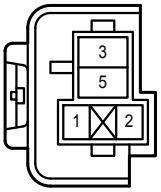


O 1
White

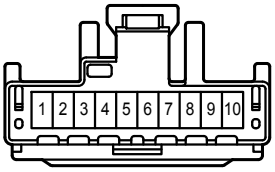


P 3
Black




P 4
White



P 14
Black

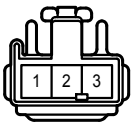


R 2
White

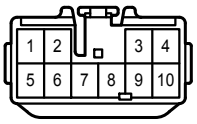


R 3
White



R 4
White

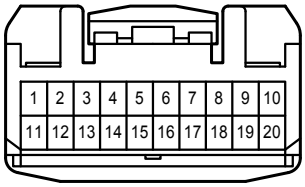

R 5
Black

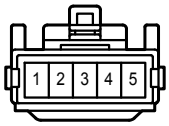


S 10
White



S 11
White




S 12
White

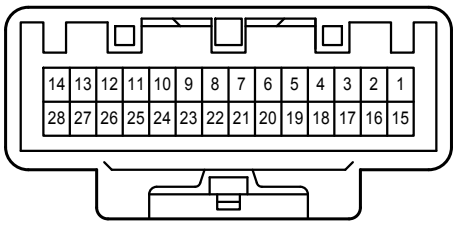

S 13
Black



S 14
White

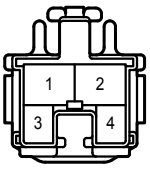


S 21
White




S 22
White




T 16
White

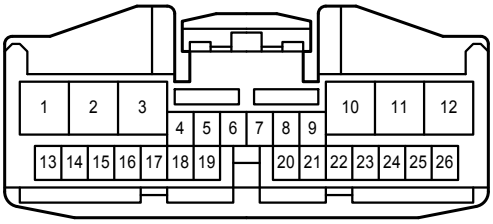


T 20
Black

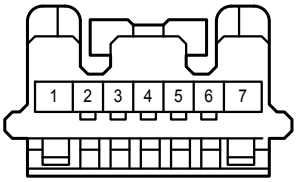


T 21
White

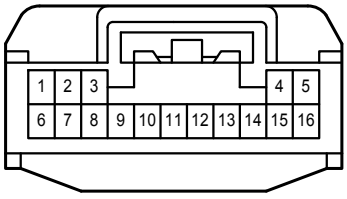

T 22
Gray

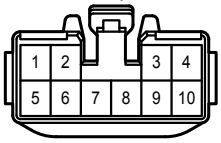

T 23
Black



U 1
White

