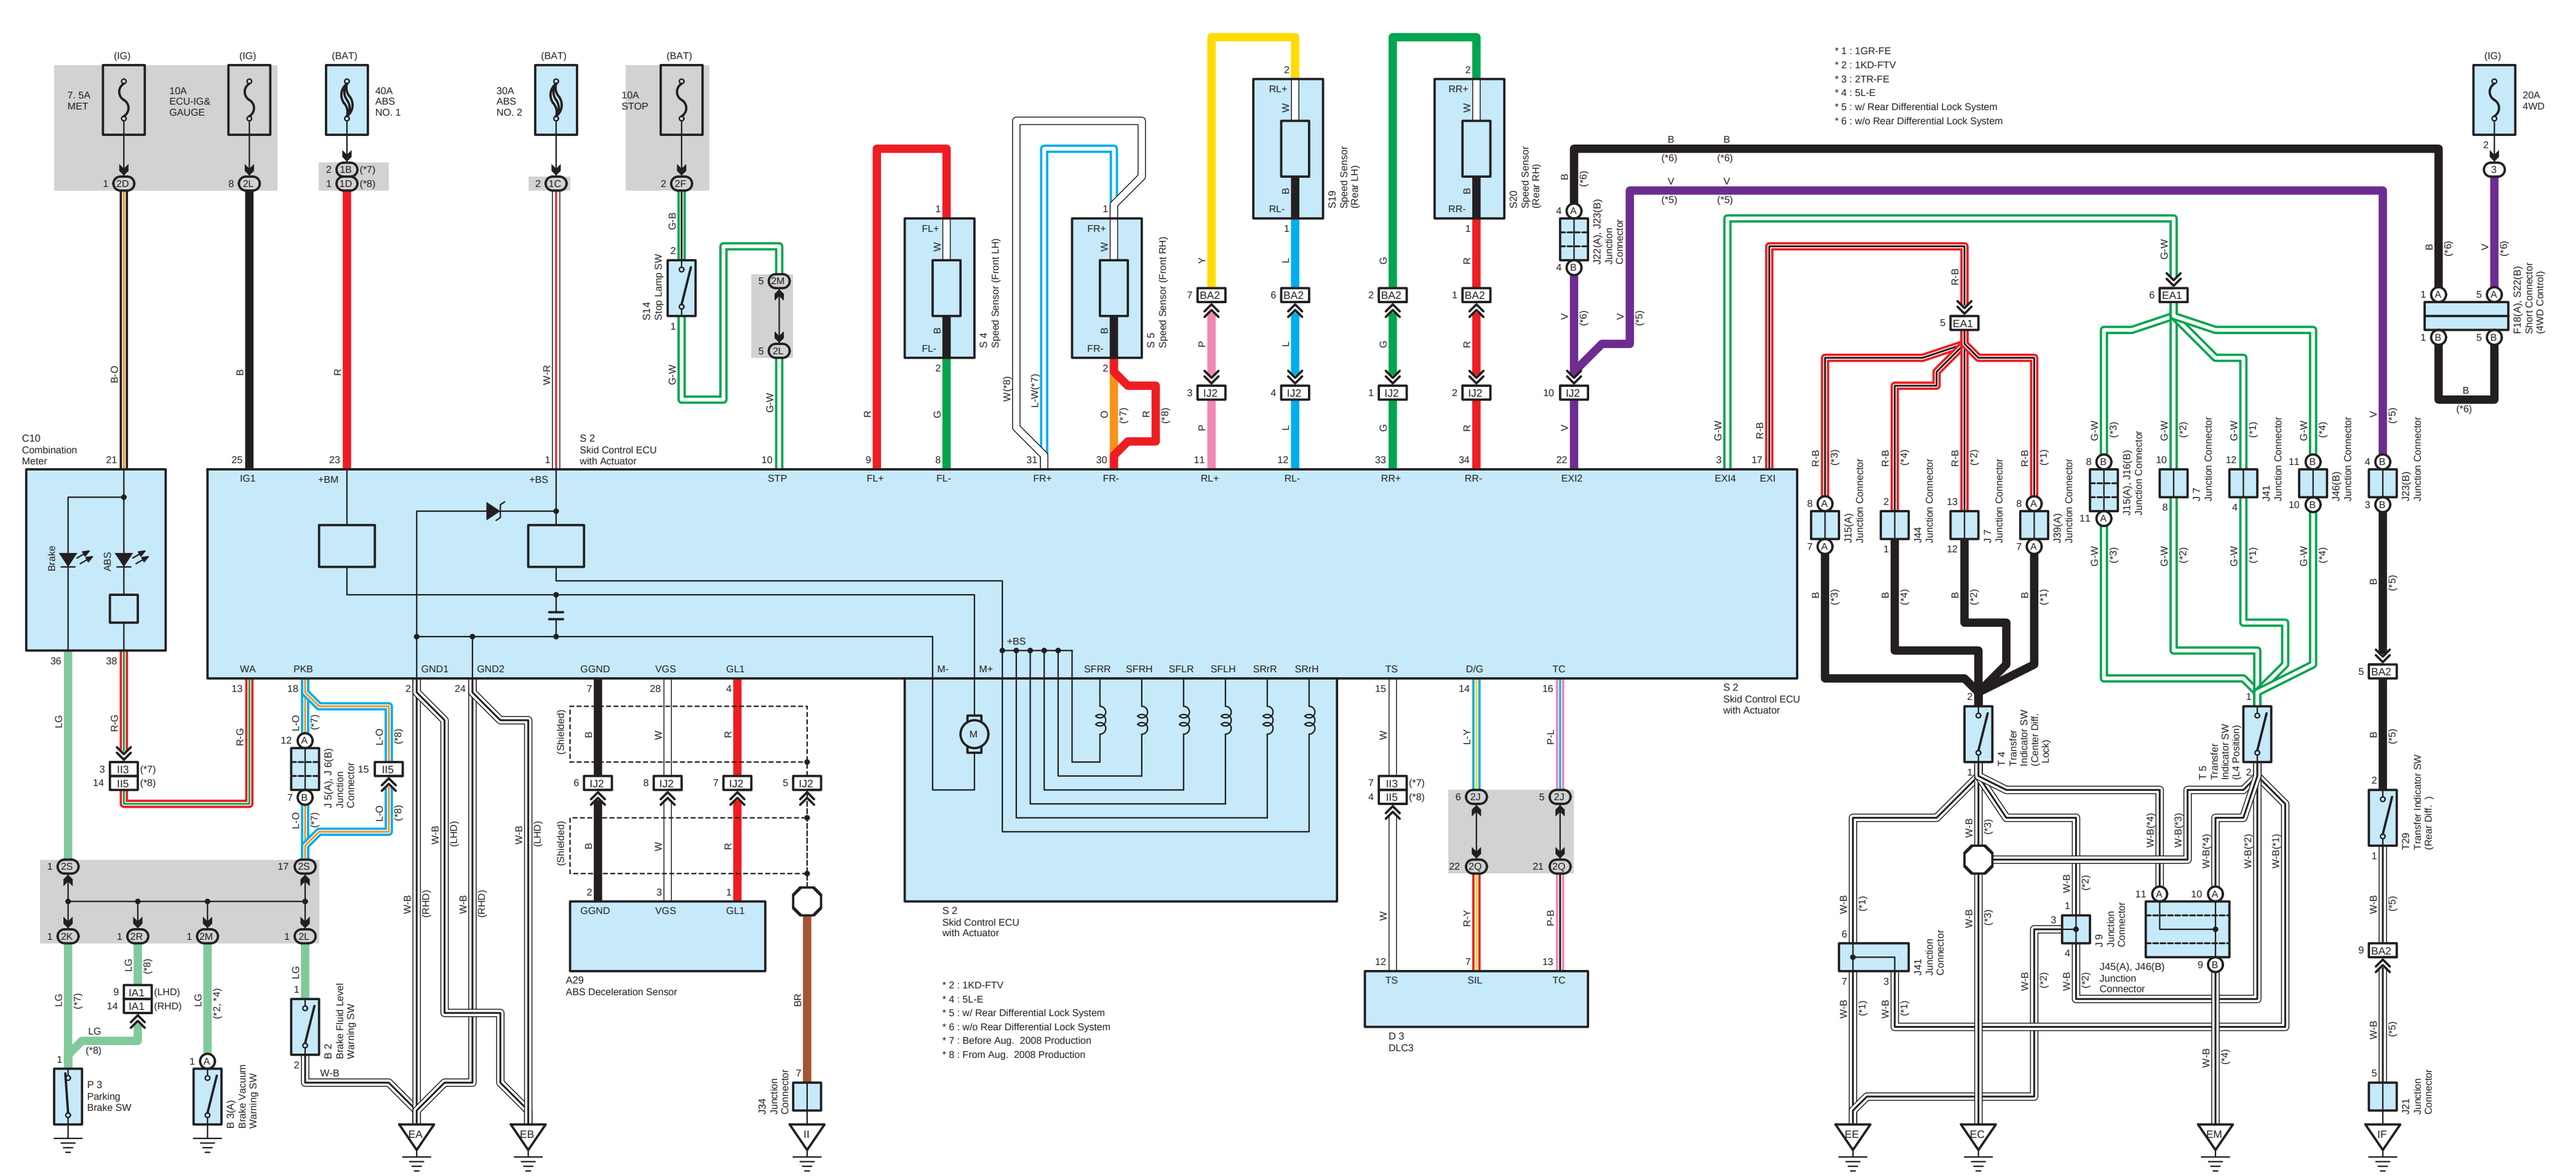

* 1 : 1GR-FE
* 2 : 1KD-FTV
* 3 : 2TR-FE
* 4 : 5L-E
* 5 : w/ Rear Differential Lock System
* 6 : w/o Rear Differential Lock System
* 7 : Before Aug. 2008 Production
* 8 : From Aug. 2008 Production
(IG)
7. 5A MET
10A ECU-IG& GAUGE
(BAT)
40A ABS NO. 1
30A ABS NO. 2
10A STOP
20A 4WD
C10 Combination Meter
Brake
ABS
S 2 Skid Control ECU with Actuator
IG1
+BM
+BS
STP
FL+
FL-
FR+
FR-
RL+
RL-
RR+
RR-
EXI2
EXI4
EXI
WA
PKB
GND1
GND2
GGND
VGS
GL1
M-
M+
SFRR
SFRH
SFLR
SFLH
SRrR
SRrH
TS
D/G
TC
S14 Stop Lamp SW
S 4 Speed Sensor (Front LH)
S 5 Speed Sensor (Front RH)
S19 Speed Sensor (Rear LH)
S20 Speed Sensor (Rear RH)
J22(A), J23(B) Junction Connector
F18(A), S22(B) Short Connector (4WD Control)
J15(A) Junction Connector
J44 Junction Connector
J7 Junction Connector
J39(A) Junction Connector
J15(A), J16(B) Junction Connector
J41 Junction Connector
J46(B) Junction Connector
J22(B) Junction Connector
T 4 Transfer Indicator SW (Center Diff. Lock)
T 5 Transfer Indicator SW (L4 Position)
T29 Transfer Indicator SW (Rear Diff.)
J21 Junction Connector
J41 Junction Connector
J9 Junction Connector
J45(A), J46(B) Junction Connector
J34 Junction Connector
A29 ABS Deceleration Sensor
P 3 Parking Brake SW
B 3(A) Brake Vacuum Warning SW
B 2 Brake Fluid Level Warning SW
J 5(A), J 6(B) Junction Connector
D 3 DLC3
(Shielded)
(LHD)
(RHD)
EA
EB
EC
ED
EE
EF
EM
II
VF