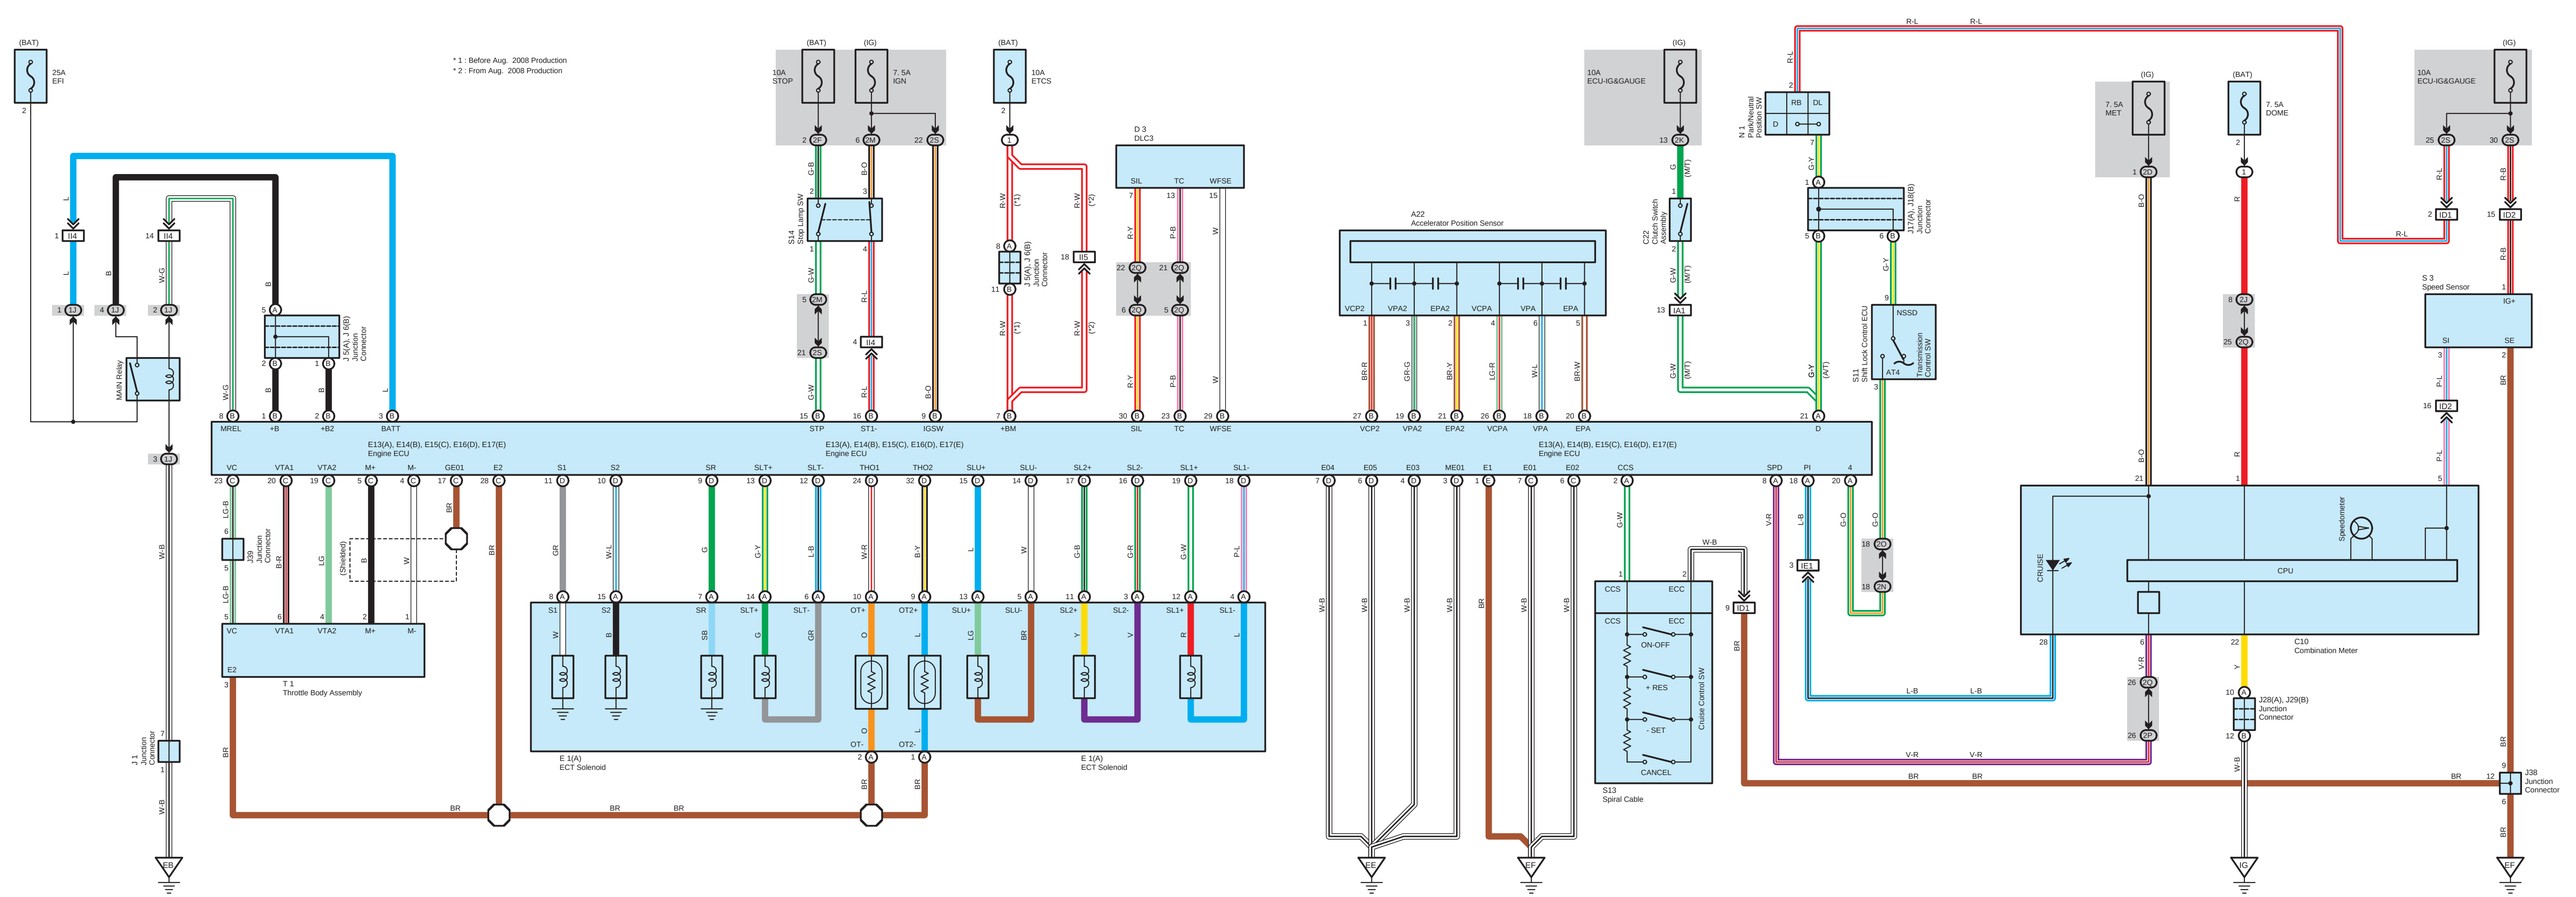

* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
(BAT)
25A EFI
10A STOP
7. 5A IGN
10A ETCS
10A ECU-IG&GAUGE
7. 5A MET
7. 5A DOME
(IG)
(BAT)
MAIN Relay
J 1 Junction Connector
J 5(A), J 6(B) Junction Connector
S14 Stop Lamp SW
D 3 DLC3
SIL
TC
WFSE
A22 Accelerator Position Sensor
VCP2
VPA2
EPA2
VCPA
VPA
EPA
C22 Clutch Switch Assembly
N 1 Neutral Position SW
RB
DL
D
J17(A), J18(B) Junction Connector
S11 Shift Lock Control ECU
NSSD
AT4
Transmission Control SW
S 3 Speed Sensor
IG+
SI
SE
E13(A), E14(B), E15(C), E16(D), E17(E) Engine ECU
MREL
+B
+B2
BATT
STP
ST1-
IGSW
+BM
SIL
TC
WFSE
VCP2
VPA2
EPA2
VCPA
VPA
EPA
D
VC
VTA1
VTA2
M+
M-
GE01
E2
S1
S2
SR
SLT+
SLT-
THO1
THO2
SLU+
SLU-
SL2+
SL2-
SL1+
SL1-
E04
E05
E03
ME01
E1
E01
E02
CCS
SPD
PI
J39 Junction Connector
T 1 Throttle Body Assembly
(Shielded)
E 1(A) ECT Solenoid
E 1(A) ECT Solenoid
S13 Spiral Cable
CCS
ECC
ON-OFF
+ RES
- SET
CANCEL
Cruise Control SW
CRUISE
CPU
Speedometer
C10 Combination Meter
J28(A), J29(B) Junction Connector
J38 Junction Connector
EB
EF
IG