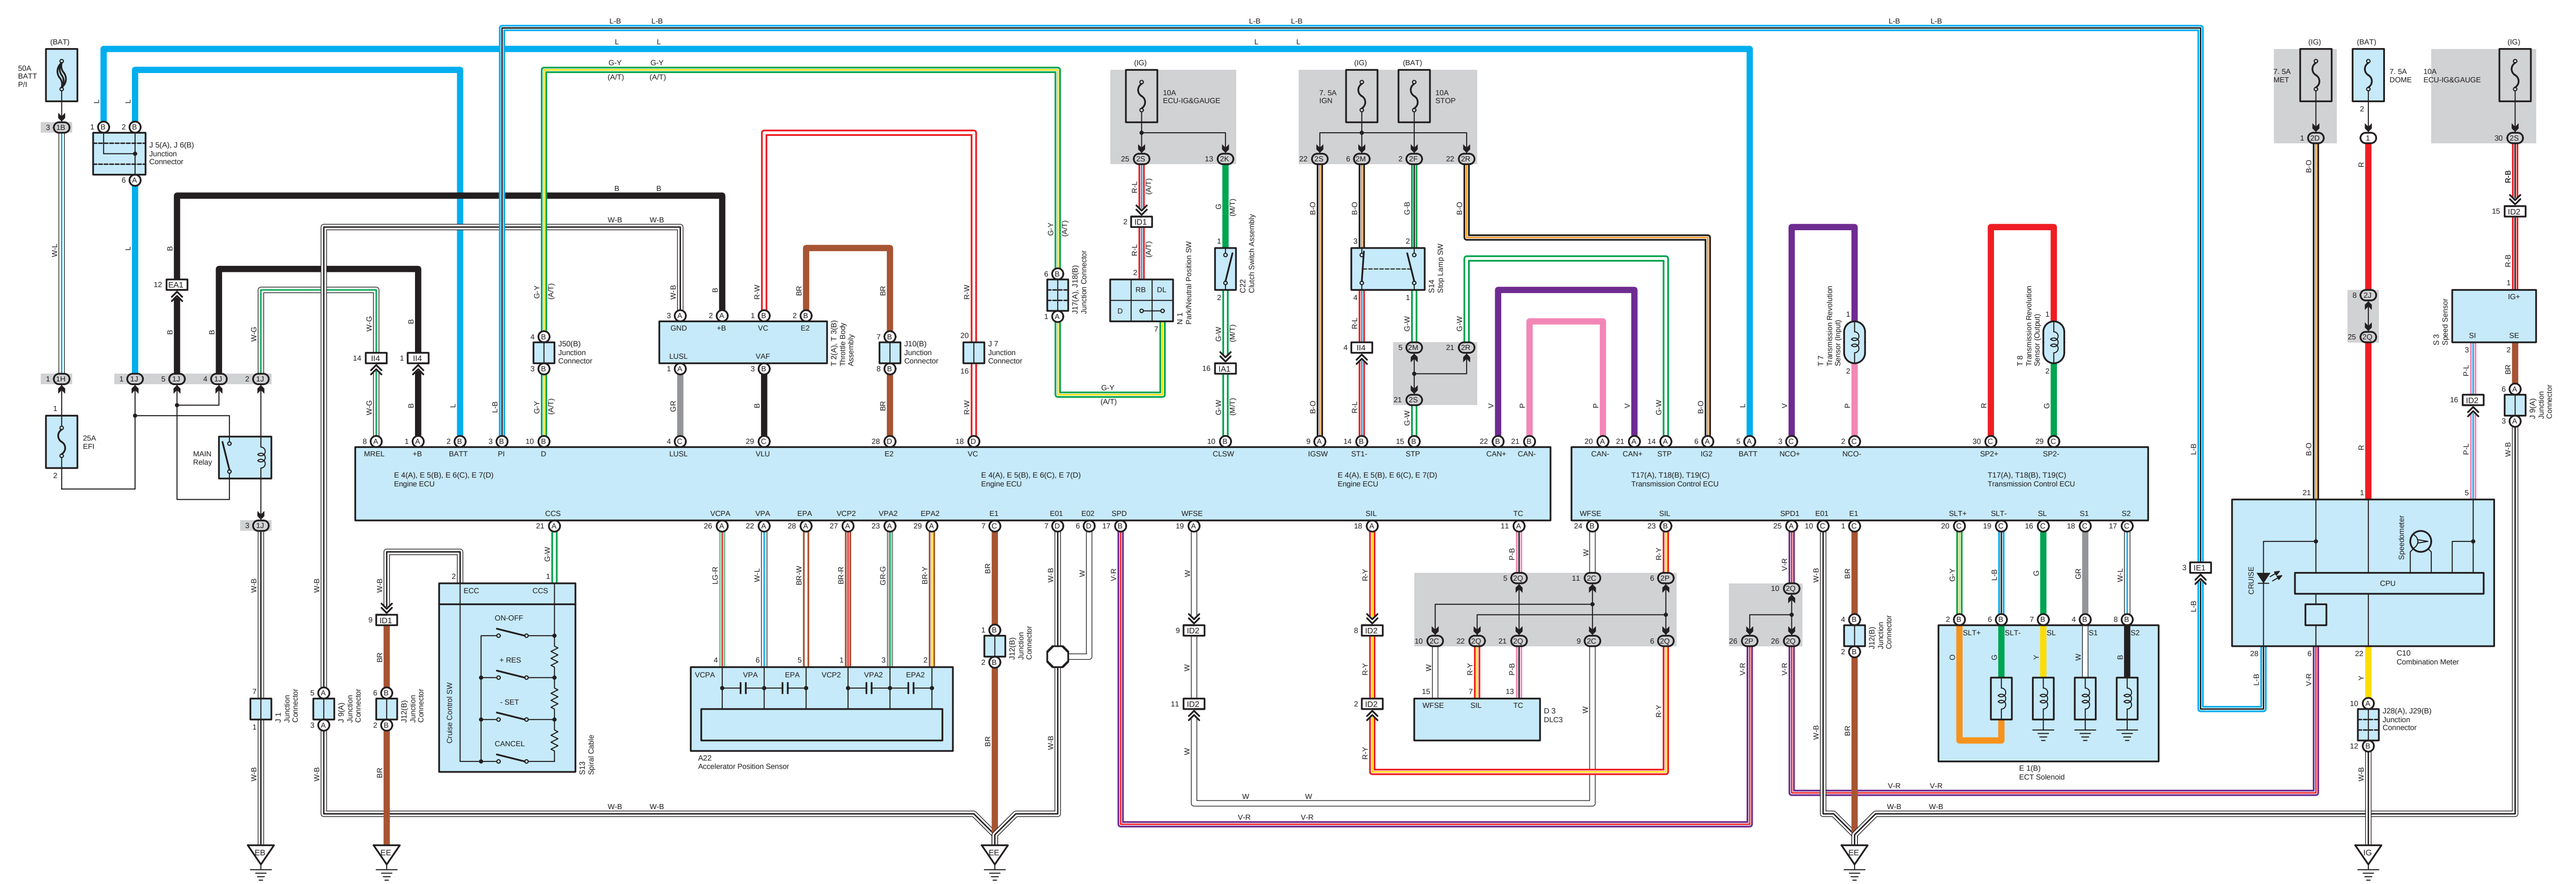

50A
BATT
P/I
(BAT)
3 1B
W-L
1 D1
1 J1
1
25A
EFI
2
MAIN
Relay
3 I3
W-B
7 J1
Junction
Connector
1
W-B
EB
1 D
2 B
J 5(A), J 6(B)
Junction
Connector
6 A
L
12 EA1
B
1 J1
5 J1
4 J1
2 J1
W-G
14 II4
1 II4
B
L
5 A
1 A
2 B
3 B
10 B
MREL
+B
BATT
PI
D
E 4(A), E 5(B), E 6(C), E 7(D)
Engine ECU
L-B
W-B
W-B
B
G-Y
(A/T)
G-Y
(A/T)
J50(B)
Junction
Connector
4 B
3 B
5 A
6 B
J 9(A)
Junction
Connector
W-B
9 ID1
BR
6 B
2 B
J12(B)
Junction
Connector
BR
EE
21 A
G-W
1
2
ECC
CCS
ON-OFF
+ RES
- SET
CANCEL
Cruise Control SW
S13
Spiral Cable
CCS
W-B
W-B
W-B
W-B
3 GND
1 LUSL
LUSL
4 C
GR
B
1 B
2 B
R-W
BR
3 B
VC
E2
29 C
VLU
B
BR
7 B
8 B
J10(B)
Junction
Connector
28 D
BR
R-W
20
J 7
Junction
Connector
16
R-W
18 D
VC
G-Y
(A/T)
6 B
1 A
J17(A), J18(B)
Junction Connector
(IG)
10A
ECU-IG&GAUGE
25 2S
13 2K
R-L
(A/T)
2 ID1
R-L
(A/T)
2
RB
DL
D
7
N-1
Park/Neutral Position SW
G
(M/T)
1
G-W
(M/T)
2
16 IA1
G-W
(M/T)
10 B
CLSW
T 2(A), T 3(B)
Throttle Body
Assembly
(IG)
7. 5A
IGN
(BAT)
10A
STOP
22 2S
6 2M
2 2F
22 2R
B-O
3
4 I4
R-L
4 I4
1
5 2M
G-W
21 2S
G-W
G-B
2
1
G-W
21 2S
B-O
9 A
IGSW
14 B
ST1-
15 B
STP
S14
Stop Lamp SW
V
P
P
V
G-W
20 A
21 A
14 A
CAN-
CAN+
STP
22 B
21 B
CAN+
CAN-
B-O
6 A
IG2
T17(A), T18(B), T19(C)
Transmission Control ECU
L
5 A
BATT
V
3 C
NCO+
P
2 C
NCO-
T 7
Transmission Revolution
Sensor (Input)
R
30 C
SP2+
G
29 C
SP2-
T 8
Transmission Revolution
Sensor (Output)
T17(A), T18(B), T19(C)
Transmission Control ECU
WFSE
24 B
SIL
23 B
SPD1
25 A
E01
10 C
E1
1 C
SLT+
20 C
SLT-
19 C
SL
16 C
S1
18 C
S2
17 C
VCPA
26 A
VPA
22 A
EPA
28 A
VCP2
27 A
VPA2
23 A
EPA2
29 A
LG-R
W-L
BR-W
BR-R
GR-G
BR-Y
4
5
5
1
3
2
VCPA
VPA
EPA
VCP2
VPA2
EPA2
A22
Accelerator Position Sensor
7 C
BR
1 D
2 B
J12(B)
Junction
Connector
BR
EE
7 D
W-B
E01
6 D
W
E02
17 B
V-R
SPD
19 A
W
9 ID2
W
11 ID2
W
W
V-R
V-R
18 A
R-Y
8 ID2
R-Y
2 ID2
R-Y
11 A
P-B
5 2Q
11 2C
6 2P
10 2C
22 2Q
21 2Q
9 2C
6 2Q
W
R-Y
P-B
15
Y
13
WFSE
SIL
TC
D 3
DLC3
W
R-Y
W
W
W
V-R
V-R
24 B
W
23 B
R-Y
25 A
V-R
10 2P
26 2P
26 2Q
V-R
V-R
W-B
W-B
2 B
BR
EE
W-B
W-B
V-R
V-R
W-B
W-B
2 B
G-Y
6 B
L-B
7 B
G
4 B
GR
8 B
W-L
O
G
Y
W
B
SLT+
SLT-
SL
S1
S2
E 1(B)
ECT Solenoid
L-B
L-B
(IG)
7. 5A
MET
(BAT)
7. 5A
DOME
(IG)
10A
ECU-IG&GAUGE
1 2B
B-O
2
Y
R
8 2J
25 2Q
30 2S
R-B
15 ID2
R-B
1
IG+
SI
SE
S 3
Speed Sensor
J
P-L
16 ID2
5
2
BR
6 A
3 A
J16(A)
Junction
Connector
W-B
21
1
Speedometer
CRUISE
CPU
28
6
22
C10
Combination Meter
Y
10 A
J28(A), J29(B)
Junction
Connector
12 B
W-B
IG
3 IE1
L-B
L-B