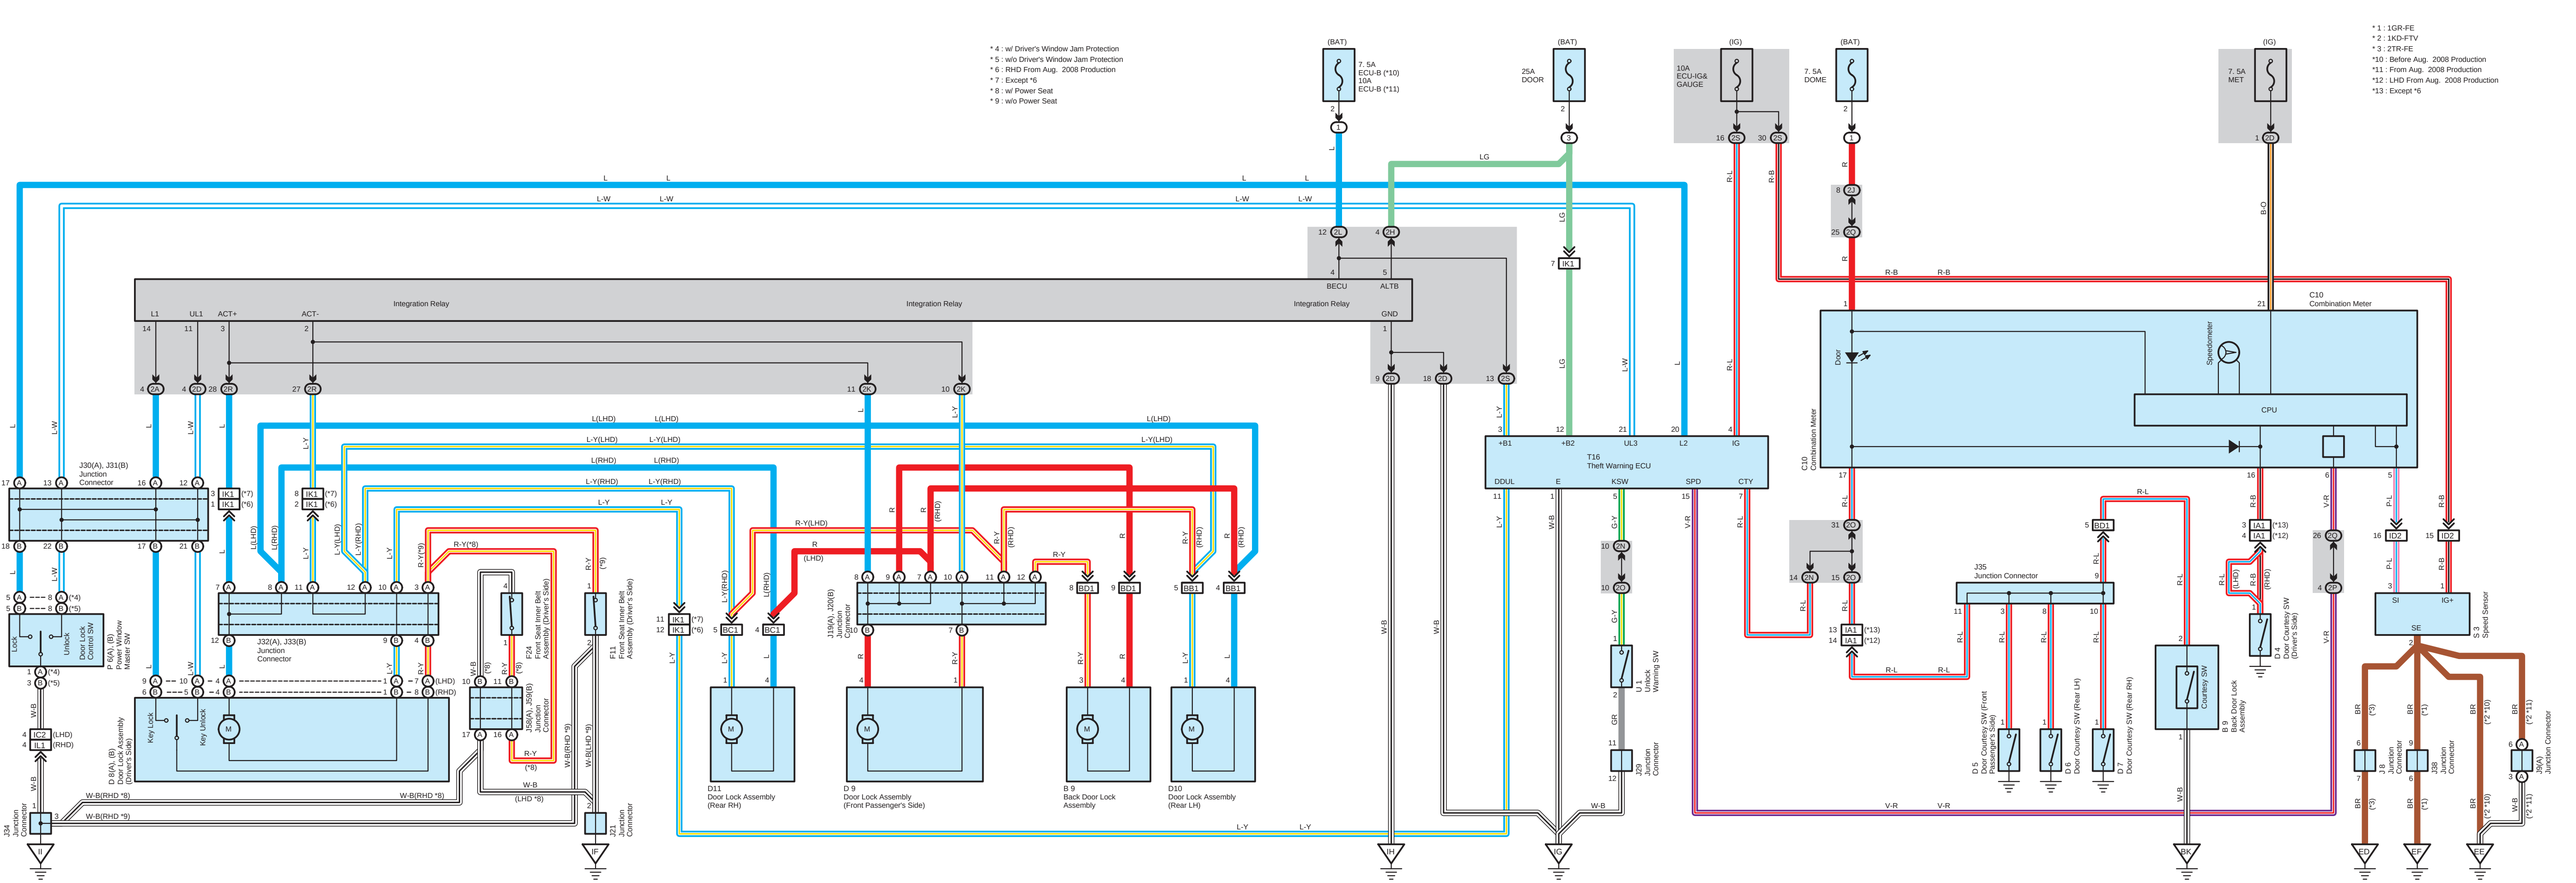

* 4 : w/ Driver's Window Jam Protection
* 5 : w/o Driver's Window Jam Protection
* 6 : RHD From Aug. 2008 Production
* 7 : Except *5
* 8 : w/ Power Seat
* 9 : w/o Power Seat
* 1 : 1GR-FE
* 2 : 1KD-FTV
* 3 : 2TR-FE
*10 : Before Aug. 2008 Production
*11 : From Aug. 2008 Production
*12 : LHD From Aug. 2008 Production
*13 : Except *5
(BAT)
7. 5A ECU-B (*10) 10A ECU-B (*11)
25A DOOR
10A ECU-IG& GAUGE
7. 5A DOME
7. 5A MET
(IG)
BECU
ALTB
GND
Integration Relay
L1
UL1
ACT+
ACT-
T16 Theft Warning ECU
+B1
+B2
UL3
L2
IG
DDUL
E
KSW
SPD
CTY
C10 Combination Meter
Door
Speedometer
CPU
Courtesy SW
J30(A), J31(B) Junction Connector
J32(A), J33(B) Junction Connector
J35 Junction Connector
J34 Junction Connector
J38 Junction Connector
J39(A), J40(B) Junction Connector
J3 Junction Connector
J9(A) Junction Connector
221 Junction Connector
F(A), (B) Power Window Master SW
Door Lock Control SW
Lock
Unlock
D 8(A), (B) Door Lock Assembly (Driver's Side)
Key Lock
Key Unlock
F11 Front Seat Inner Belt Assembly (Driver's Side)
F24 Front Seat Inner Belt Assembly (Driver's Side)
D11 Door Lock Assembly (Rear RH)
D 9 Door Lock Assembly (Front Passenger's Side)
B 9 Back Door Lock Assembly
D10 Door Lock Assembly (Rear LH)
Unlock Warning SW
D 5 Door Courtesy SW (Front Passenger's Side)
D 6 Door Courtesy SW (Rear LH)
D 7 Door Courtesy SW (Rear RH)
B 9 Back Door Lock Assembly
D 4 Door Courtesy SW (Driver's Side)
S13 Speed Sensor
SI
IG+
SE
L-W
L-Y
R-Y
R-B
R-L
V-R
W-B
B-O
LG
GR
BR
P-L
L
R
Y
G-Y
W-B(RHD *8)
W-B(RHD *9)
W-B(LHD *8)
W-B
L-Y
L-Y
V-R
V-R
L-Y
L-Y