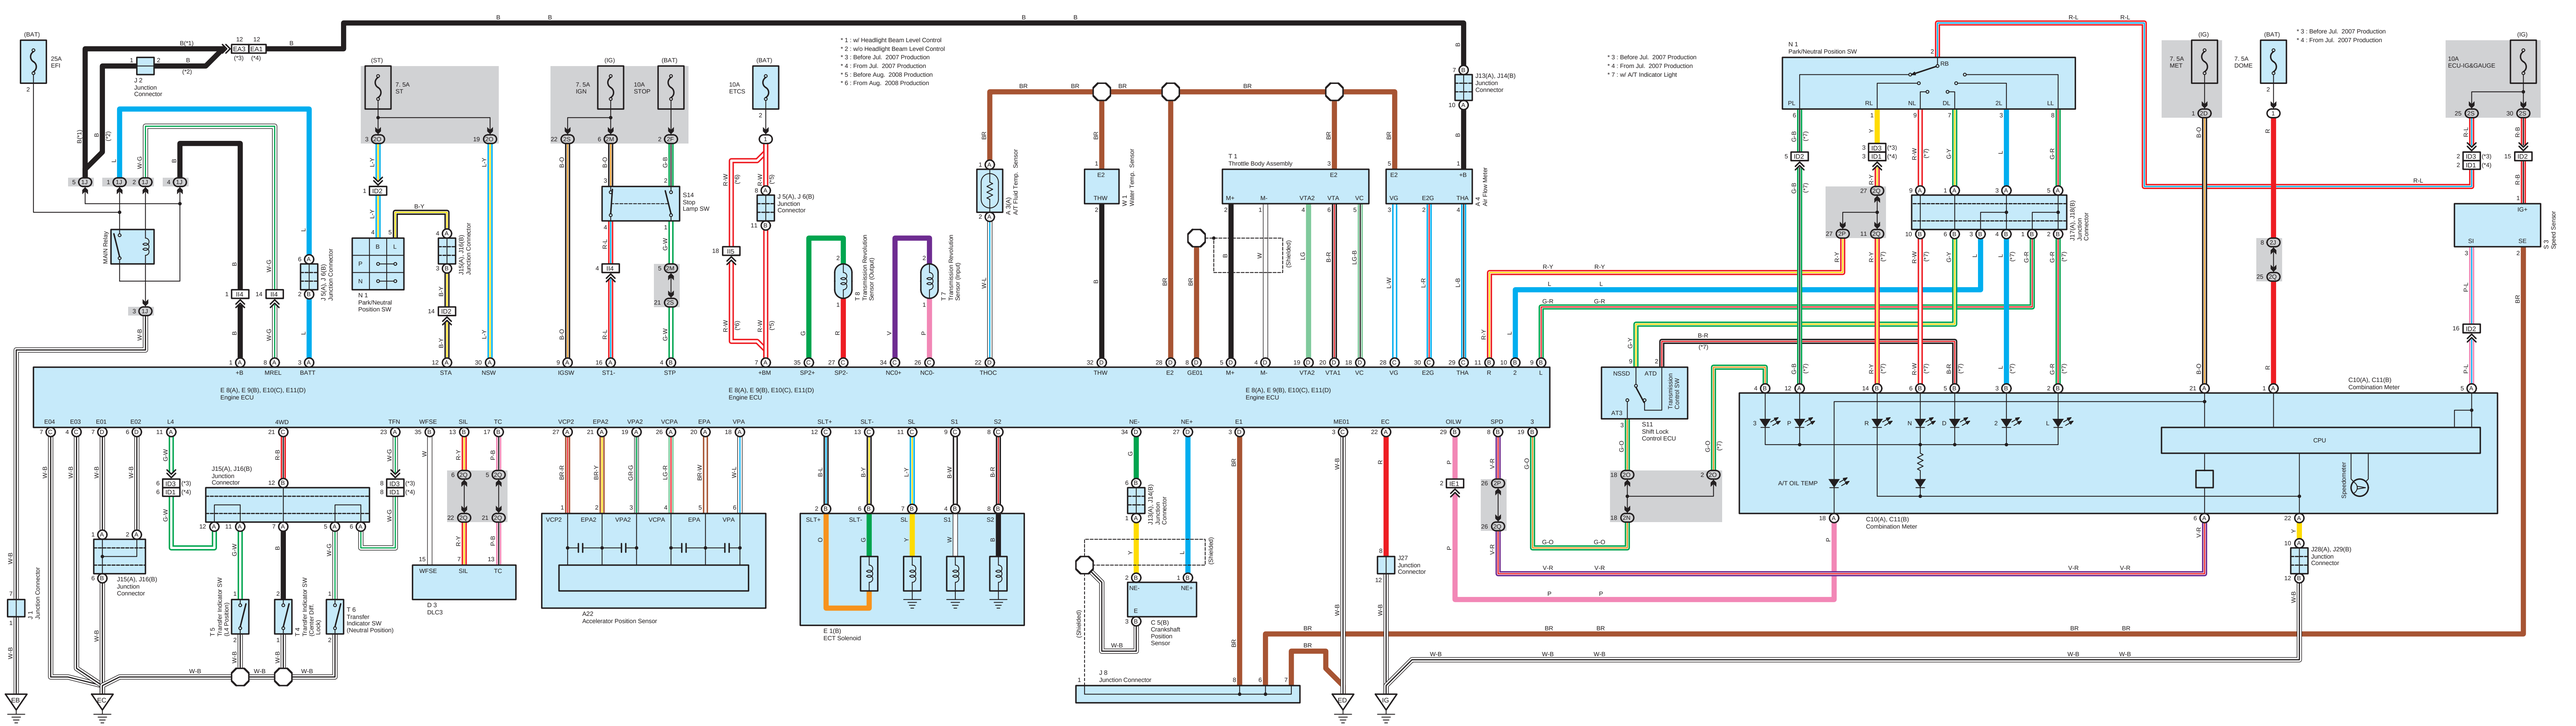

* 1 : w/ Headlight Beam Level Control
* 2 : w/o Headlight Beam Level Control
* 3 : Before Jul. 2007 Production
* 4 : From Jul. 2007 Production
* 5 : Before Aug. 2008 Production
* 6 : From Aug. 2008 Production
* 3 : Before Jul. 2007 Production
* 4 : From Jul. 2007 Production
* 7 : w/ A/T Indicator Light
(BAT)
2SA EFI
J 2 Junction Connector
MAIN Relay
(ST)
7.5A ST
(IG)
7.5A IGN
10A STOP
10A ETCS
10A ECU-IG&GAUGE
7.5A MET
7.5A DOME
N 1 Park/Neutral Position SW
S14 Stop Lamp SW
J 5(A), J 6(B) Junction Connector
T 1 Throttle Body Assembly
A/T Fluid Temps Sensor
W Water Temps Sensor
A/T Vehicle Speed Sensor
A/T Transmission Revolution Sensor (Output)
A/T Transmission Revolution Sensor (Input)
A/T Air Flow Meter
J13(A), J14(B) Junction Connector
J 4(A), J 5(B) Junction Connector
J 3(A), J 6(B) Junction Connector
J 2(A), J 3(B) Junction Connector
J 1(A), J 2(B) Junction Connector
E 8(A), E 9(B), E10(C), E11(D) Engine ECU
E 8(A), E 9(B), E10(C), E11(D) Engine ECU
E 8(A), E 9(B), E10(C), E11(D) Engine ECU
NSS0
ATD
S11 Shift Lock Control ECU
Transmission Control Switch
A/T OIL TEMP
C10(A), C11(B) Combination Meter
CPU
Speedometer
J28(A), J29(B) Junction Connector
J15(A), J16(B) Junction Connector
T 5 Transfer Indicator SW (4L Position)
T 4 Transfer Indicator SW (Center Diff. Lock)
T 6 Transfer Indicator SW (Neutral Position)
D 3 DLC3
A22 Accelerator Position Sensor
E 1(B) ECT Solenoid
C 5(B) Crankshaft Position Sensor
J 8 Junction Connector
227 Junction Connector
S23 Speed Sensor
+B
MREL
BATT
STA
NSW
IGSW
ST1-
STP
+BM
SP2+
SP2-
NCO+
NCO-
THOC
THW
E2
OE01
M+
M-
VTA2
VTA
VC
VG
E2G
THA
R
L
E04
E03
E01
E02
L4
4WD
TFN
WFSE
SIL
TC
VCP2
EPA2
VPA2
VCPA
EPA
VPA
SLT+
SLT-
SI
S1
S2
NE-
NE+
E1
ME01
EC
OIW
SPD
(Shielded)
(Divided)