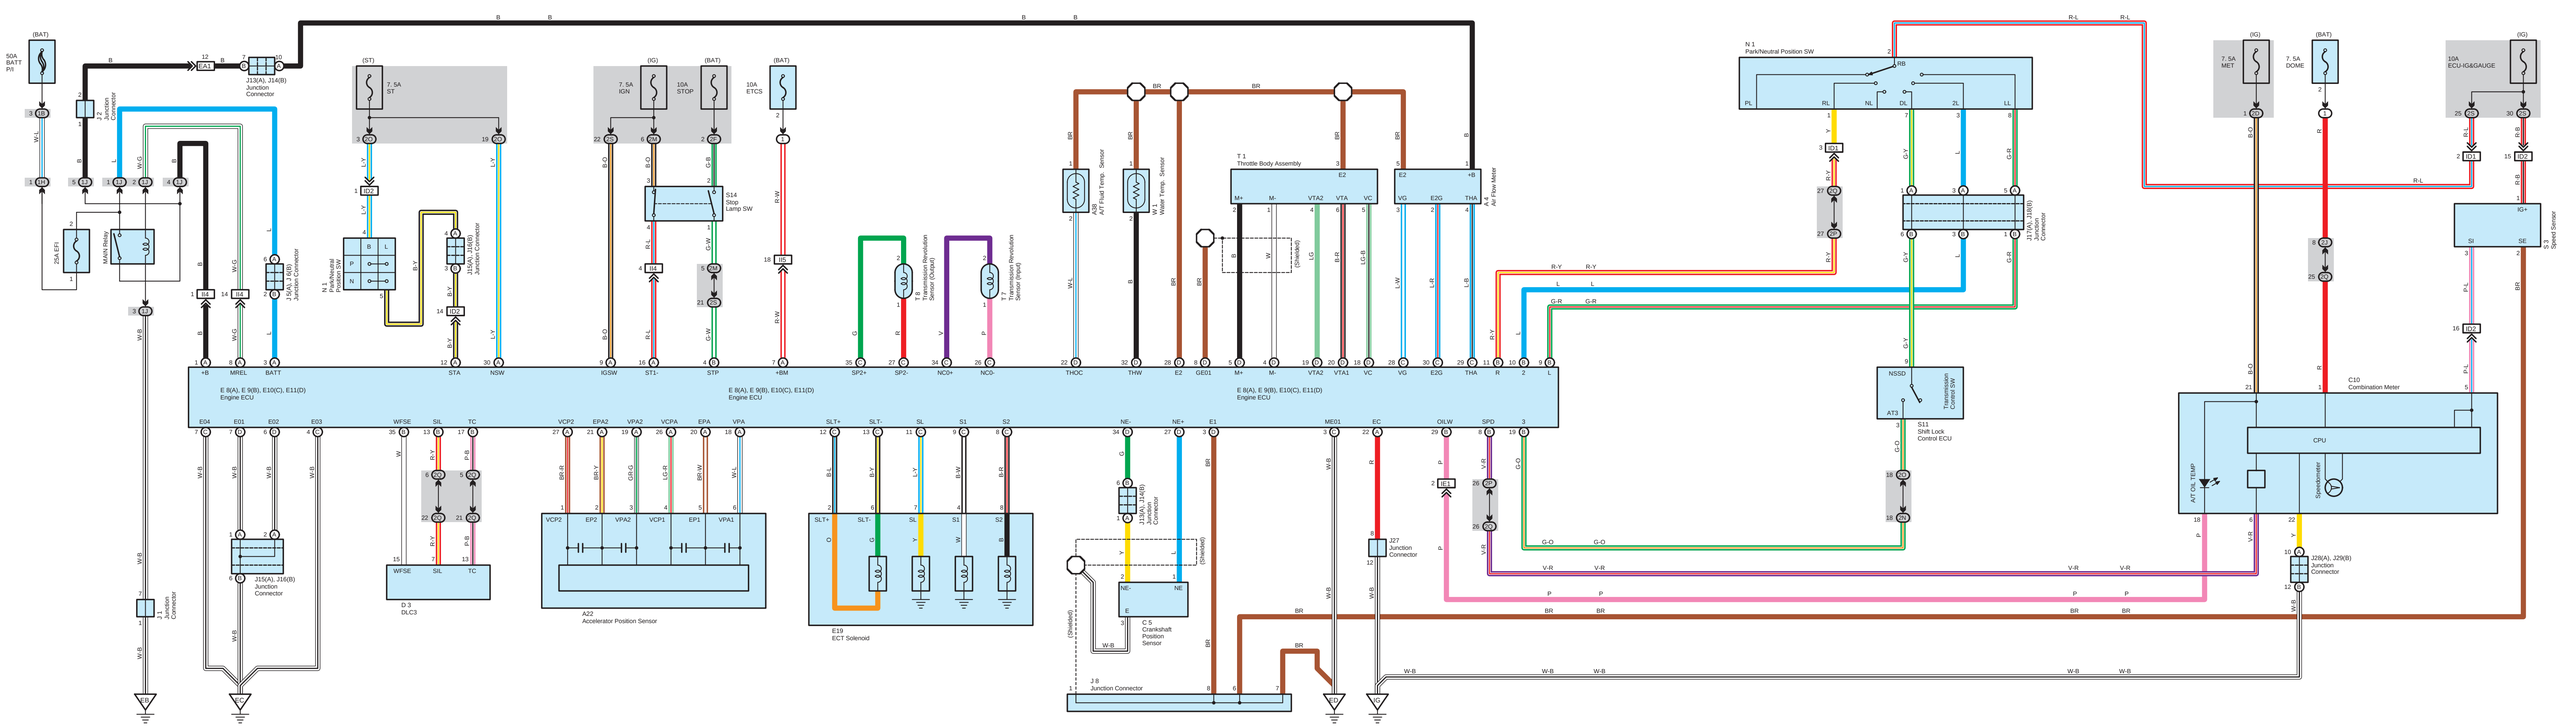

50A BATT P/I
(BAT)
J Junction Connector
J13(A), J14(B) Junction Connector
(ST)
7.5A ST
(IG)
7.5A IGN
10A STOP
(BAT)
10A ETCS
(BAT)
25A EFI
MAIN Relay
N-1 Park/Neutral Position SW
S14 Stop Lamp SW
A23 Intake Temp. Sensor
W-1 Water Temp. Sensor
T-1 Throttle Body Assembly
E2
M+
M-
VTA2
VTA
VC
VG
E2G
THA
A-1 Air Flow Meter
J15(A), J16(B) Junction Connector
+B
MREL
BATT
IGSW
ST1-
STP
+BM
SPS+
SPS-
NC0+
NC0-
THOC
THW
E2
GE01
M+
M-
VTA2
VTA1
VC
VG
E2G
THA
R
2
L
E 8(A), E 9(B), E10(C), E11(D) Engine ECU
E04
E01
E02
E03
WFSE
SIL
TC
VCP2
EPA2
VPA2
VCPA
EPA
VPA
SLT+
SLT-
SL
S1
S2
NE-
NE+
E1
MEI01
IEC
OLW
SPS
3
D 3 DLC3
A22 Accelerator Position Sensor
E19 ECT Solenoid
C 5 Crankshaft Position Sensor
J 8 Junction Connector
J27 Junction Connector
J15(A), J16(B) Junction Connector
J 1 Junction Connector
NSSD
AT3
Transmission Control SW
S11 Shift Lock Control ECU
7.5A MET
7.5A DOME
10A ECU-IG&IG/AUGE
(IG)
(BAT)
(IG)
C10 Combination Meter
CPU
Speedometer
A/T OIL TEMP
J228(A), J229(B) Junction Connector
Speed Sensor
IG+
SI
SE
(Shielded)
W-B
B-O
R
R-L
R-Y
L
G-R
G-Y
G-O
V-R
P
BR