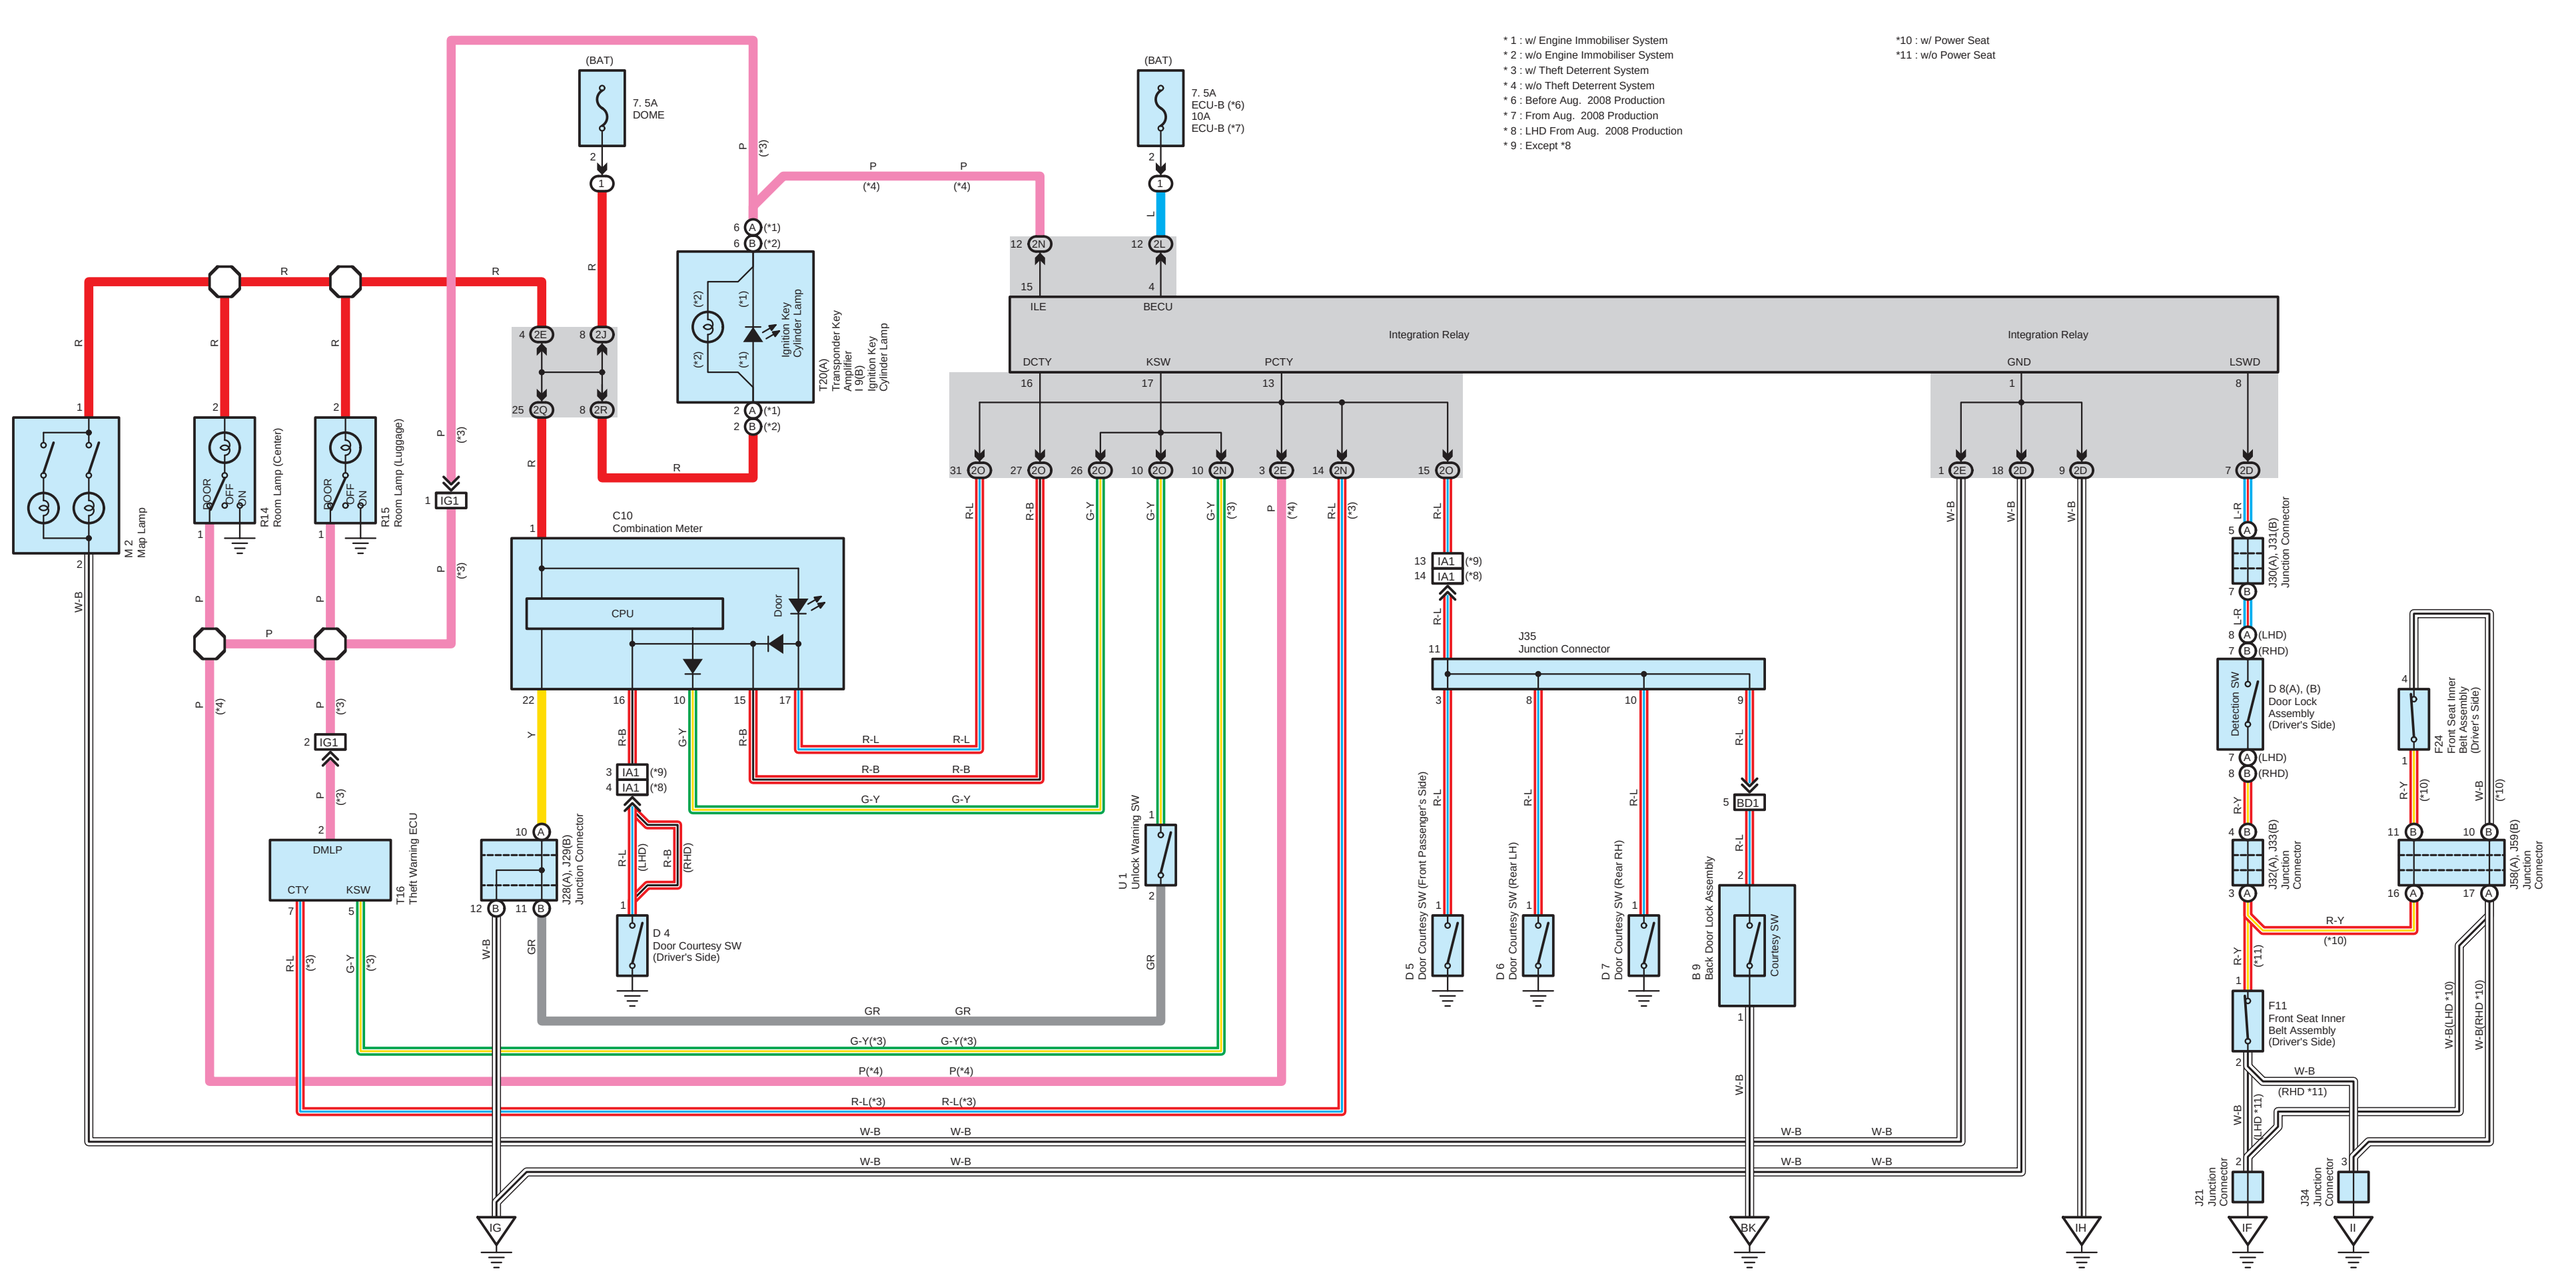

* 1 : w/ Engine Immobiliser System
* 2 : w/o Engine Immobiliser System
* 3 : w/ Theft Deterrent System
* 4 : w/o Theft Deterrent System
* 6 : Before Aug. 2008 Production
* 7 : From Aug. 2008 Production
* 8 : LHD From Aug. 2008 Production
* 9 : Except *8
*10 : w/ Power Seat
*11 : w/o Power Seat
(BAT)
7. 5A
DOME
7. 5A
ECU-B (*6)
10A
ECU-B (*7)
Integration Relay
ILE
BECU
DCTY
KSW
PCTY
GND
LSWD
Ignition Key
Cylinder Lamp
T20(A)
Transponder Key
Amplifier
I 9(B)
Ignition Key
Cylinder Lamp
M 2
Map Lamp
R14
Room Lamp (Center)
R15
Room Lamp (Luggage)
C10
Combination Meter
CPU
Door
DMLP
CTY
KSW
T16
Theft Warning ECU
J28(A), J29(B)
Junction Connector
D 4
Door Courtesy SW
(Driver's Side)
U 1
Unlock Warning SW
J35
Junction Connector
D 5
Door Courtesy SW (Front Passenger's Side)
D 6
Door Courtesy SW (Rear LH)
D 7
Door Courtesy SW (Rear RH)
B 9
Back Door Lock Assembly
Courtesy SW
J30(A), J31(B)
Junction Connector
D 8(A), (B)
Door Lock
Assembly
(Driver's Side)
Detection SW
J32(A), J33(B)
Junction
Connector
F24
Front Seat Inner
Belt Assembly
(Driver's Side)
J58(A), J59(B)
Junction
Connector
F11
Front Seat Inner
Belt Assembly
(Driver's Side)
J21
Junction
Connector
J34
Junction
Connector
IG
BK
IH
IF
II