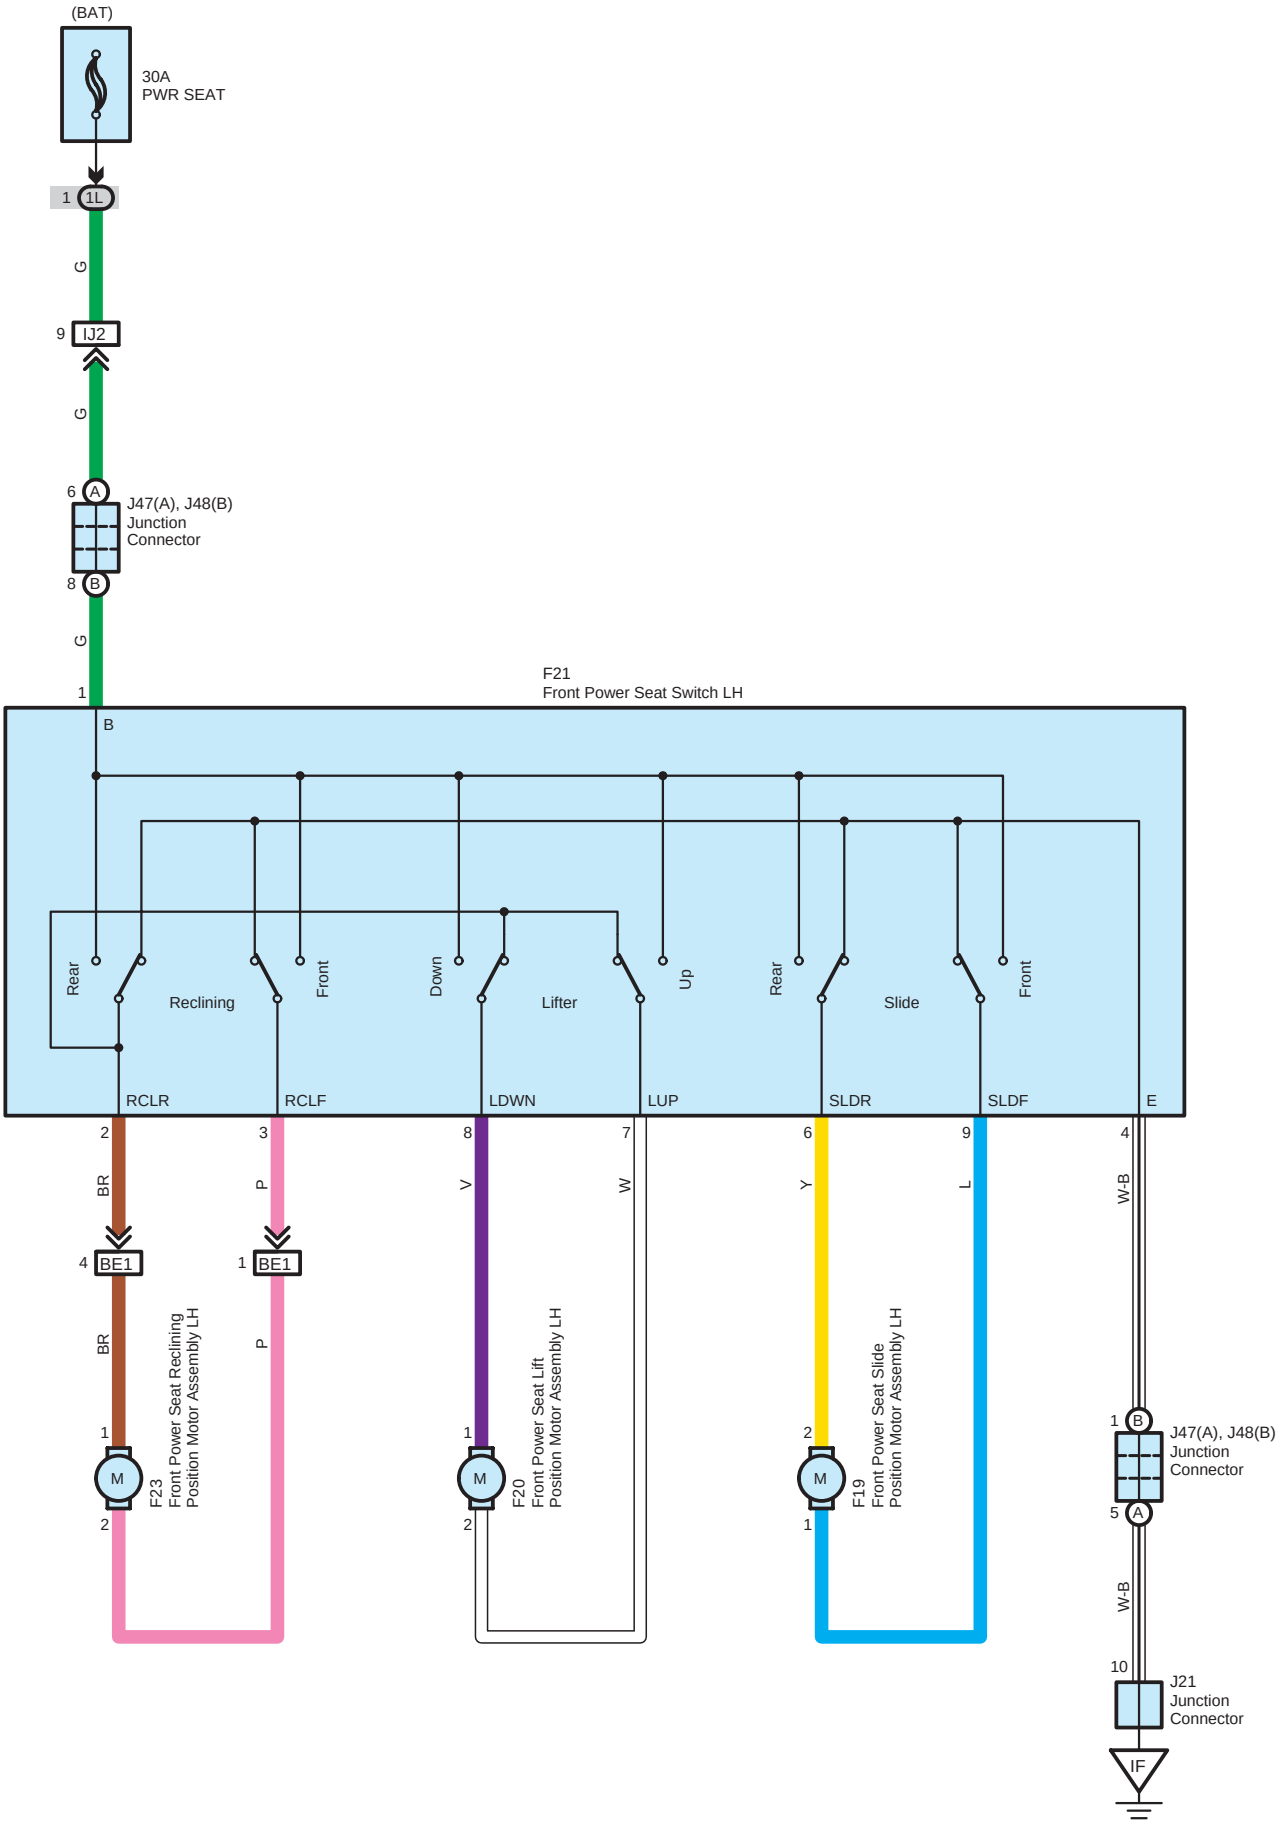

(BAT)
30A
PWR SEAT
1
1L
G
9
IJ2
G
6
A
J47(A), J48(B)
Junction
Connector
8
B
G
1
F21
Front Power Seat Switch LH
B
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
RCLR
RCLF
LDWN
LUP
SLDR
SLDF
E
2
BR
4
BE1
BR
1
M
2
F23
Front Power Seat Reclining
Position Motor Assembly LH
3
P
1
BE1
P
8
V
1
M
2
F20
Front Power Seat Lift
Position Motor Assembly LH
7
W
6
Y
2
M
1
F19
Front Power Seat Slide
Position Motor Assembly LH
9
L
4
W-B
1
B
J47(A), J48(B)
Junction
Connector
5
A
W-B
10
J21
Junction
Connector
IF