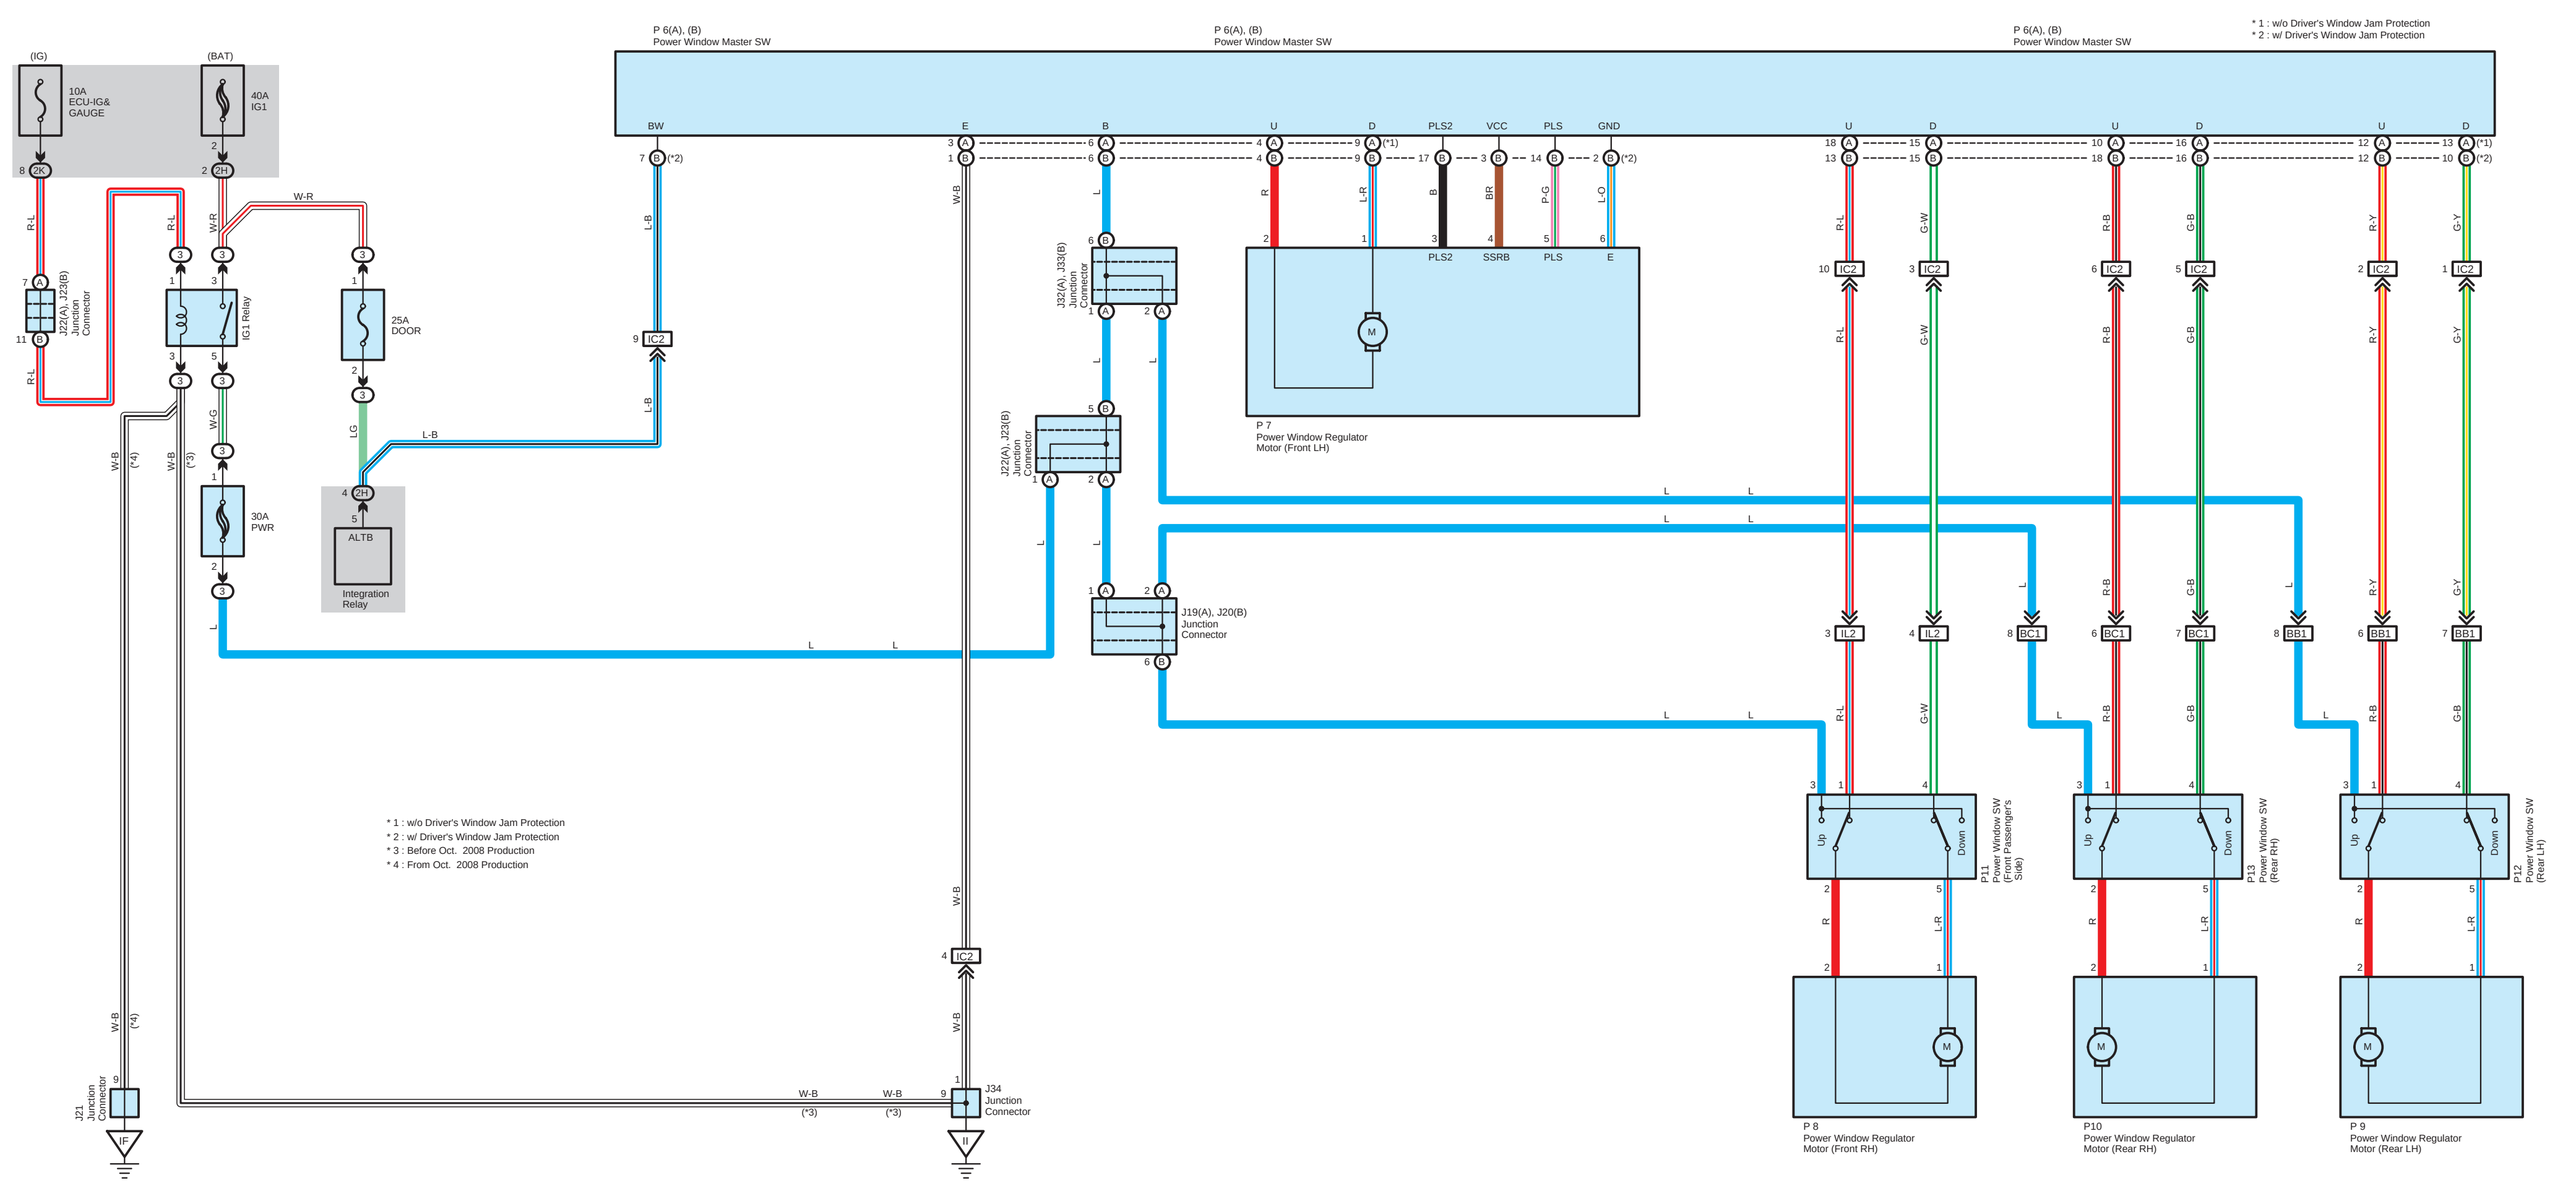

* 1 : w/o Driver's Window Jam Protection
* 2 : w/ Driver's Window Jam Protection
P 6(A), (B)
Power Window Master SW
P 6(A), (B)
Power Window Master SW
P 6(A), (B)
Power Window Master SW
(IG)
(BAT)
10A
ECU-IG&
GAUGE
40A
IG1
J22(A), J23(B)
Junction
Connector
IG1 Relay
25A
DOOR
30A
PWR
ALTB
Integration
Relay
J32(A), J33(B)
Junction
Connector
J22(A), J23(B)
Junction
Connector
J19(A), J20(B)
Junction
Connector
P 7
Power Window Regulator
Motor (Front LH)
P 8
Power Window Regulator
Motor (Front RH)
P10
Power Window Regulator
Motor (Rear RH)
P 9
Power Window Regulator
Motor (Rear LH)
P11
Power Window SW
(Front Passenger's
Side)
P13
Power Window SW
(Rear RH)
P12
Power Window SW
(Rear LH)
J21
Junction
Connector
J34
Junction
Connector
IF
II
BW
E
B
U
D
PLS2
VCC
PLS
GND
PLS2
SSRB
PLS
E
* 1 : w/o Driver's Window Jam Protection
* 2 : w/ Driver's Window Jam Protection
* 3 : Before Oct. 2008 Production
* 4 : From Oct. 2008 Production