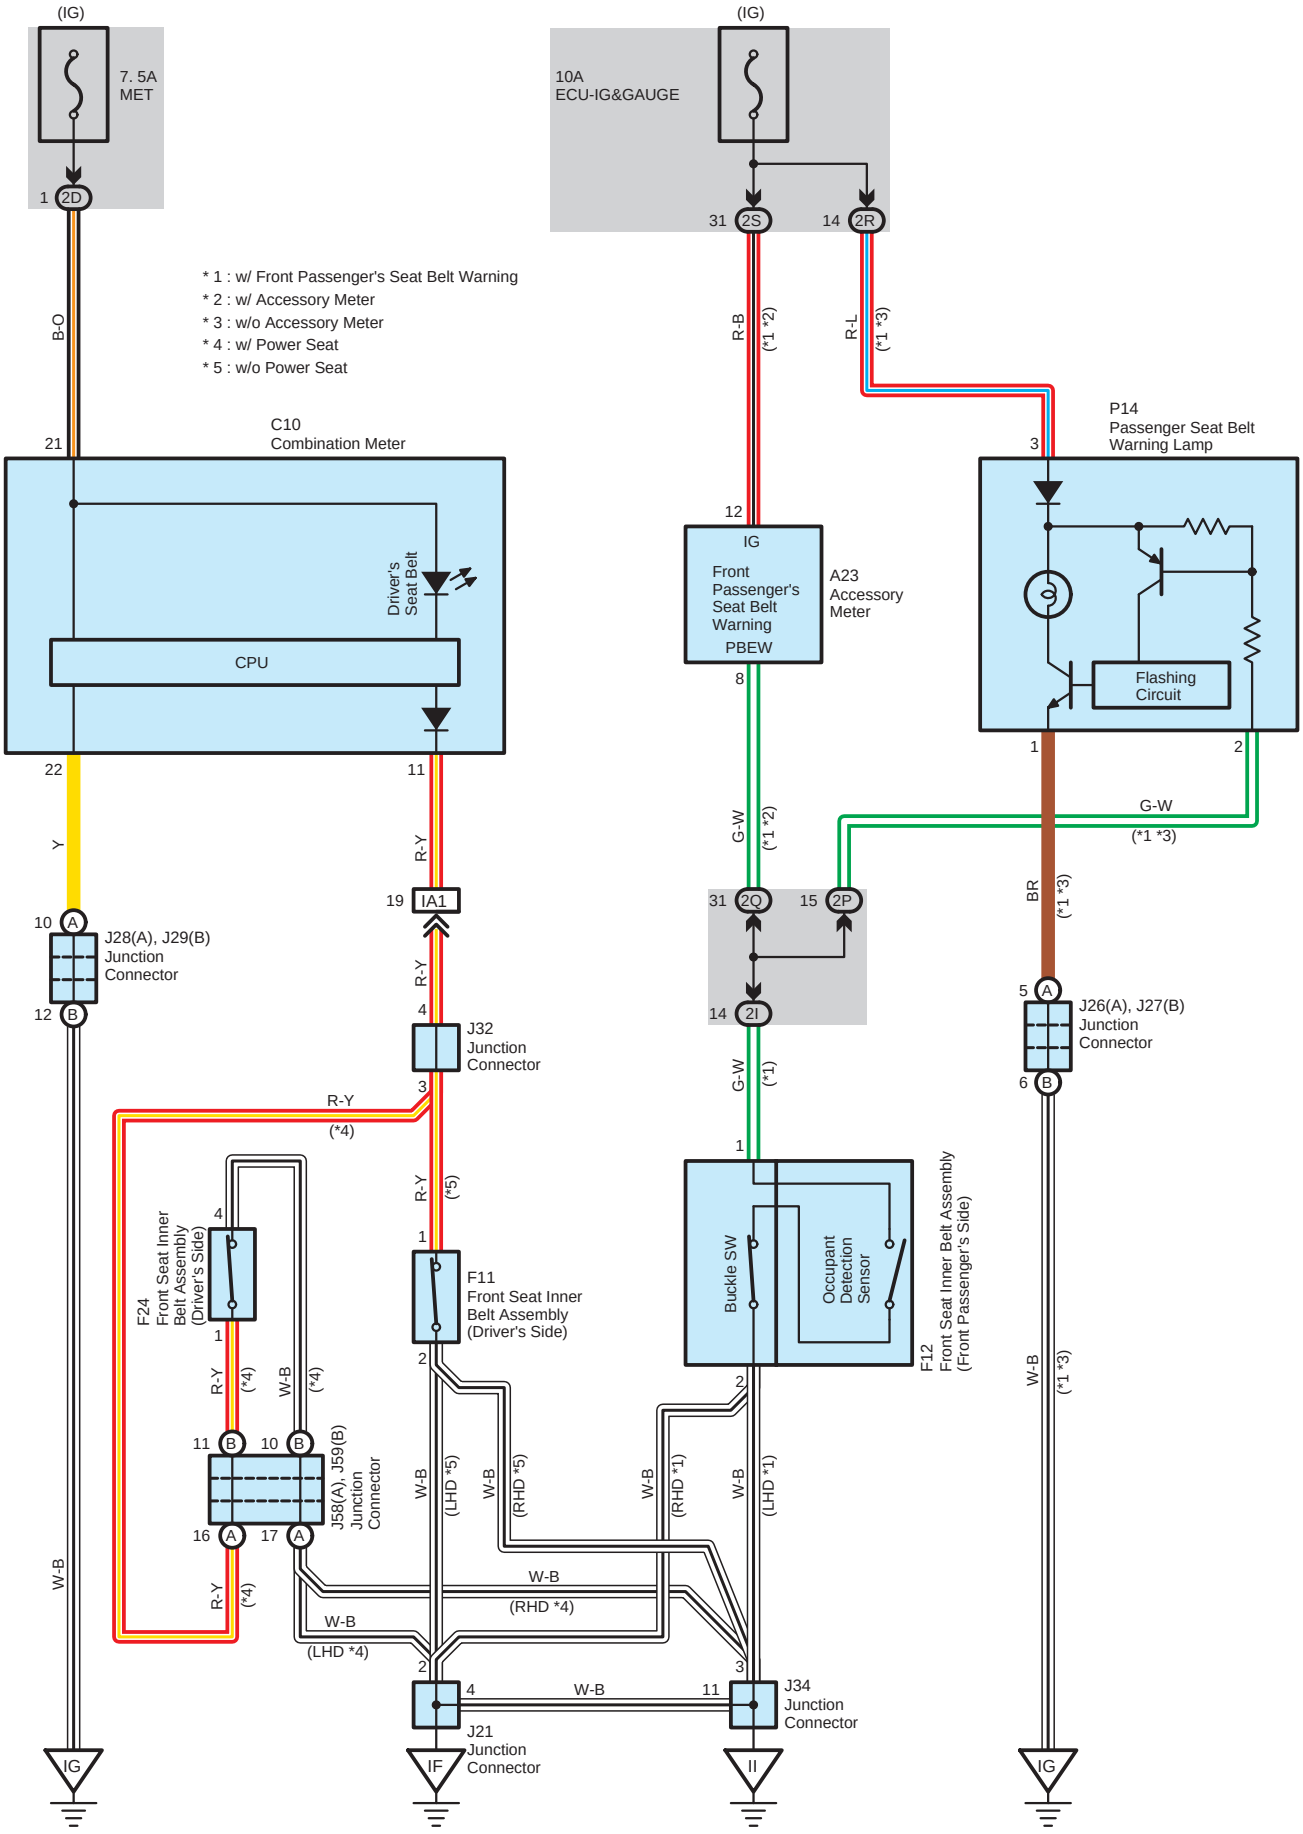

(IG)
7. 5A
MET
1
2D
B-O
21
C10
Combination Meter
Driver's
Seat Belt
CPU
22
11
Y
R-Y
19
IA1
10
A
J28(A), J29(B)
Junction
Connector
12
B
4
J32
Junction
Connector
3
R-Y
(*4)
R-Y
(*5)
F24
Front Seat Inner
Belt Assembly
(Driver's Side)
4
1
F11
Front Seat Inner
Belt Assembly
(Driver's Side)
1
2
R-Y
(*4)
W-B
(*4)
11
B
10
B
J58(A), J59(B)
Junction
Connector
16
A
17
A
W-B
W-B
(LHD *5)
W-B
(RHD *5)
W-B
(RHD *1)
W-B
(LHD *1)
R-Y
(*4)
W-B
(RHD *4)
W-B
(LHD *4)
2
3
4
W-B
11
J34
Junction
Connector
J21
Junction
Connector
IG
IF
II
IG
* 1 : w/ Front Passenger's Seat Belt Warning
* 2 : w/ Accessory Meter
* 3 : w/o Accessory Meter
* 4 : w/ Power Seat
* 5 : w/o Power Seat
(IG)
10A
ECU-IG&GAUGE
31
2S
14
2R
R-B
(*1 *2)
R-L
(*1 *3)
12
IG
Front
Passenger's
Seat Belt
Warning
PBEW
A23
Accessory
Meter
8
G-W
(*1 *2)
31
2Q
15
2P
14
2I
G-W
(*1)
1
Buckle SW
Occupant
Detection
Sensor
2
F12
Front Seat Inner Belt Assembly
(Front Passenger's Side)
P14
Passenger Seat Belt
Warning Lamp
3
Flashing
Circuit
1
2
G-W
(*1 *3)
BR
(*1 *3)
5
A
J26(A), J27(B)
Junction
Connector
6
B
W-B
(*1 *3)
IG