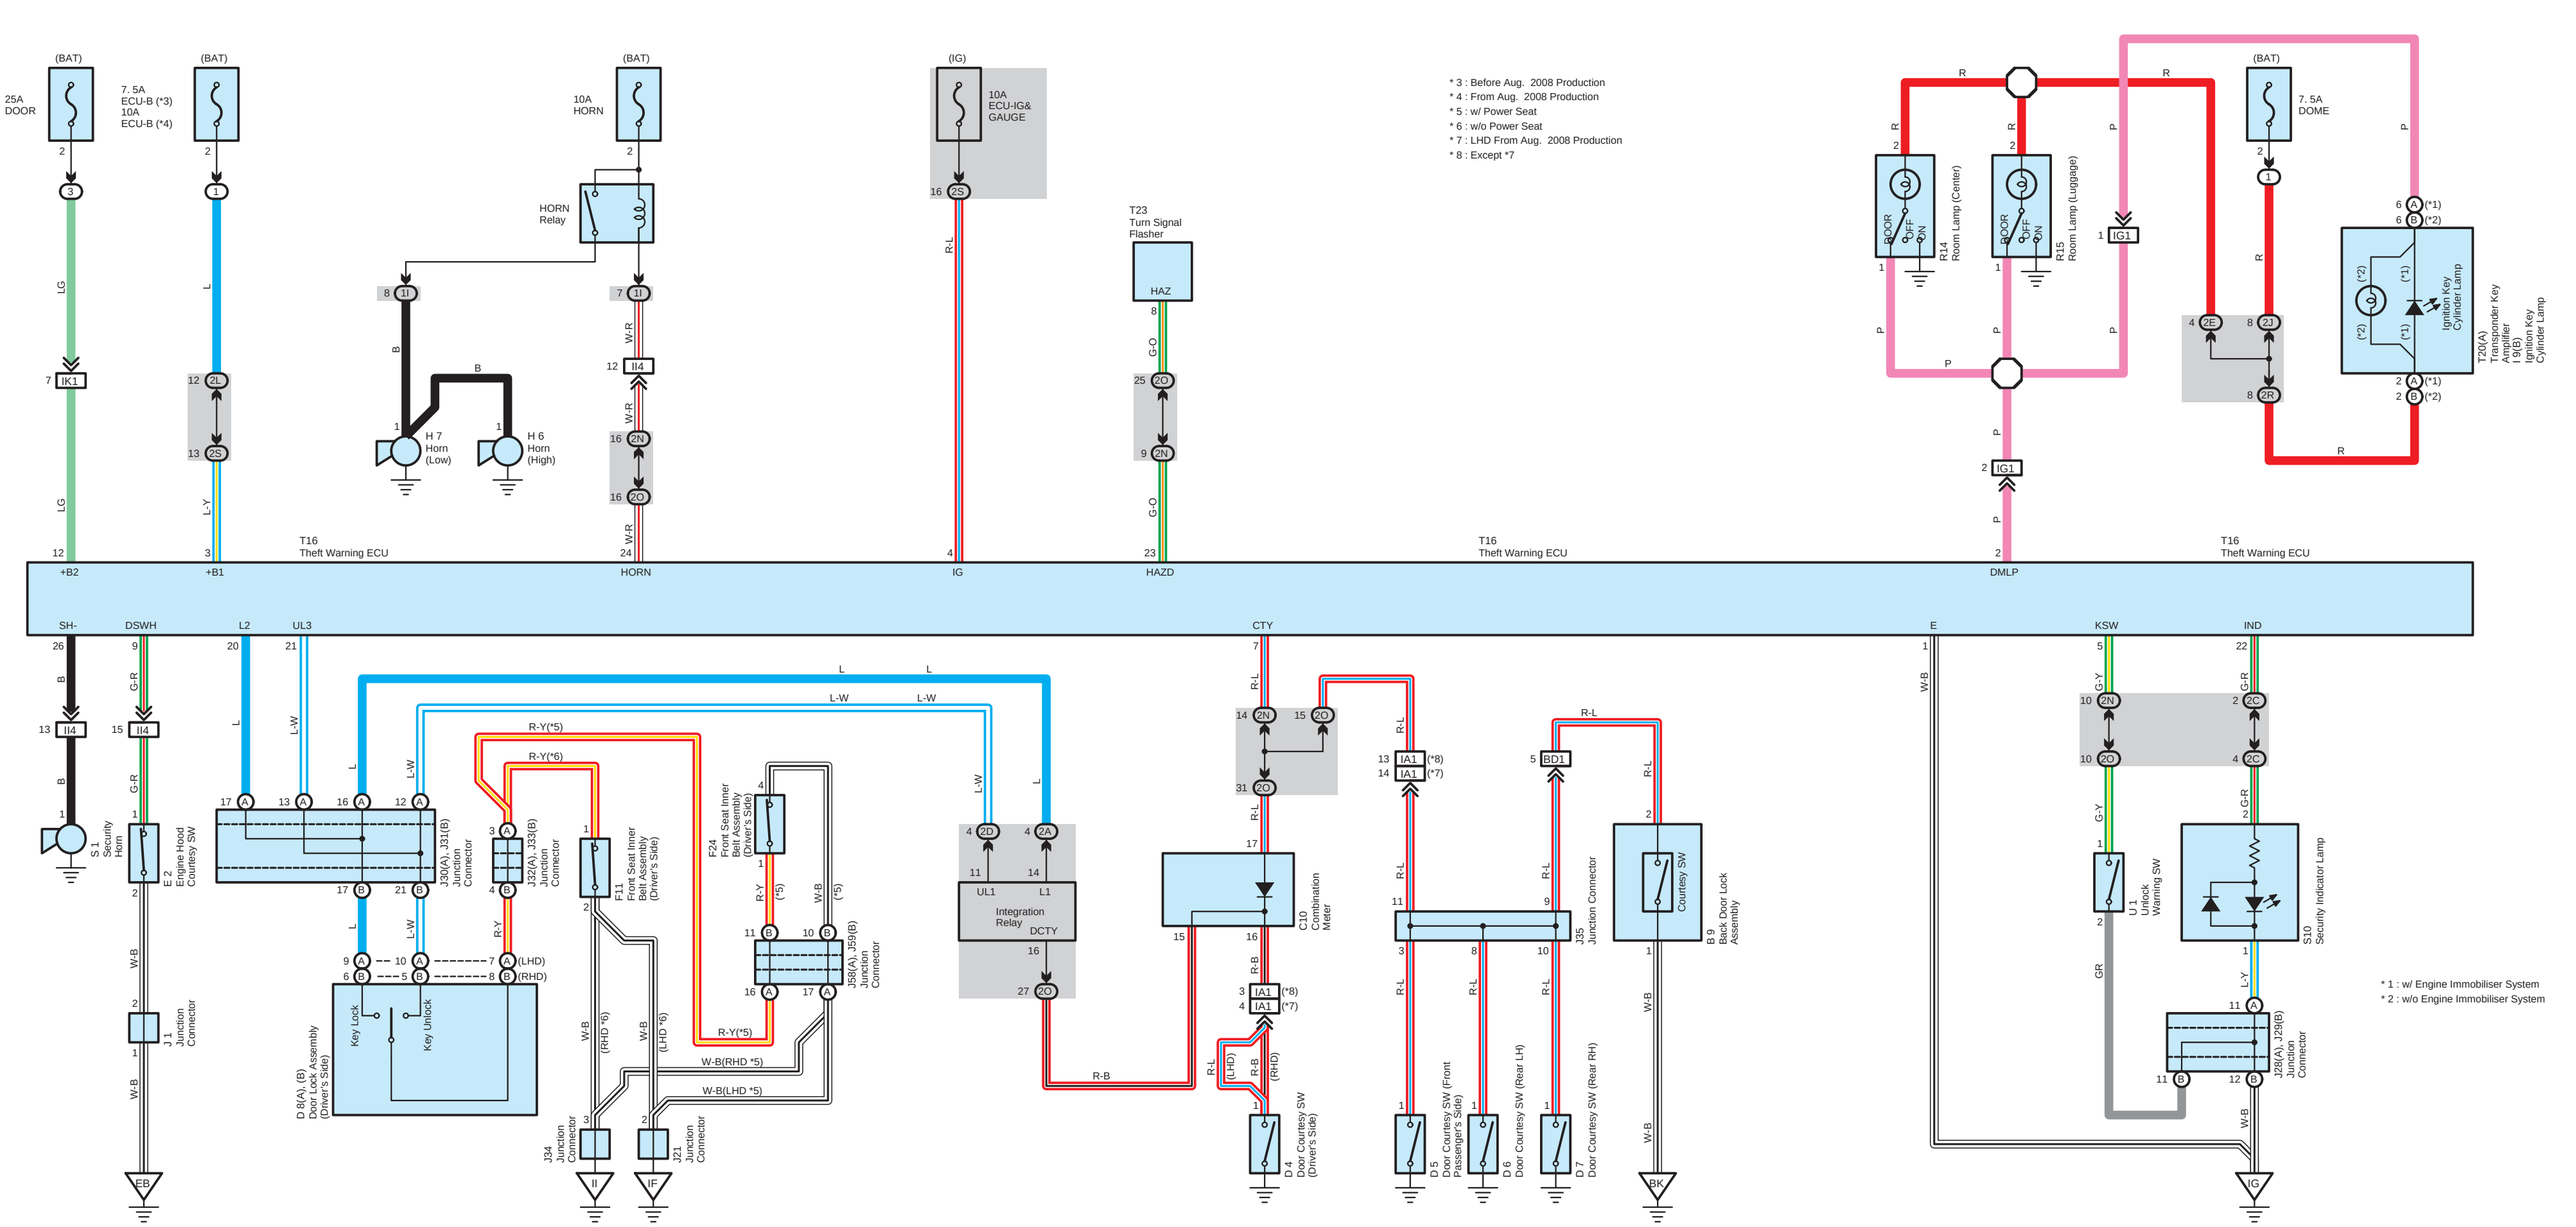

(BAT)
25A DOOR
7. 5A ECU-B (*3) 10A ECU-B (*4)
10A HORN
HORN Relay
H 7 Horn (Low)
H 6 Horn (High)
(IG)
10A ECU-IG& GAUGE
T23 Turn Signal Flasher
* 3 : Before Aug. 2008 Production
* 4 : From Aug. 2008 Production
* 5 : w/ Power Seat
* 6 : w/o Power Seat
* 7 : LHD From Aug. 2008 Production
* 8 : Except *7
R14 Room Lamp (Center)
R15 Room Lamp (Luggage)
7. 5A DOME
T20(A) Transponder Key Amplifier
Ignition Key Cylinder Lamp
T16 Theft Warning ECU
+B2
+B1
HORN
IG
HAZD
DMLP
SH-
DSWH
L2
UL3
CTY
E
KSW
IND
S 1 Security Horn
E 2 Engine Hood Courtesy SW
J11 Junction Connector
J30(A), J31(B) Junction Connector
J32(A), J33(B) Junction Connector
F11 Front Seat Inner Belt Assembly (Driver's Side)
F24 Front Seat Inner Belt Assembly (Driver's Side)
J58(A), J59(B) Junction Connector
Integration Relay
DCTY
C10 Combination Meter
D 8(A), (B) Door Lock Assembly (Driver's Side)
Key Lock
Key Unlock
J34 Junction Connector
J21 Junction Connector
D 4 Door Courtesy SW (Driver's Side)
D 5 Door Courtesy SW (Front Passenger's Side)
D 6 Door Courtesy SW (Rear LH)
D 7 Door Courtesy SW (Rear RH)
J35 Junction Connector
B 9 Back Door Lock Assembly
U 1 Unlock Warning SW
S10 Security Indicator Lamp
J28(A), J29(B) Junction Connector
EB
IF
II
BK
IG
R-Y(*5)
R-Y(*6)
W-B(RHD *5)
W-B(LHD *5)
* 1 : w/ Engine Immobiliser System
* 2 : w/o Engine Immobiliser System