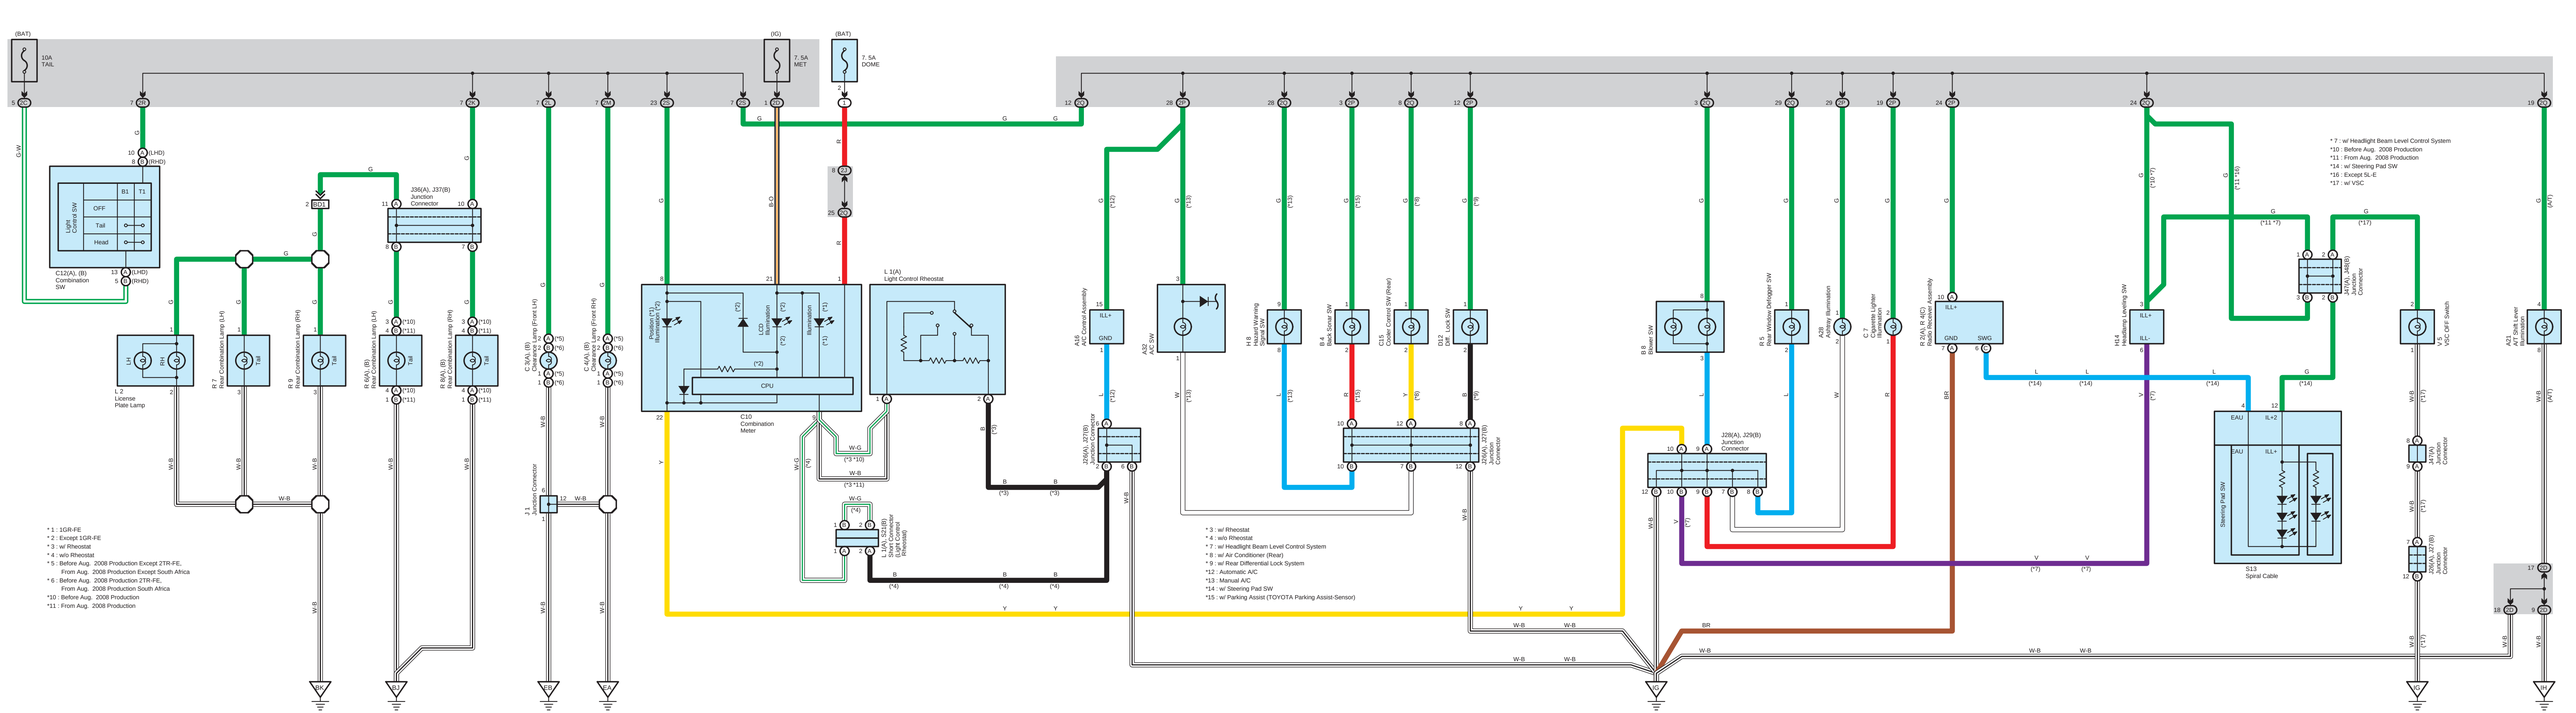

(BAT)
10A TAIL
(IG)
7.5A MET
(BAT)
7.5A DOME
C12(A), (B) Combination SW
Light Control SW
OFF
Tail
Head
B1
T1
L 2 License Plate Lamp
R 7 Rear Combination Lamp (LH)
R 9 Rear Combination Lamp (RH)
R 8(A), (B) Rear Combination Lamp (LH)
R 8(A), (B) Rear Combination Lamp (RH)
J36(A), J37(B) Junction Connector
C 5(A), (B) Clearance Lamp (Front LH)
C 4(A), (B) Clearance Lamp (Front RH)
J 1 Junction Connector
C10 Combination Meter
Position [*1] Indicator [*2]
LCD Illumination
Illumination
CPU
L 1(A) Light Control Rheostat
J1(A), J2(B) Junction Connector
Light Control Rheostat
A16 A/C Control Assembly
A32 A/C SW
J26(A), J27(B) Junction Connector
H1 Hazard Warning Signal SW
B1 Back Door Courtesy SW
C15 Cowl Control SW (Rear)
D12 Diff. Lock SW
J34(A), J35(B) Junction Connector
B1 B Back SW
R 5 Rear Window Defogger SW
R5 Ashtray Illumination
C 7 Cigarette Lighter Illumination
J39(A), J29(B) Junction Connector
R 2(A), R 4(C) Rear Wiper Motor Assembly
H45 Headlamp Leveling SW
J4(A), J40(B) Junction Connector
Steering Pad SW
S13 Spiral Cable
A21 Shift Lever Illumination
V5 VSC OFF Switch
J5(A), J41(B) Junction Connector
J3(A), J4(B) Junction Connector
J5(A), J37(B) Junction Connector
* 1 : 1GR-FE
* 2 : Except 1GR-FE
* 3 : w/ Rheostat
* 4 : w/o Rheostat
* 5 : Before Aug. 2008 Production Except 2TR-FE, From Aug. 2008 Production Except South Africa
* 6 : Before Aug. 2008 Production 2TR-FE, From Aug. 2008 Production South Africa
*10 : Before Aug. 2008 Production
*11 : From Aug. 2008 Production
* 3 : w/ Rheostat
* 4 : w/o Rheostat
* 7 : w/ Headlight Beam Level Control System
* 8 : w/ Air Conditioner (Rear)
* 9 : w/ Rear Differential Lock System
*12 : Automatic A/C
*13 : Manual A/C
*14 : w/ Steering Pad SW
*15 : w/ Parking Assist (TOYOTA Parking Assist-Sensor)
* 7 : w/ Headlight Beam Level Control System
*10 : Before Aug. 2008 Production
*11 : From Aug. 2008 Production
*14 : w/ Steering Pad SW
*16 : Except 5L-E
*17 : w/ VSC