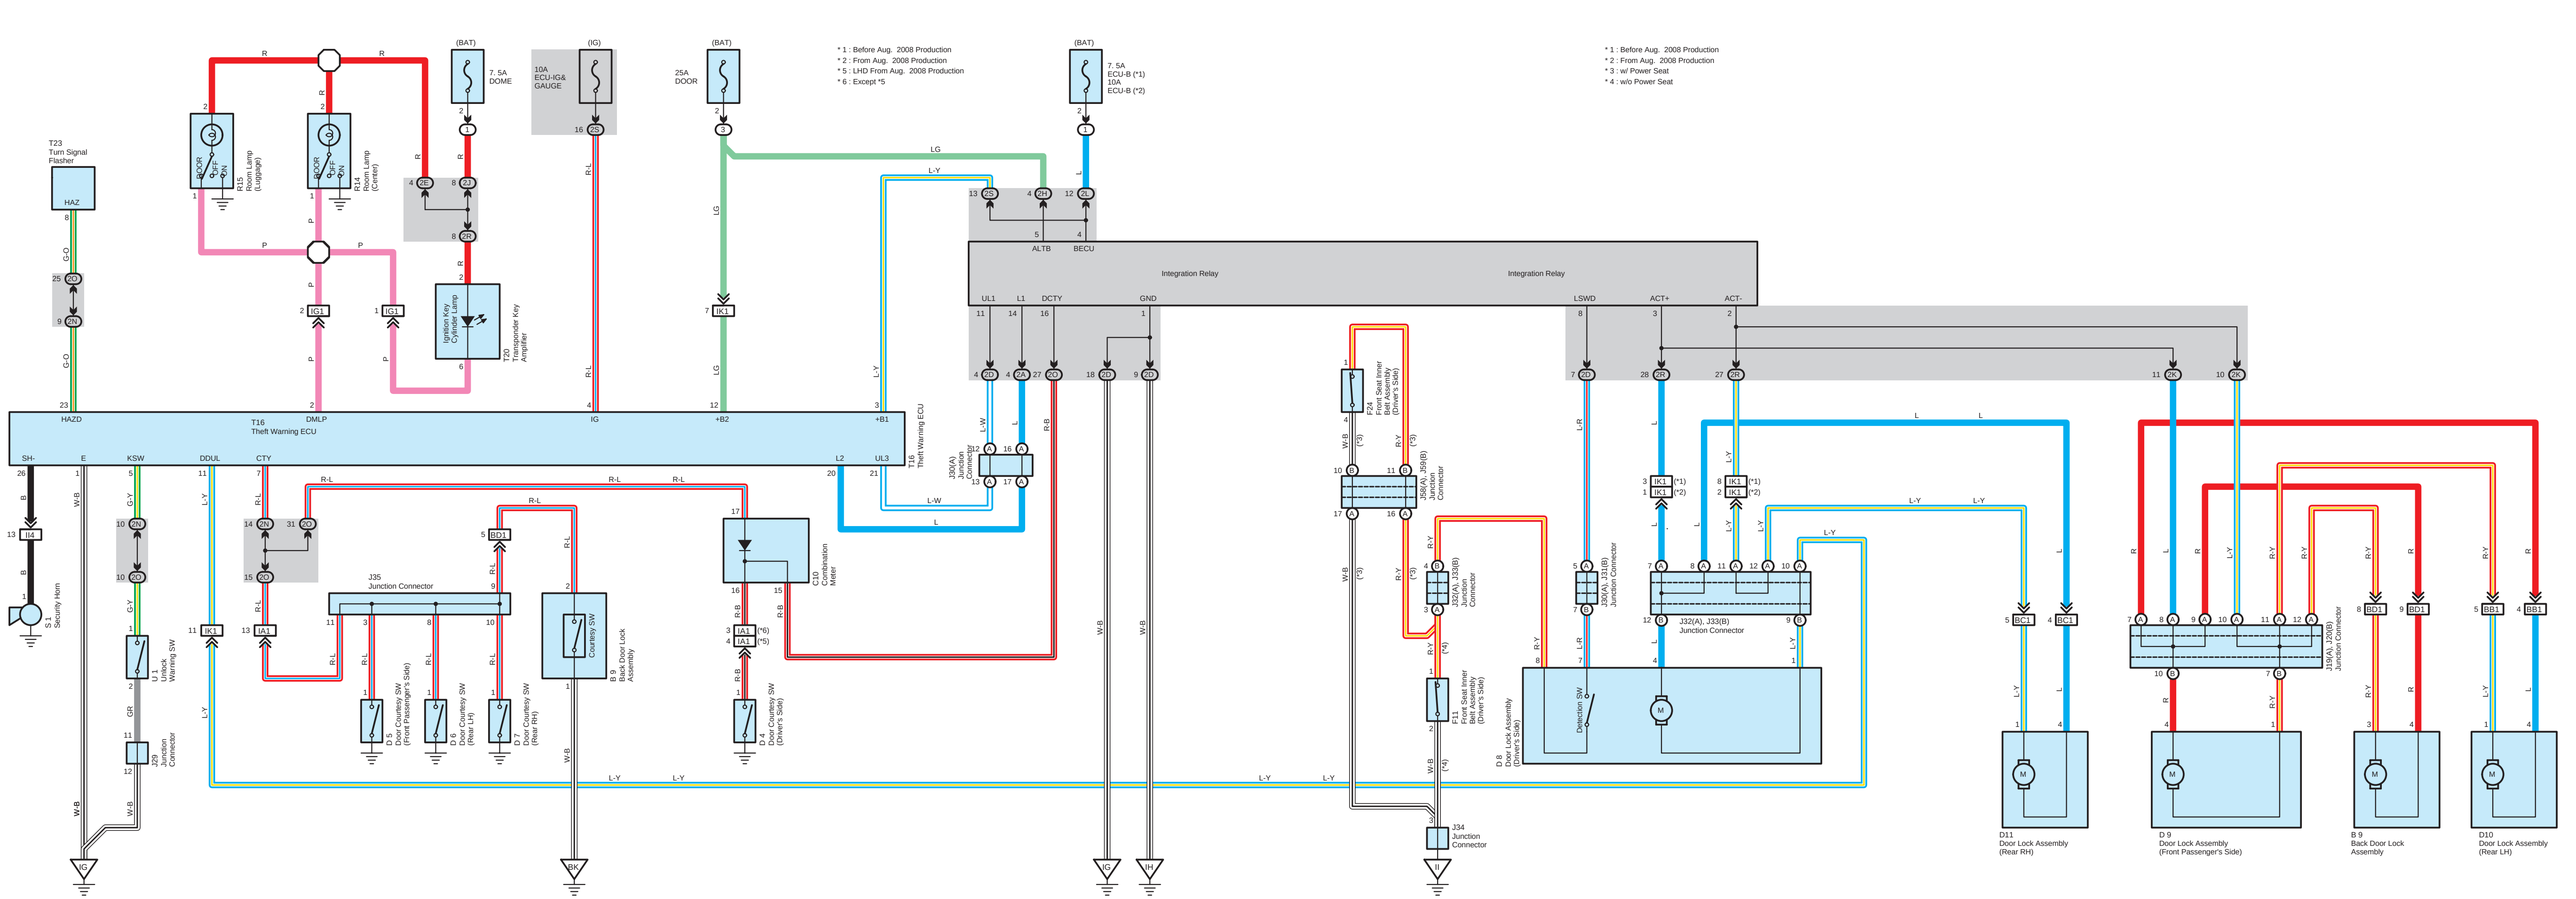

* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
* 5 : LHD From Aug. 2008 Production
* 6 : Except *5
* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
* 3 : w/ Power Seat
* 4 : w/o Power Seat
T23 Turn Signal Flasher
HAZ
R15 Room Lamp (Luggage)
R14 Room Lamp (Cornering)
DOOR SW
OFF
ON
(BAT)
7. 5A DOME
(IG)
10A ECU-IG& GAUGE
25A DOOR
7. 5A ECU-B (*1) 10A ECU-B (*2)
Ignition Key Cylinder Lamp
T20 Transponder Key Amplifier
ALTB
BECU
Integration Relay
UL1
L1
DCTY
GND
LSWD
ACT+
ACT-
T16 Theft Warning ECU
HAZD
DMLP
IG
+B2
+B1
J36(A) Junction Connector
J58(A), J59(B) Junction Connector
F24 Front Seat Inner Belt Assembly (Driver's Side)
F11 Front Seat Inner Belt Assembly (Front Passenger's Side)
J34 Junction Connector
J34(A), J35(B) Junction Connector
J33(A), J31(B) Junction Connector
J32(A), J33(B) Junction Connector
J19(A), J20(B) Junction Connector
D 8 Door Lock Assembly (Driver's Side)
D11 Door Lock Assembly (Rear RH)
D 9 Door Lock Assembly (Front Passenger's Side)
B 9 Back Door Lock Assembly
D10 Door Lock Assembly (Rear LH)
S 1 Security Horn
J1 Unlock Warning SW
J8 Junction Connector
J35 Junction Connector
D 5 Door Courtesy SW (Front Passenger's Side)
D 6 Door Courtesy SW (Rear LH)
D 7 Door Courtesy SW (Rear RH)
B 9 Back Door Lock Assembly
D 4 Door Courtesy SW (Driver's Side)
C10 Combination Meter
Detection SW
SH-
E
KSW
DDUL
CTY
L2
UL3
SBY
BK
W
G
M