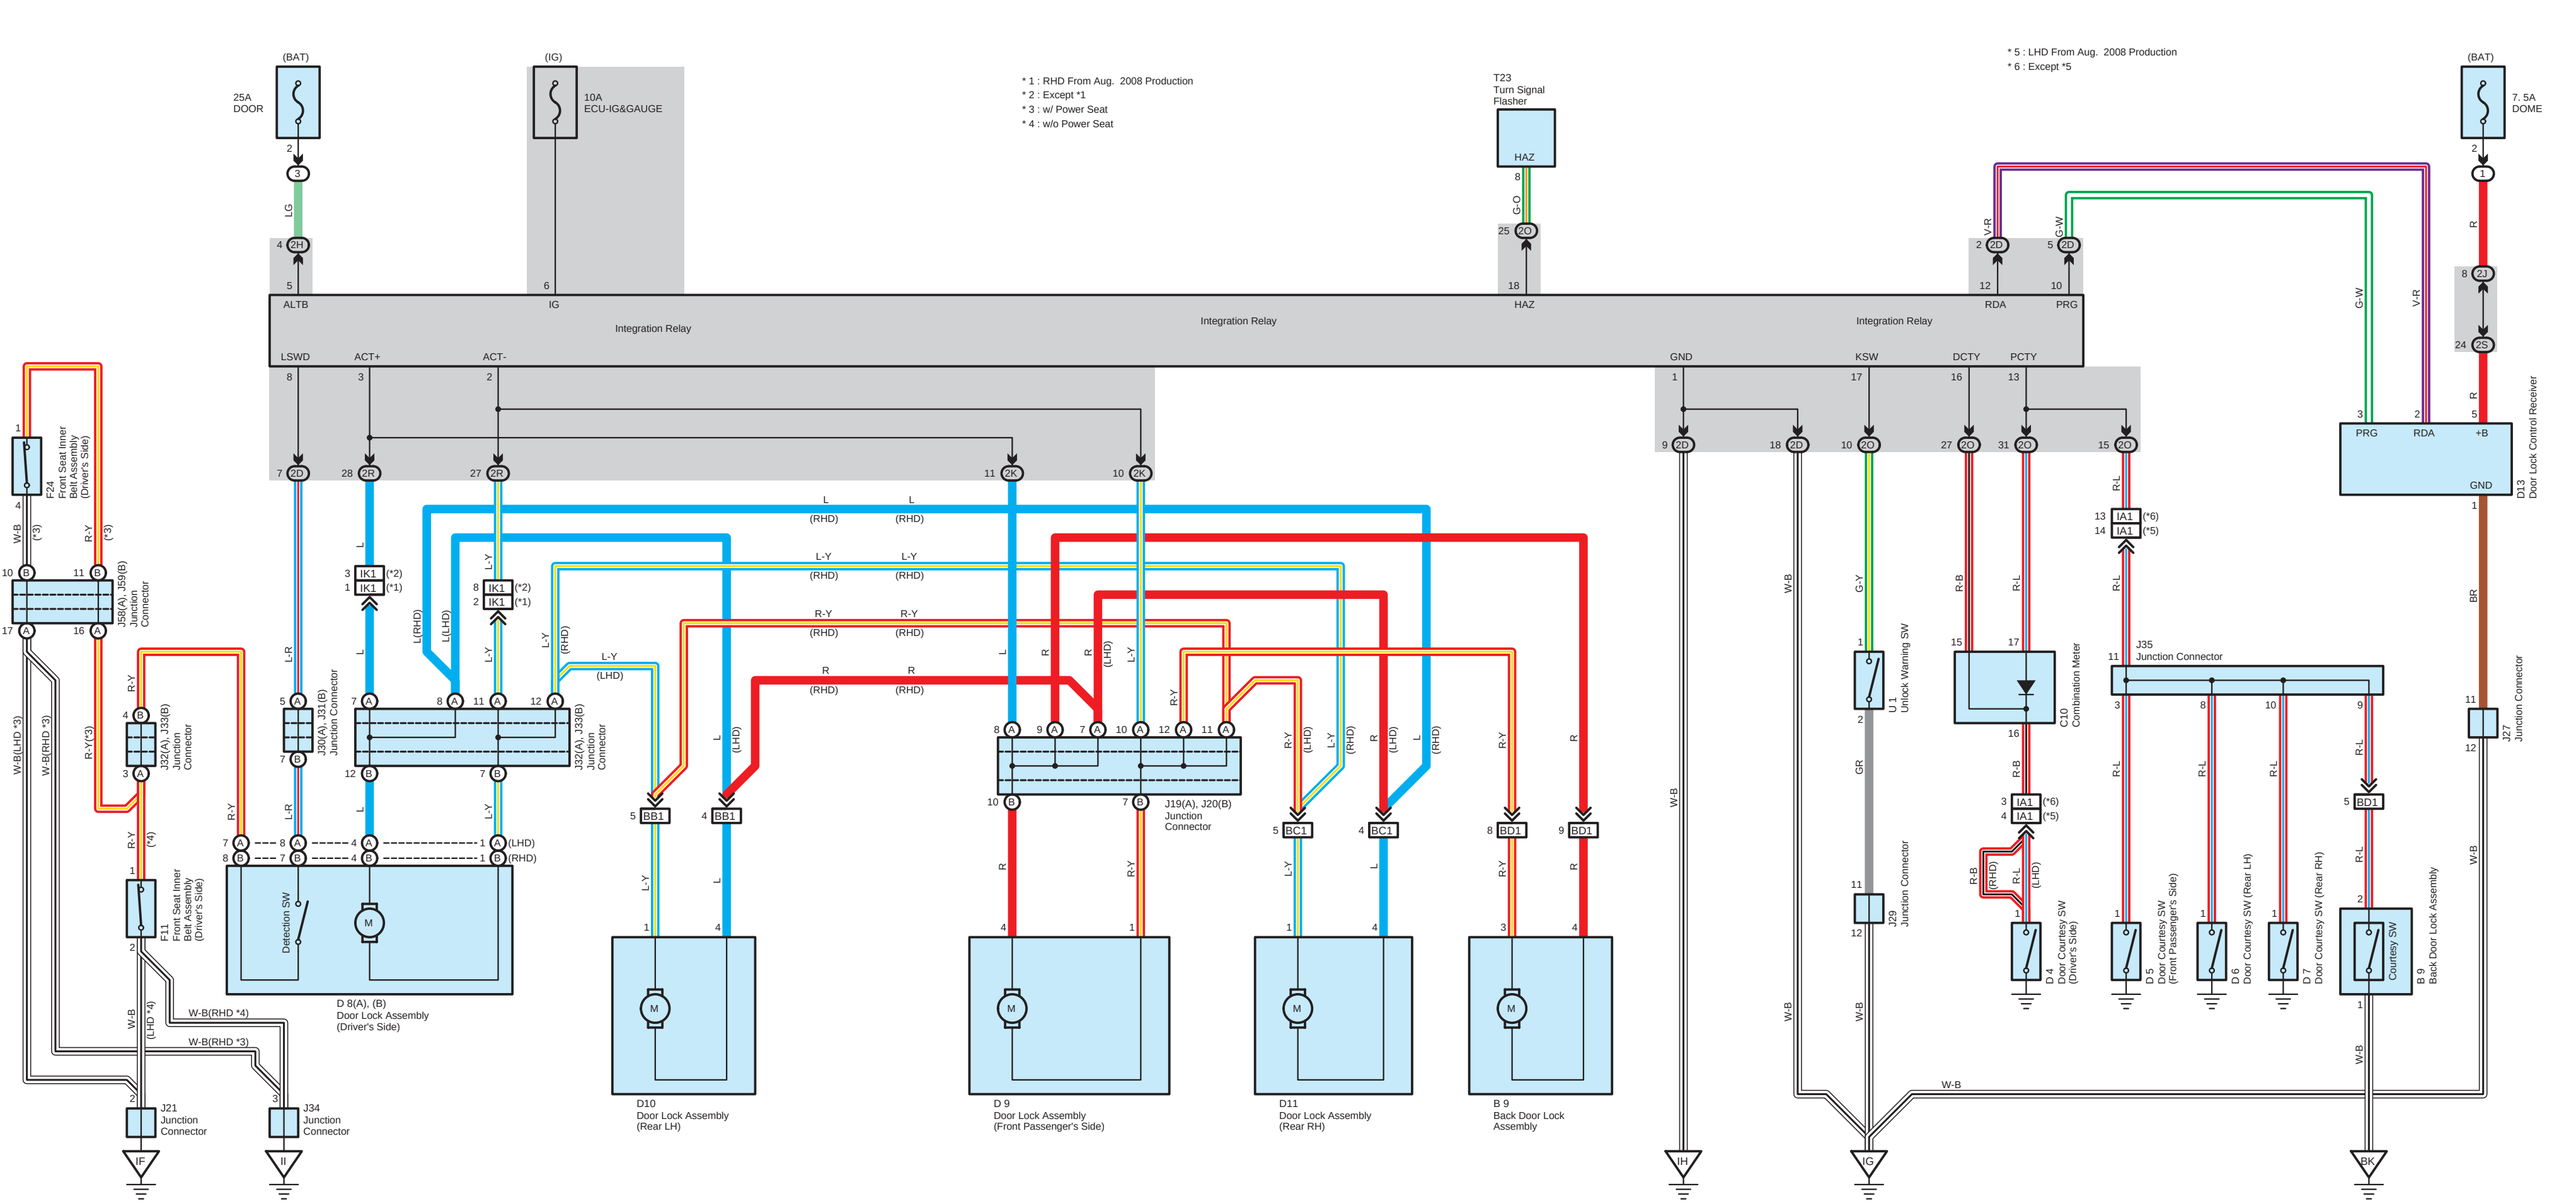

* 1 : RHD From Aug. 2008 Production
* 2 : Except *1
* 3 : w/ Power Seat
* 4 : w/o Power Seat
* 5 : LHD From Aug. 2008 Production
* 6 : Except *5
(BAT)
25A DOOR
(IG)
10A ECU-IG&GAUGE
T23 Turn Signal Flasher
HAZ
7. 5A DOME
ALTB
IG
HAZ
RDA
PRG
Integration Relay
LSWD
ACT+
ACT-
GND
KSW
DCTY
PCTY
PRG
RDA
+B
GND
D13 Door Lock Control Receiver
F24 Front Seat Inner Belt Assembly (Driver's Side)
J58(A), J59(B) Junction Connector
J32(A), J33(B) Junction Connector
J30(A), J31(B) Junction Connector
F11 Front Seat Inner Belt Assembly (Driver's Side)
Detection SW
D 8(A), (B) Door Lock Assembly (Driver's Side)
J21 Junction Connector
J34 Junction Connector
D10 Door Lock Assembly (Rear LH)
J19(A), J20(B) Junction Connector
D 9 Door Lock Assembly (Front Passenger's Side)
D11 Door Lock Assembly (Rear RH)
B 9 Back Door Lock Assembly
U 1 Unlock Warning SW
J29 Junction Connector
C10 Combination Meter
J35 Junction Connector
D 4 Door Courtesy SW (Driver's Side)
D 5 Door Courtesy SW (Front Passenger's Side)
D 6 Door Courtesy SW (Rear LH)
D 7 Door Courtesy SW (Rear RH)
Courtesy SW
J27 Junction Connector
W-B(LHD *3)
W-B(RHD *3)
W-B(RHD *4)
W-B(LHD *4)
L
L-Y
R-Y
R
L-R
R-L
G-O
G-W
V-R
G-Y
R-B
BR
GR
W-B