





(BAT)
50A
BATT
P/I
3 1B
1 B
2 B
J 5(A), J 6(B)
Junction
Connector
6 A
L
B
W–B
W–L
12 EA1
1 1H
1 1J
5 1J
4 1J
2 1J
1
25A
EFI
2
MAIN
Relay
14 II4
1 II4
W–G
8 A
1 A
2 B
MREL
+B
BATT
E 4(A), E 5(B), E 6(C), E 7(D)
Engine ECU
CCS
21 A
G–W
2
1
ECC
CCS
ON–OFF
+RES
–SET
CANCEL
Cruise Control SW
S13
Spiral Cable
3 1J
7
1
J1
Junction
Connector
5 A
3 A
J 9(A)
Junction
Connector
9 ID1
BR
(*4)
(*3)
6 B
2 B
J12(B)
Junction
Connector
EB
EE


L
L
* 3 : Before Oct. 2008 Production
* 4 : From Oct. 2008 Production
(IG)
10A
ECU–IG&GAUGE
25 2S
B
W–B
R–L (*4)
2 ID1
R–L (*4)
2
RB DL
D
N 1
Park/Neutral
Position SW
7
G–Y (*4)
1 A
J17(A), J18(B)
Junction
Connector
6 B
G–Y (*4)
4 B
J46(B)
Junction
Connector
3 B
G–Y (*4)
10 B
D
W–B
B
R–W
BR
BR
R–W
3 A
2 A
1 B
2 B
GND
+B
VC
E2
T 2(A), T 3(B)
Throttle Body
Assembly
LUSL
VAF
7 B
8 B
J10(B)
Junction
Connector
20
16
J 7
Junction
Connector
1 A
3 B
GR
B
BR
R–W
4 C
29 C
28 D
18 D
LUSL
VLU
E2
VC
E 4(A), E 5(B), E 6(C), E 7(D)
Engine ECU
VCPA
VPA
EPA
VCP2
VPA2
EPA2
E1
E01
E02
26 A
22 A
28 A
27 A
23 A
29 A
7 C
7 D
6 D
LG–R
W–L
BR–W
BR–R
GR–G
BR–Y
BR
W–B
W
4
6
5
1
3
2
1 B
2 B
J12(B)
Junction
Connector
VCP1
VPA1
EP1
VCP2
VPA2
EP2
A22
Accelerator Position Sensor
BR
W–B
W–B
EE



L
(IG)
(BAT)
7. 5A
IGN
10A
STOP
L–B
22 2S
6 2M
2 2F
22 2R
B–O
B–O
G–B
B–O
3
2
S14
Stop Lamp SW
4
1
R–L
G–W
G–W
4 II4
5 2M
21 2R
21 2S
G–W
B–O
R–L
L–B
G–W
B–O
L
9 A
14 B
15 B
3 B
14 A
6 A
5 A
IGSW
ST1–
STP
PI
STP
IG2
BATT
E 4(A), E 5(B), E 6(C), E 7(D)
Engine ECU
T17(A), T18(B), T19(C), (D)
Transmission Control ECU
SPD
CAN+
CAN–
WFSE
SIL
TC
WFSE
SIL
CAN–
CAN+
17 B
22 B
21 B
19 A
18 A
11 A
24 B
23 B
20 A
21 A
V–R
V
P
W
(*4)
W
(*3)
R–Y
(*4)
R–Y
(*3)
P–B
W
R–Y
P
V
9
ID2
W
(*4)
11
ID2
W
(*4)
8
ID2
R–Y
(*4)
2
ID2
R–Y
(*4)
9 2C
6 2Q
5 2Q
11 2C
6 2P
10 2C
22 2Q
21 2Q
W
R–Y
P–B
15
7
13
WFSE
SIL
TC
D 3
DLC3
V–R

∗ 1 : Before Oct. 2007 Production
∗ 2 : From Oct. 2007 Production
∗ 3 : Before Oct. 2008 Production
∗ 4 : From Oct. 2008 Production

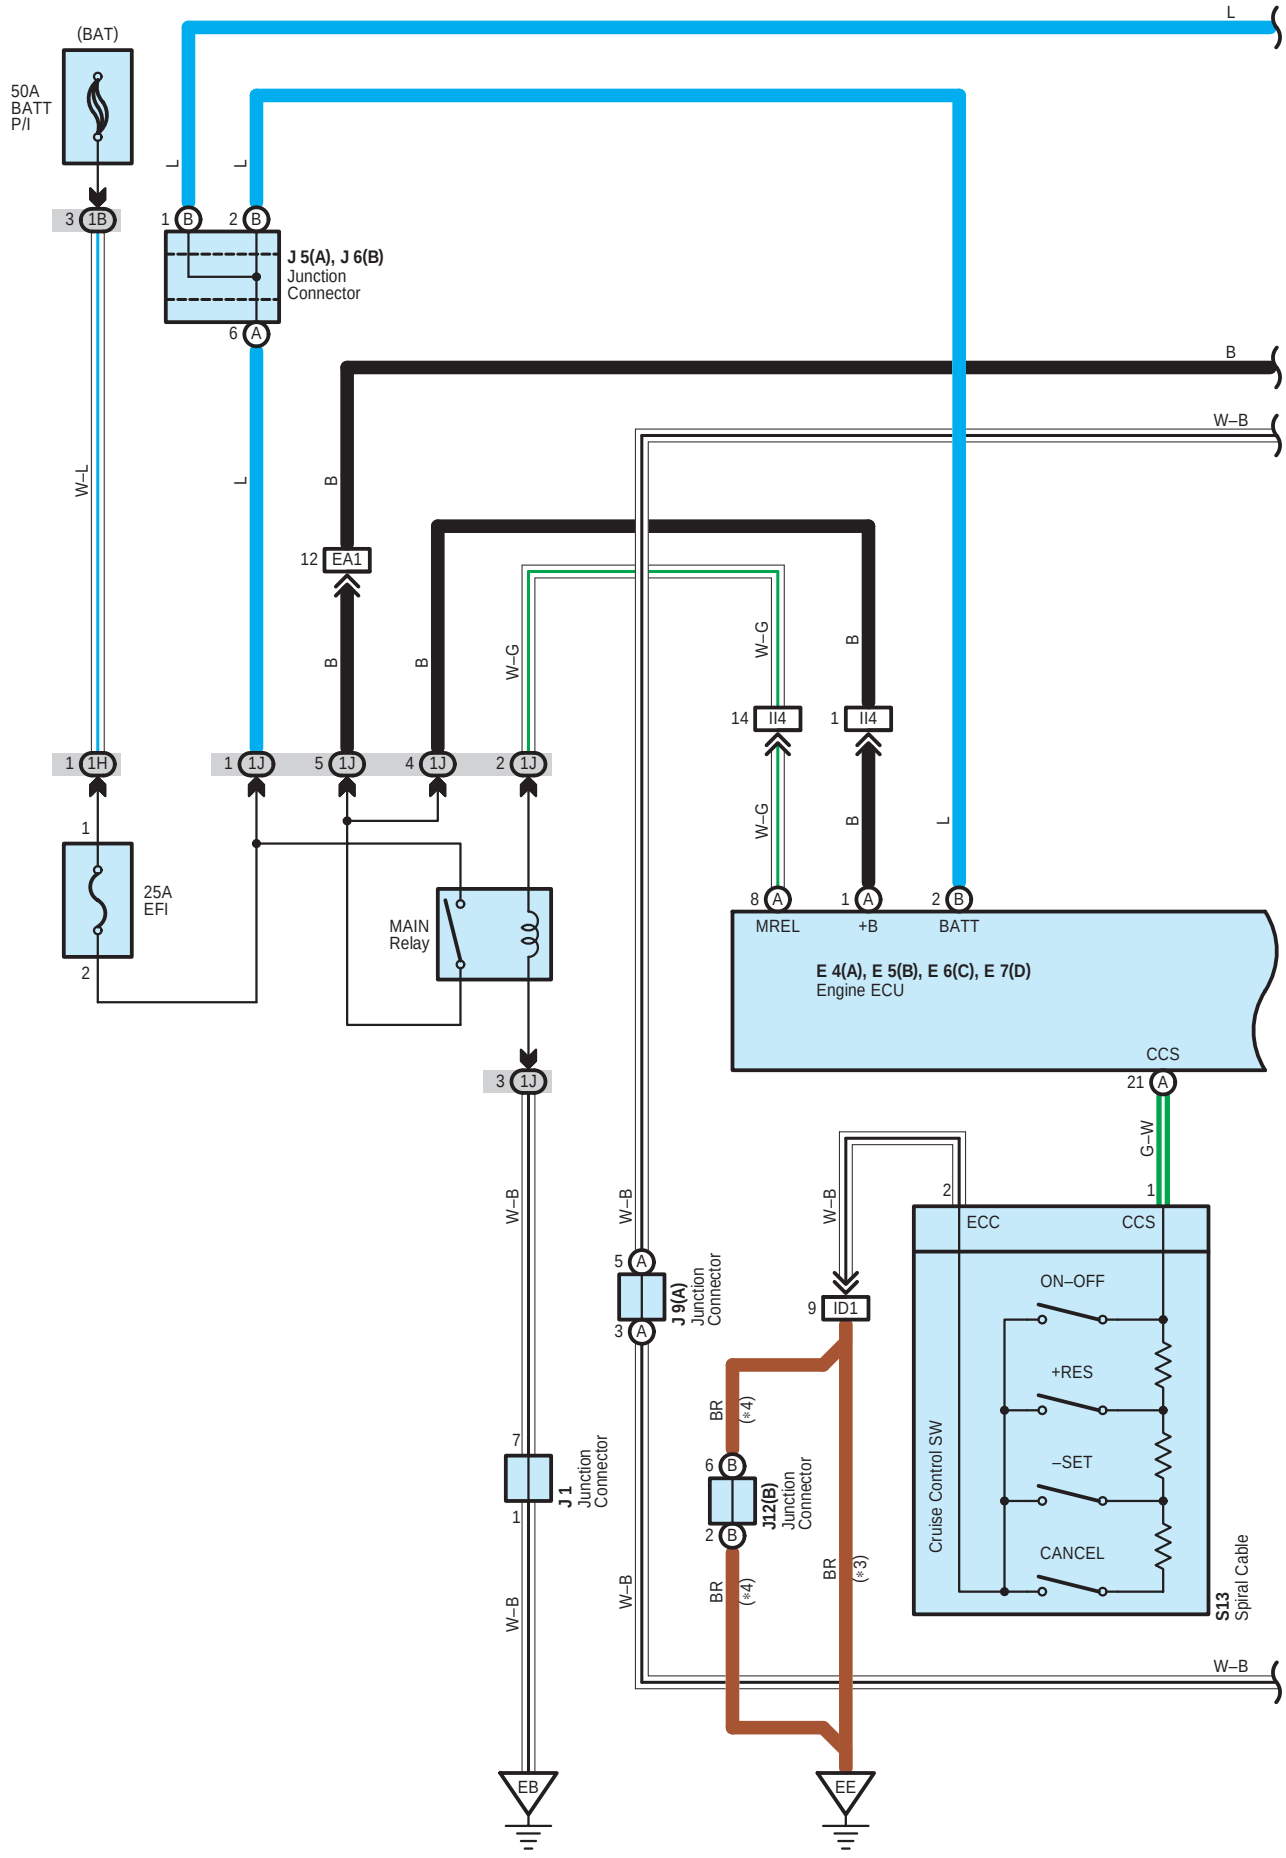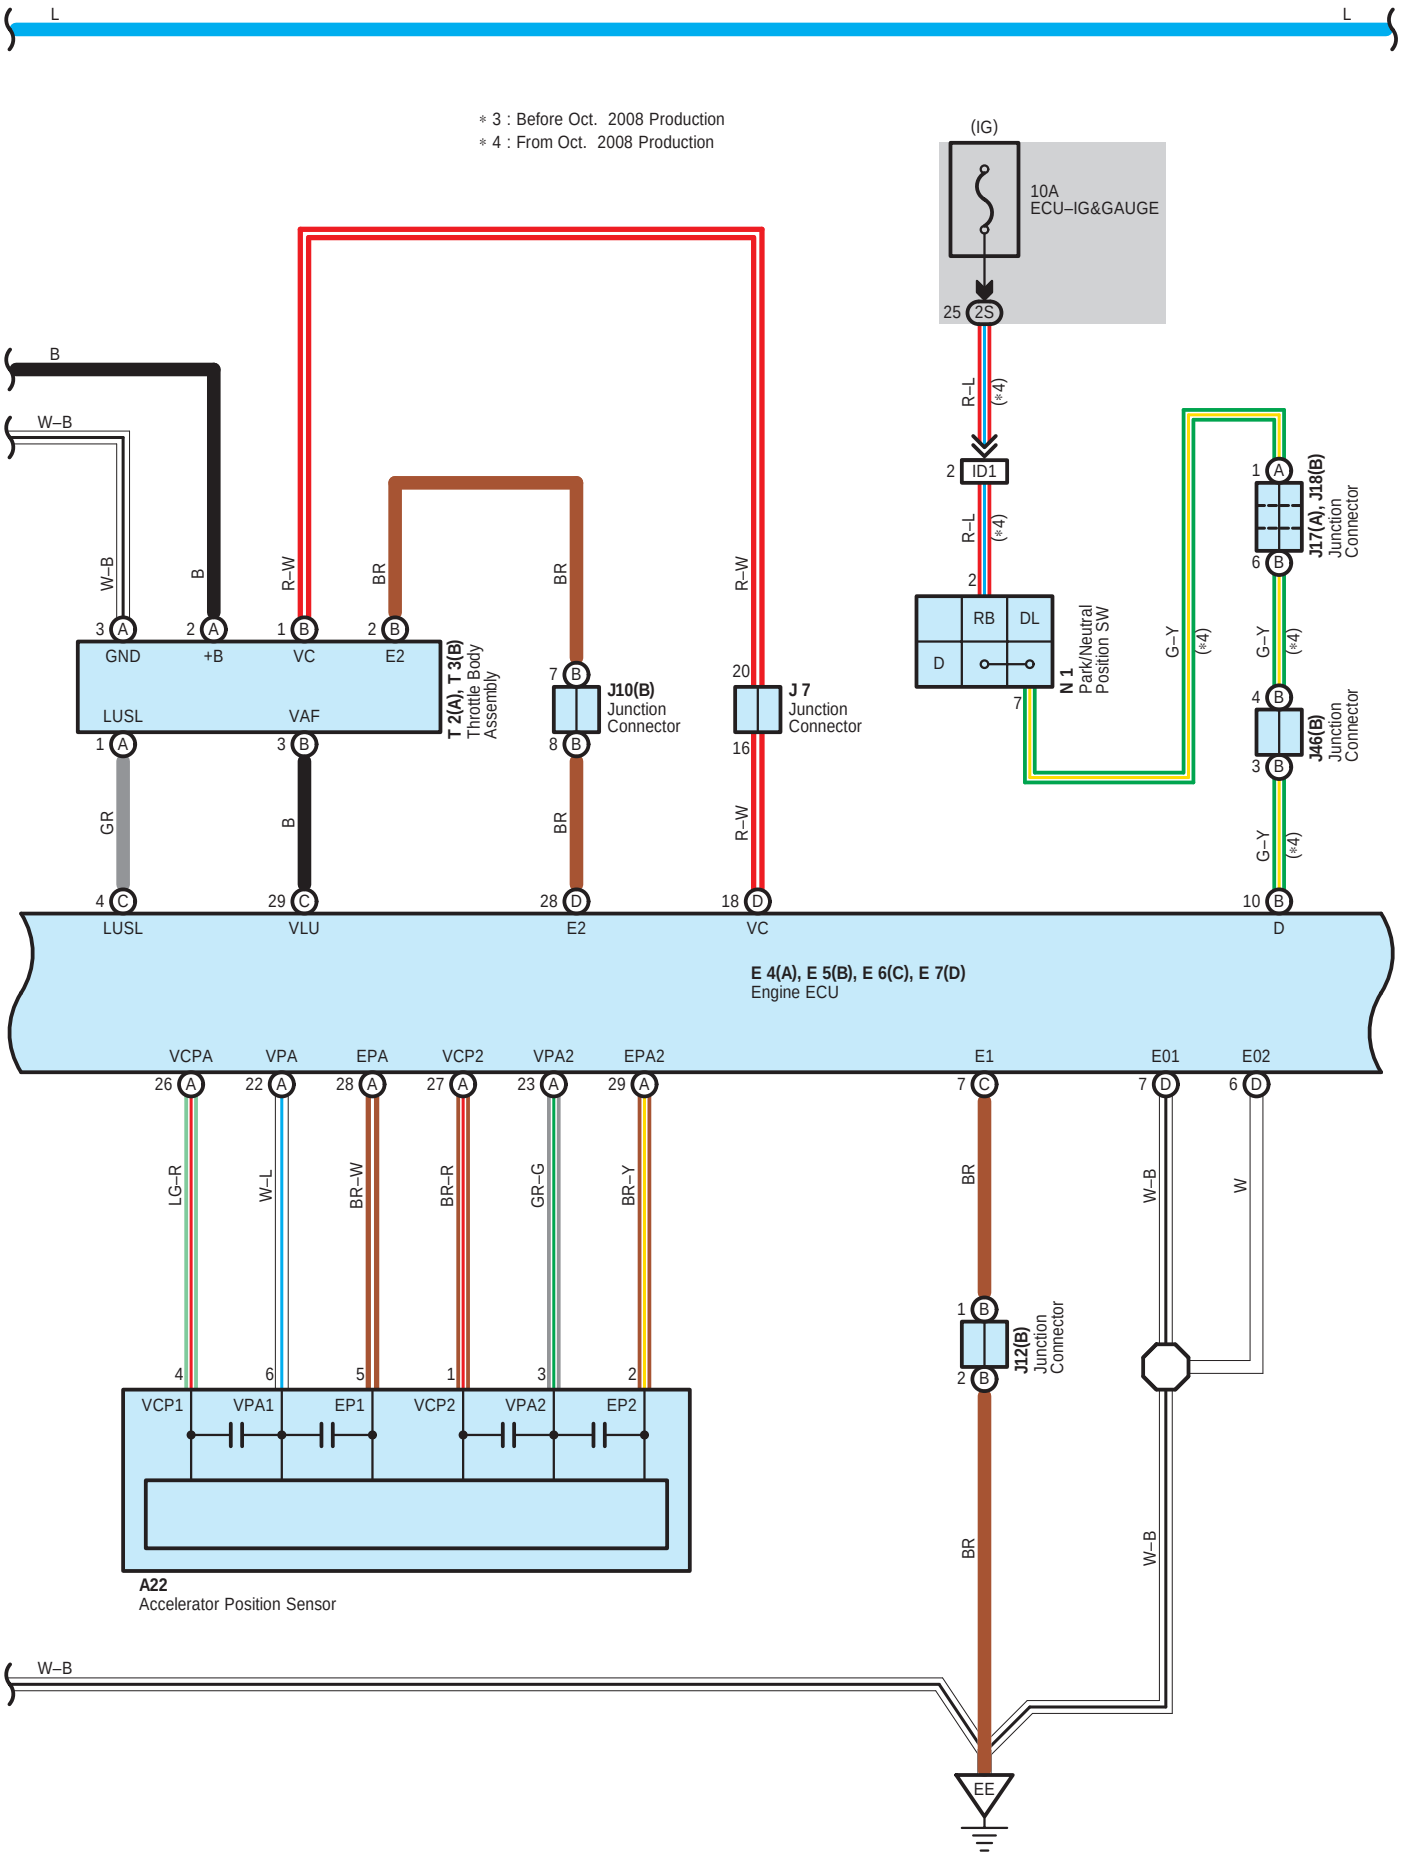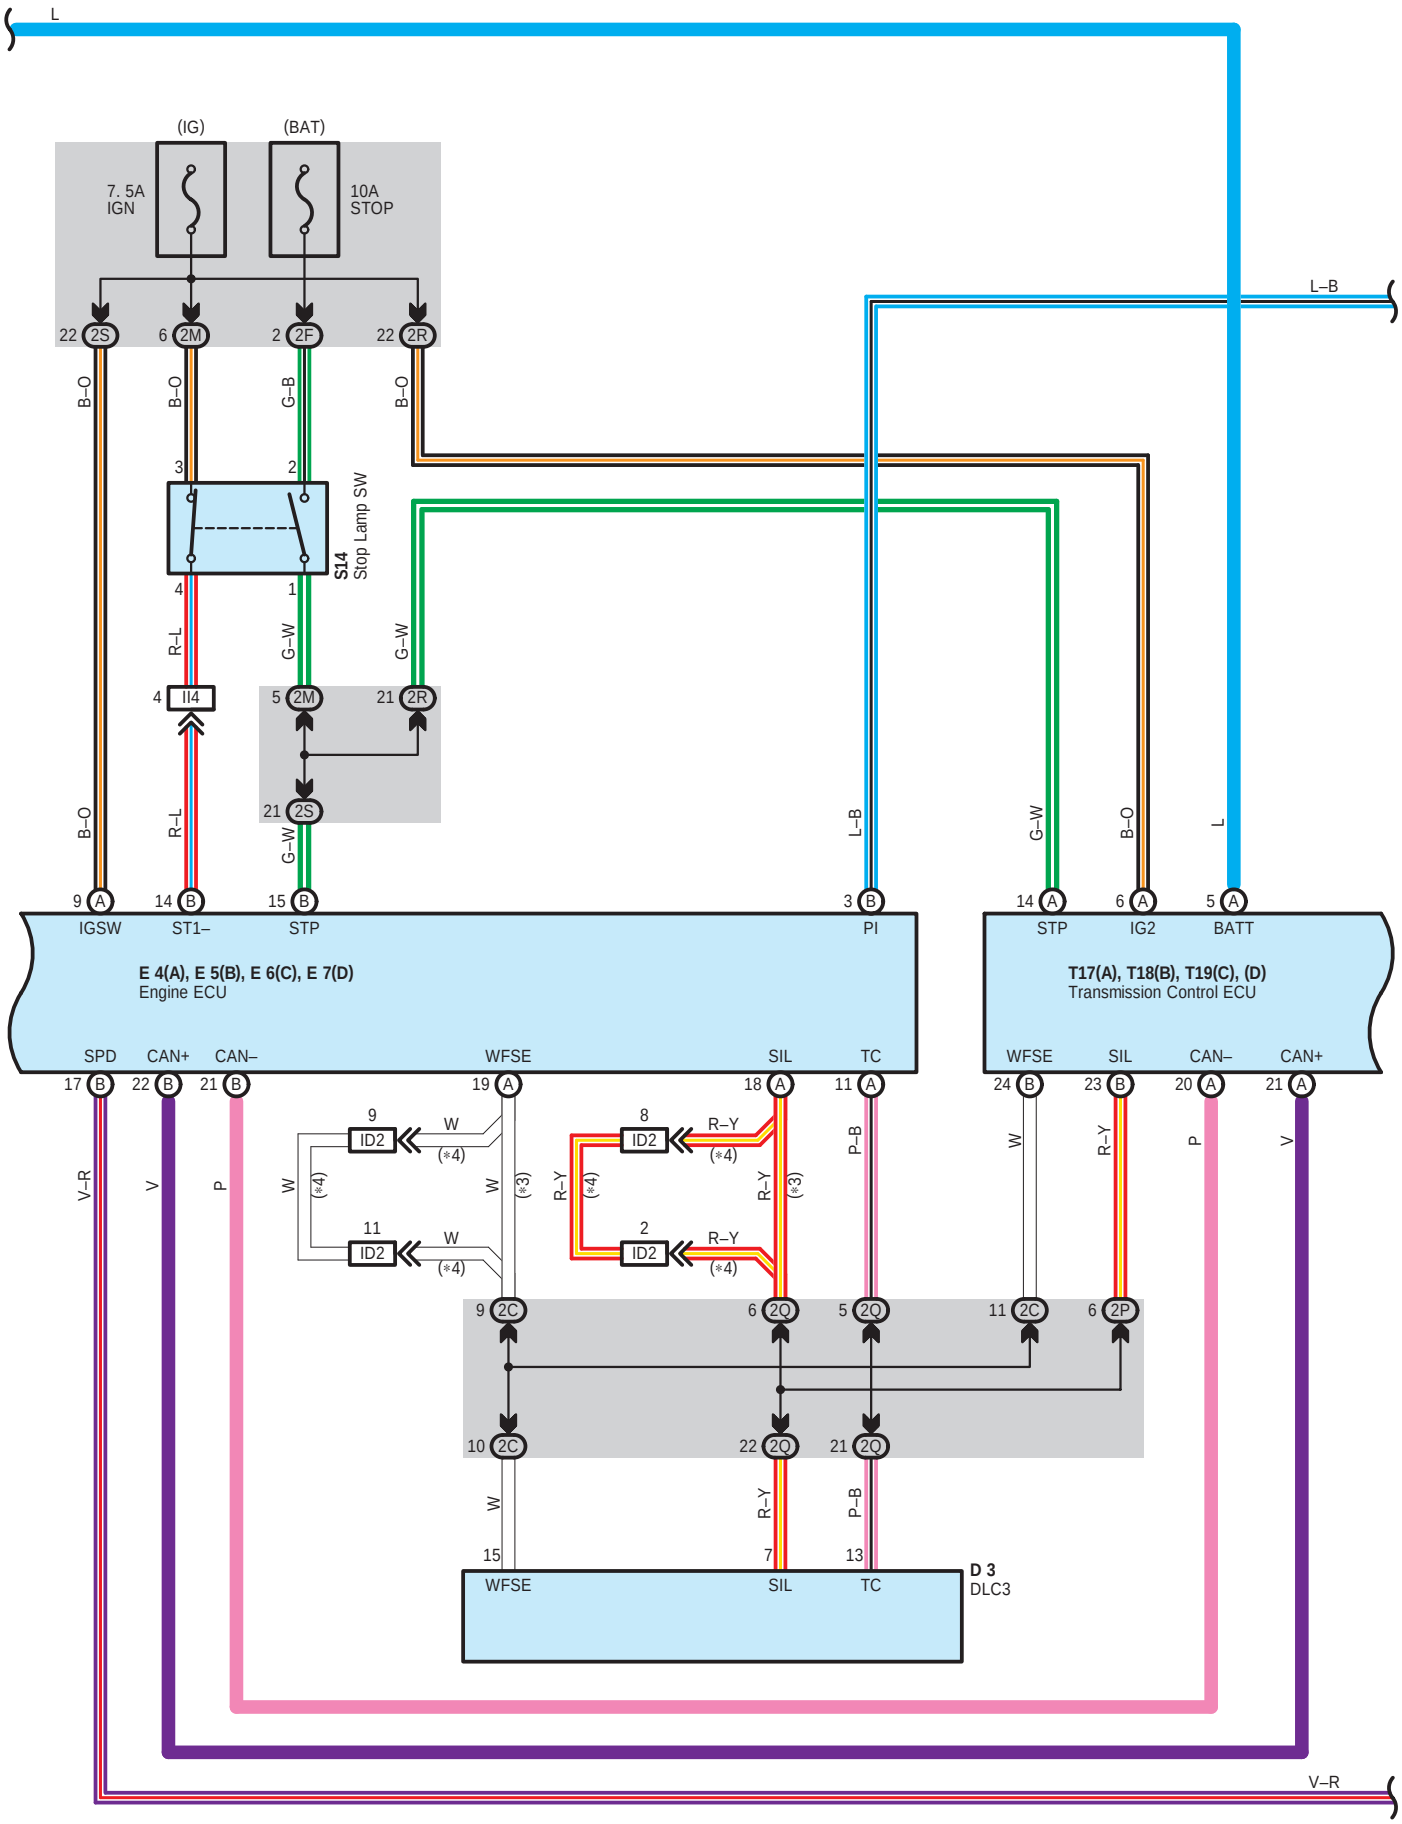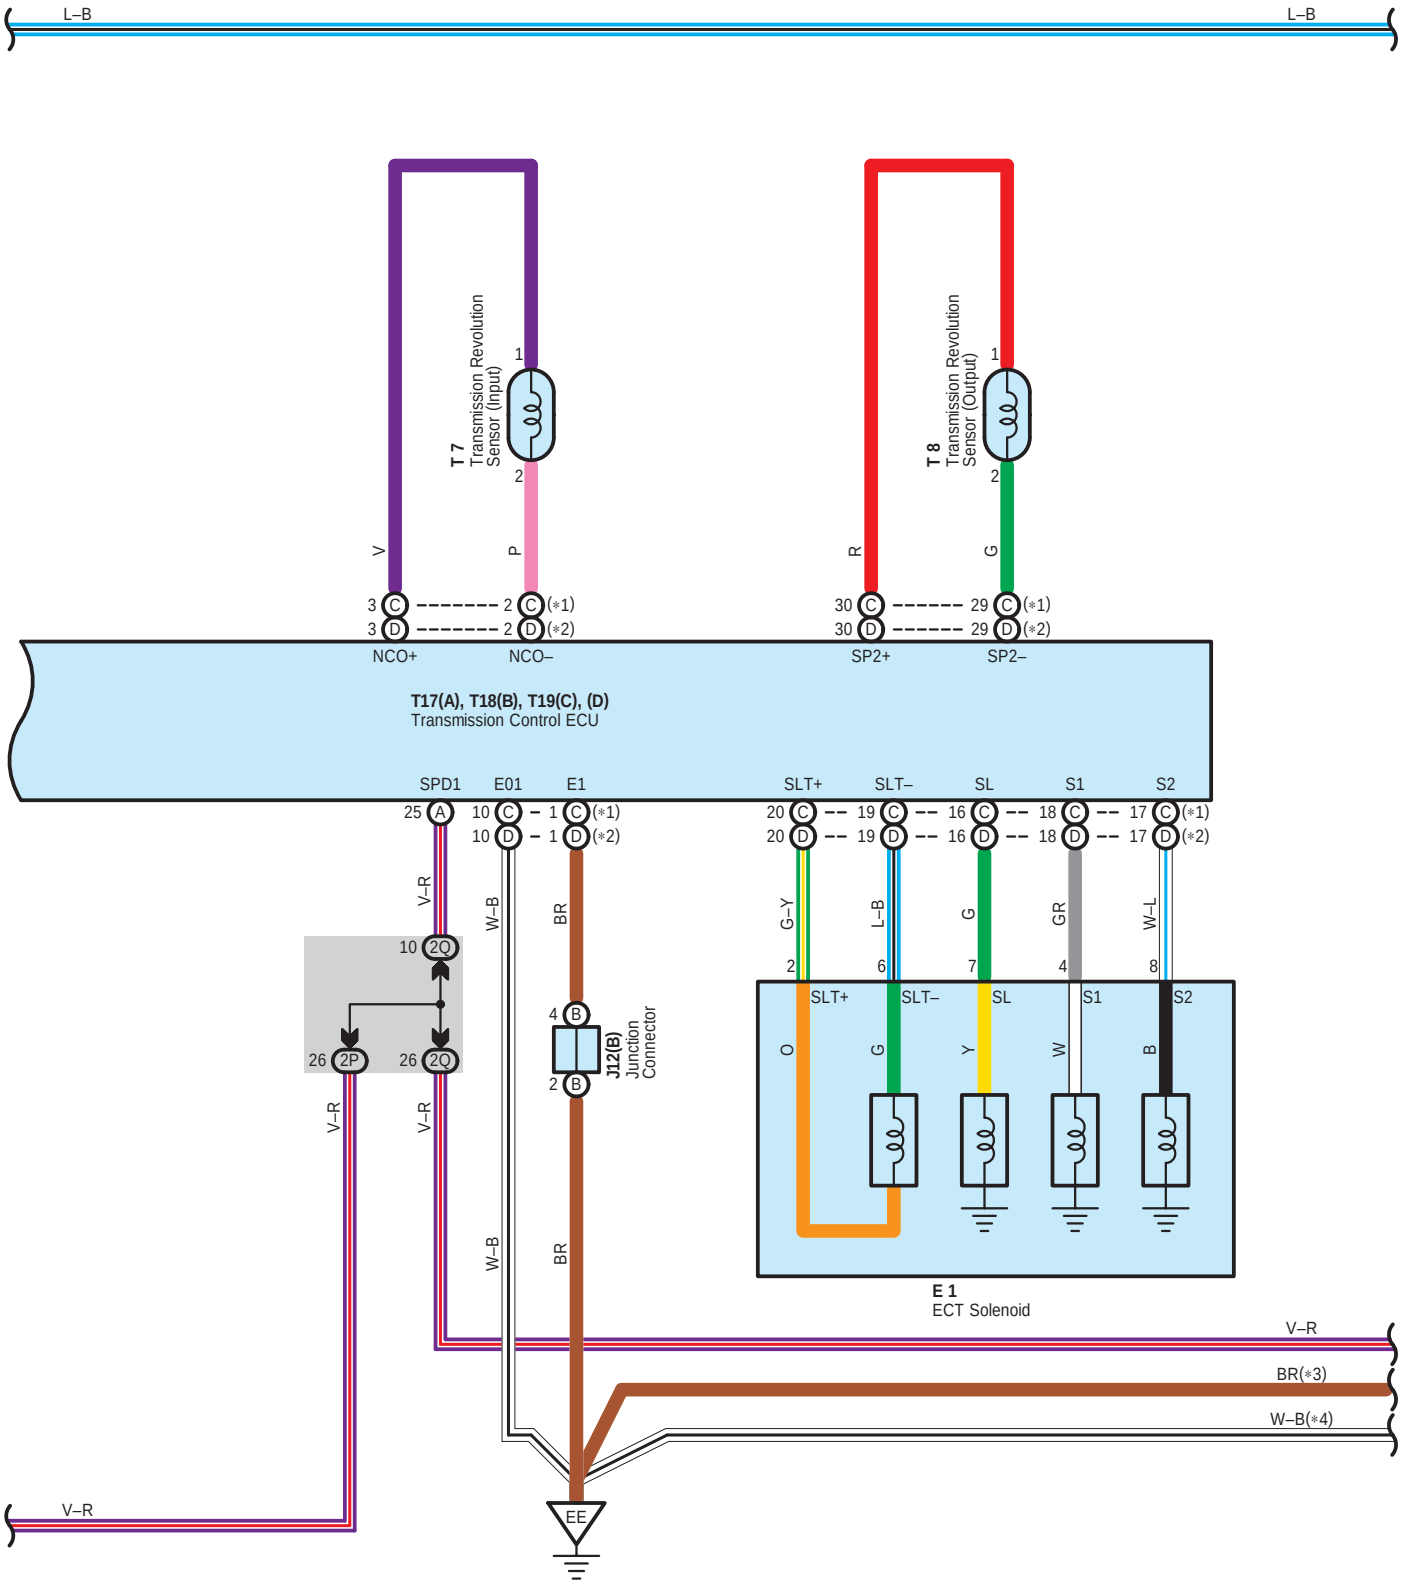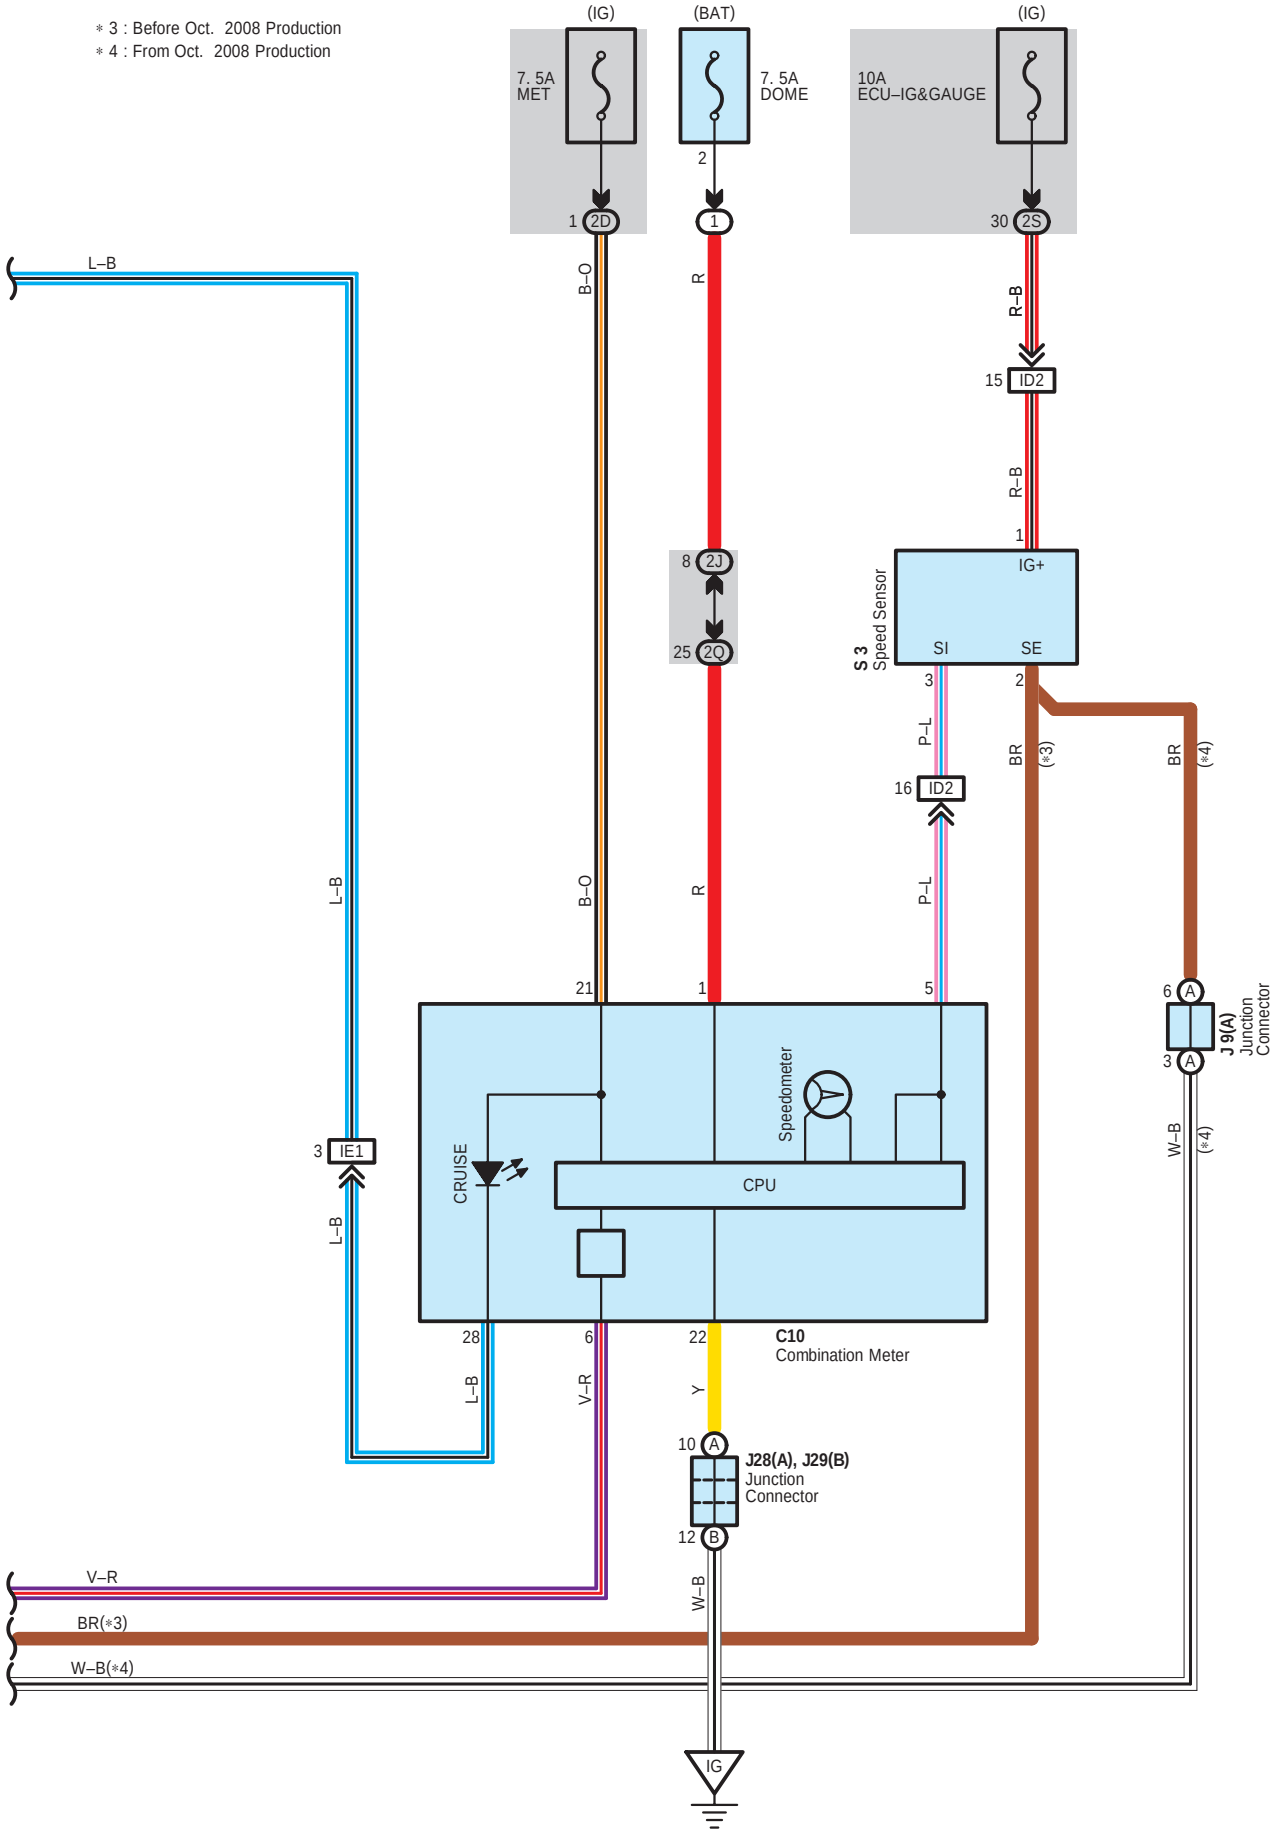



∗ 3 : Before Oct. 2008 Production
∗ 4 : From Oct. 2008 Production
(IG)
(BAT)
(IG)
7. 5A MET
7. 5A DOME
10A ECU–IG&GAUGE
1 2D
2
1
30 2S
L–B
B–O
R
R–B
15 ID2
R–B
1
8 2J
25 2Q
IG+
S 3 Speed Sensor
SI
SE
3
2
P–L
BR
(∗3)
BR
(∗4)
16 ID2
P–L
L–B
B–O
R
21
1
5
6 A
3 A
J 9(A) Junction Connector
Speedometer
CRUISE
CPU
3 IE1
L–B
28
6
22
C10 Combination Meter
L–B
V–R
Y
W–B
(∗4)
10 A
J28(A), J29(B) Junction Connector
12 B
W–B
V–R
BR(∗3)
W–B(∗4)
IG


A 22
Black

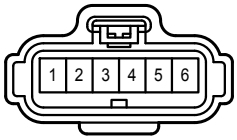

C 10
White

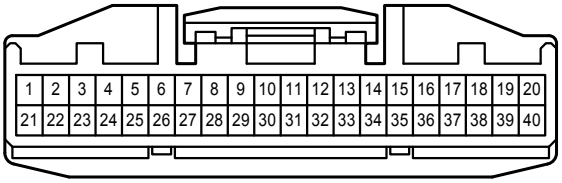


D 3
White

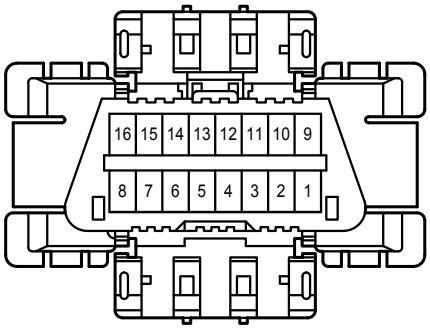


E 1
Gray




E 4
Gray

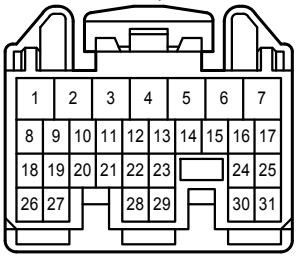


E 5
Gray

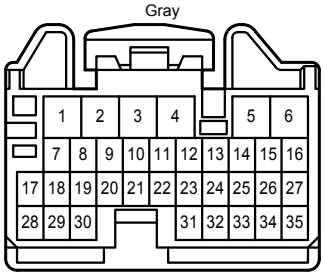


E 6
Gray

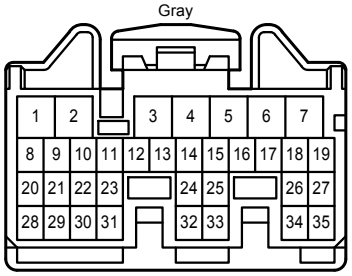


E 7
Gray

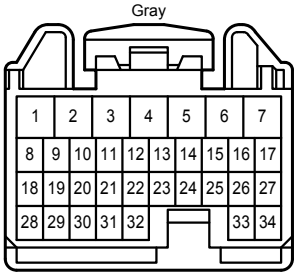


J 1
White




J 5
Black

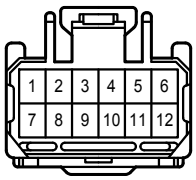


J 6
White

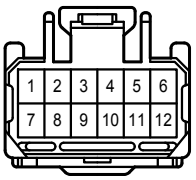


J 7
White

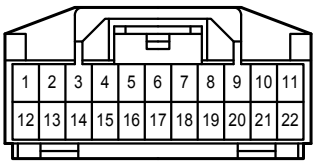


J 9
Blue

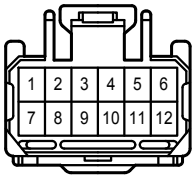


J 10
Blue

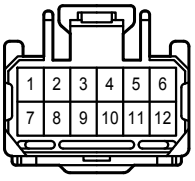


J 12
White

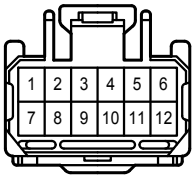


J 17
White

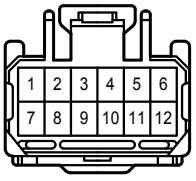


J 18
White

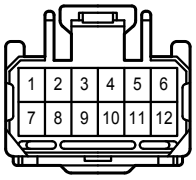


J 28
White

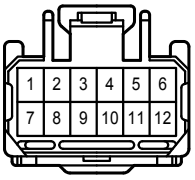


J 29
White

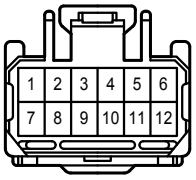

J 46
White

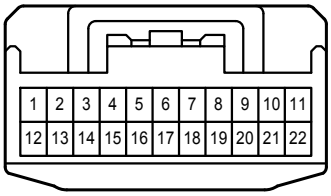


N 1
Gray

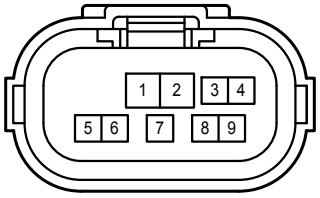


S 3
Black



S 13
Black

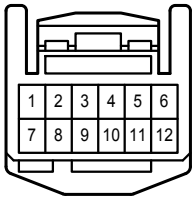

S 14
White

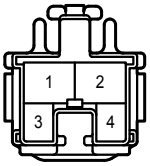


T 2
Black




T 3
Black




T 7
Black

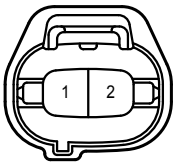


T 8
Black

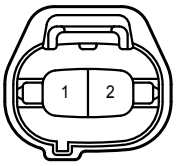


T 17
White

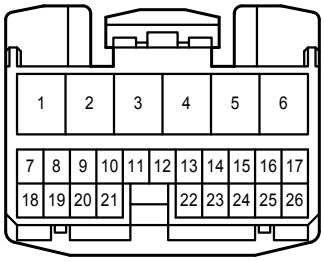

T 18
White

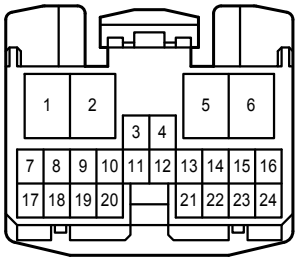


T 19
White

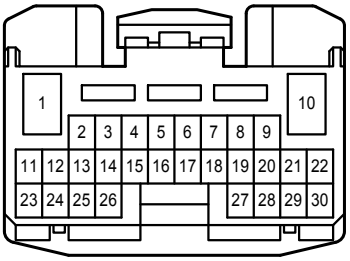


(Before Oct. 2007 Production)

T 19
White

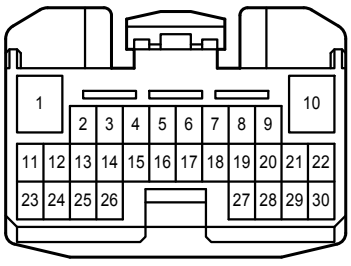

(From Oct. 2007 Production)


1B
White

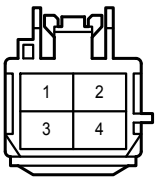


1H
White




1J
White

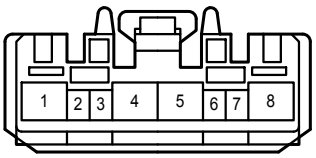


2C
White

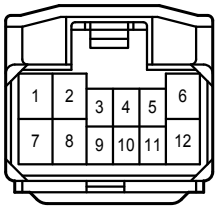


2D
White

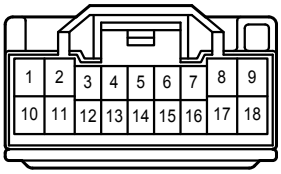


2F
White

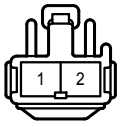


2J
White

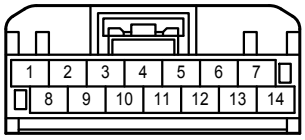


2M
White

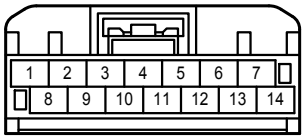


2P
White

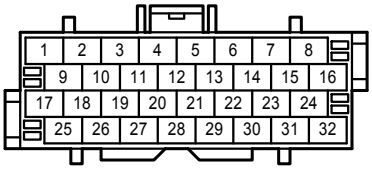

2Q
Gray

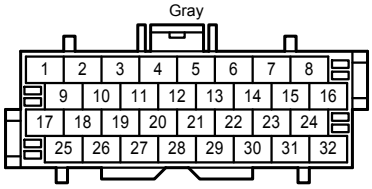

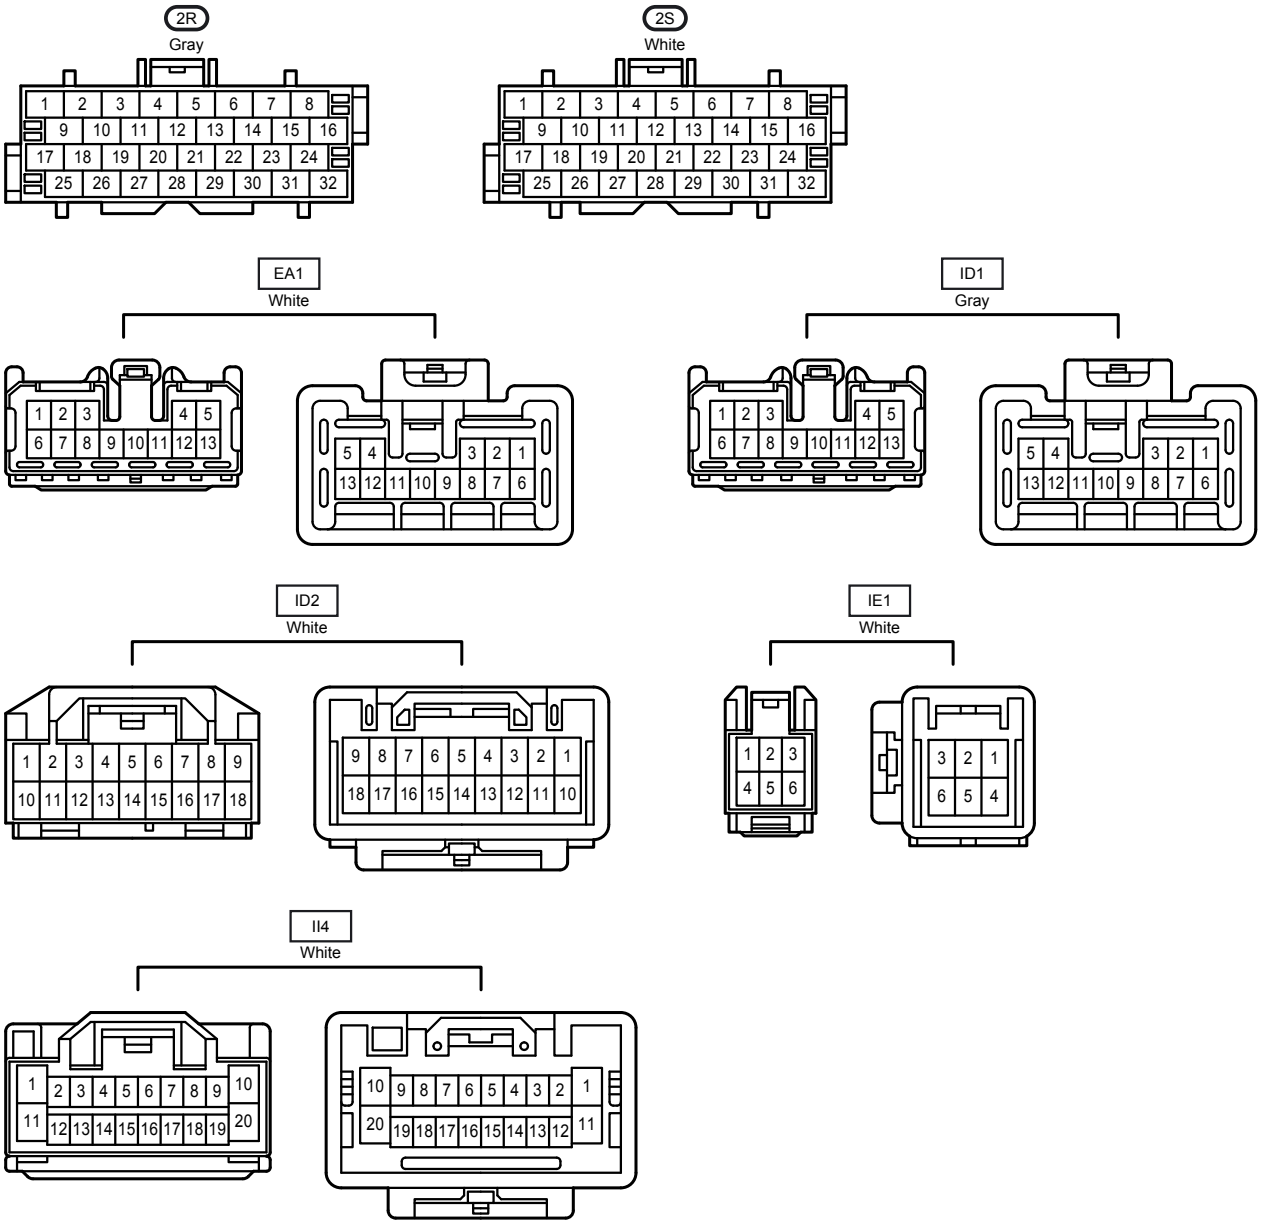
2R
Gray
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24
25 26 27 28 29 30 31 32
2S
White
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24
25 26 27 28 29 30 31 32
EA1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
ID1
Gray
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
ID2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10
IE1
White
1 2 3
4 5 6
3 2 1
6 5 4
II4
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11