




(BAT)
7. 5A
DOME
M 2
Map Lamp
R14
Room Lamp (Center)
R15
Room Lamp (Luggage)
DOOR
OFF
ON
IG1
C10
Combination Meter
CPU
Door
T20
Transponder Key
Amplifier
Ignition Key
Cylinder Lamp
T16
Theft Warning
ECU
DMLP
E
CTY
KSW
J28(A), J29(B)
Junction Connector
D 4
Door Courtesy SW
(Driver' s Side)
IA1
IG
R(*3)
P
(*1)
(*2)
(*3 *1)
R
W–B
B–W
R–L
G–Y
R–B
GR
Y


∗1 : TASA Made Before Oct. 2007 Production, TASA Made From Oct. 2007 Production Manual A/C
∗2 : TASA Made From Oct. 2007 Production Automatic A/C, TDV Made, TMT Made
∗3 : w/ Ignition Key Cylinder Lamp
∗4 : Before Oct. 2008 Production
∗5 : From Oct. 2008 Production
(BAT)
7. 5A
ECU–B (∗4)
10A
ECU–B (∗5)
P
(∗3 ∗1)
L
12 2N
12 2L
15
ILE
4
BECU
Integration Relay
DCTY
16
GND
1
31 2O
27 2O
26 2O
10 2O
10 2N
14 2N
3 2E
15 2O
1 2E
18 2D
9 2D
R–L
R–B
G–Y
G–Y
G–Y
R–L
P
(∗1)
R–L
W–B
W–B
W–B
14 IA1 (∗5)
13 IA1 (∗4)
J35
Junction Connector
11
3
8
10
9
U1
Unlock Warning SW
GR
D5
Door Courtesy SW (Front Passenger' s Side)
D6
Door Courtesy SW (Rear LH)
D7
Door Courtesy SW (Rear RH)
B9
Back Door Lock Assembly
Courtesy SW
5 BD1
BK
IH

B 9
White

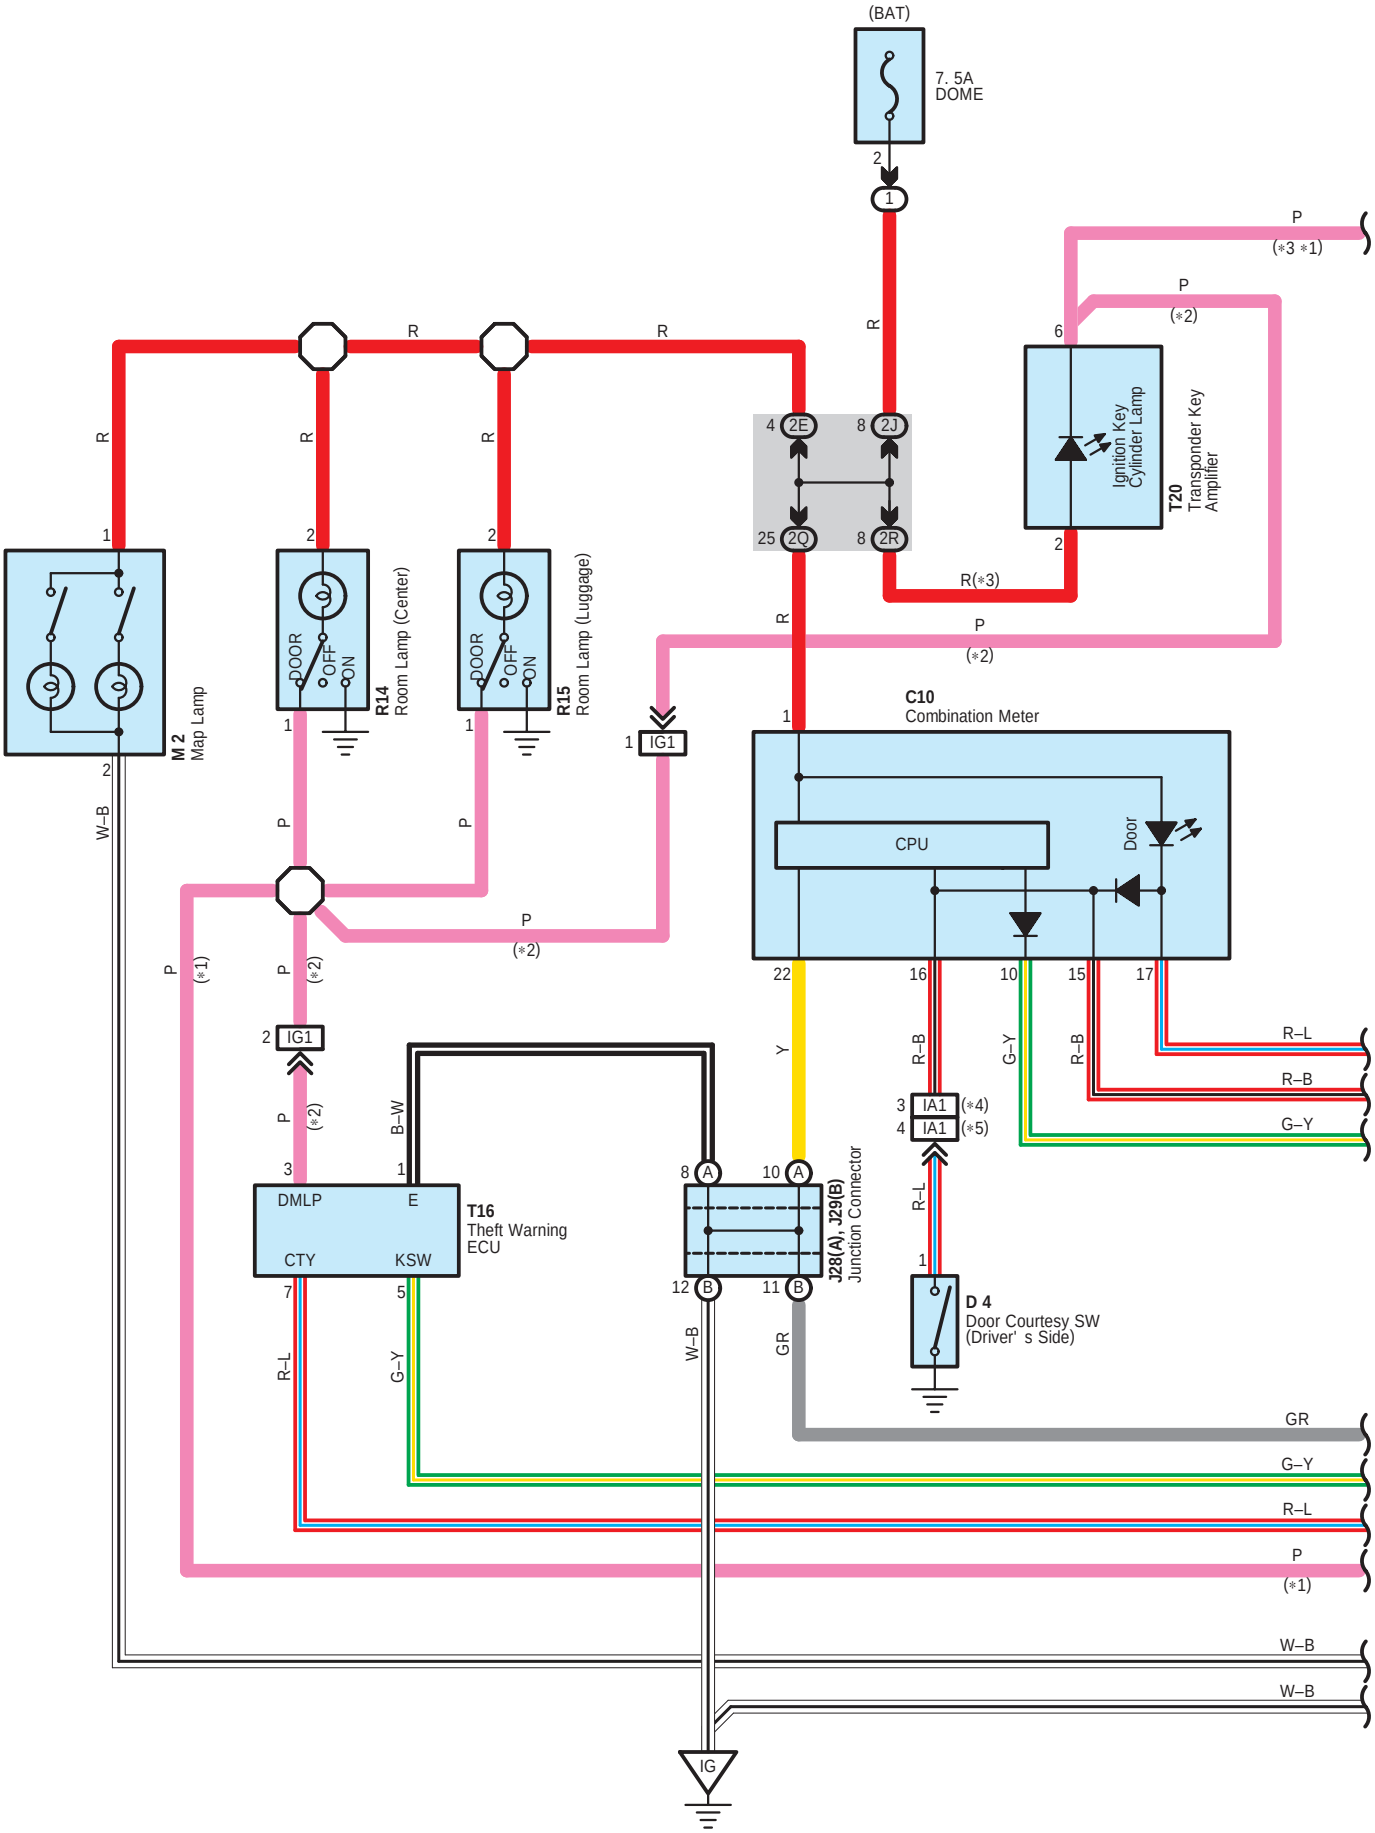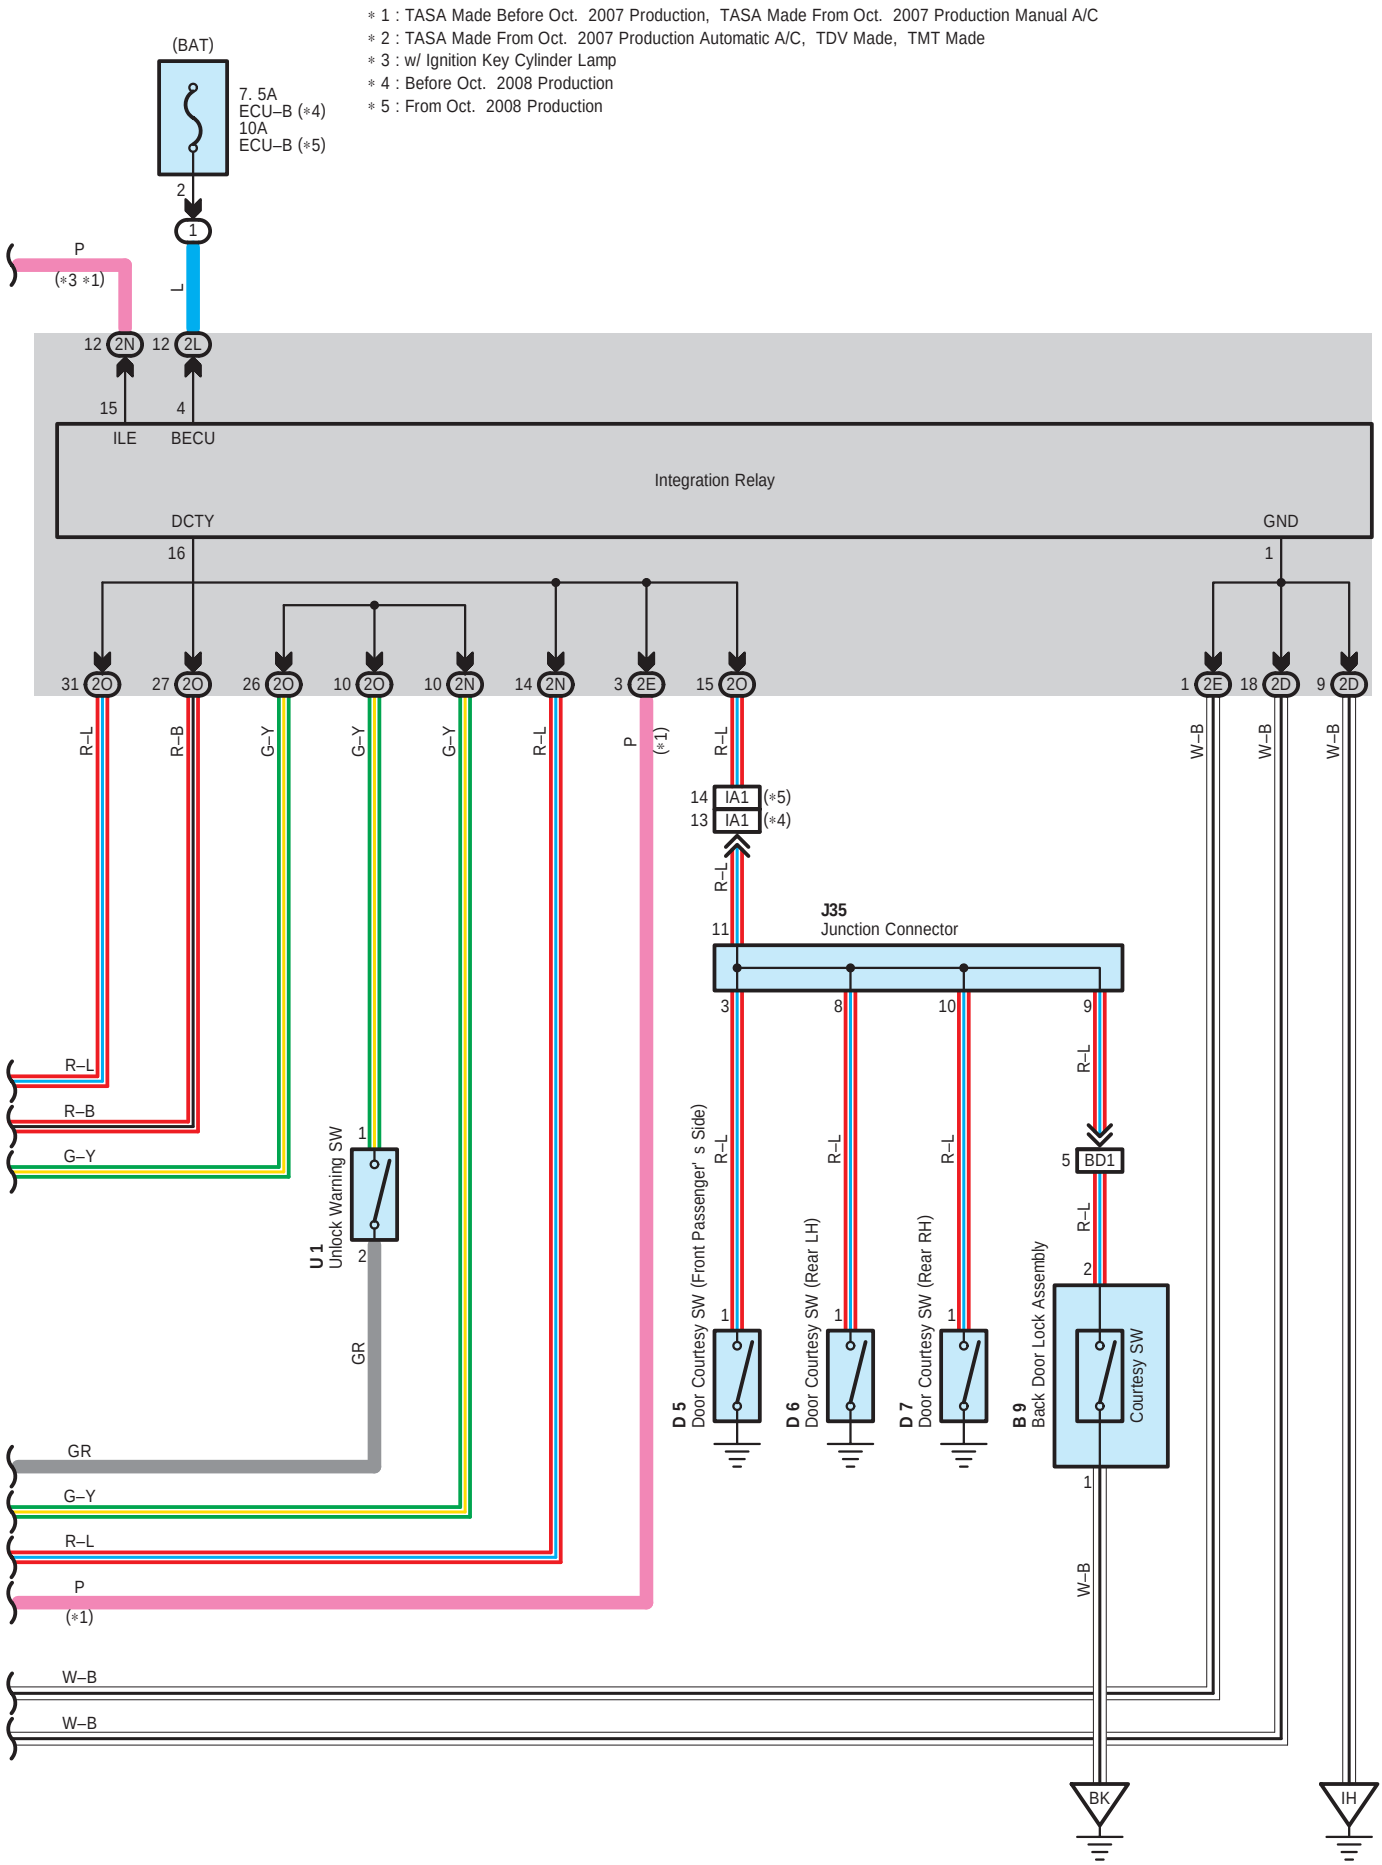

C 10
White

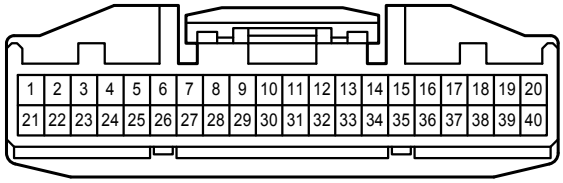

D 4
White



D 5
White




D 6
White




D 7
White




J 28
White

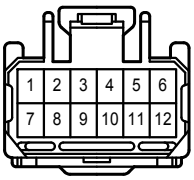

J 29
White

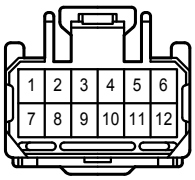

J 35
White

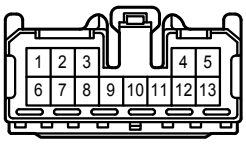

M 2
White




R 14
White




R 15
White




T 16
White

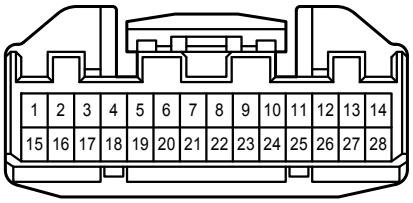


T 20
Black

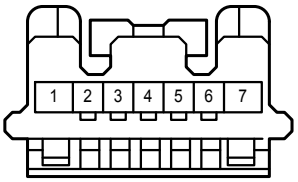


U 1
White




2D
White

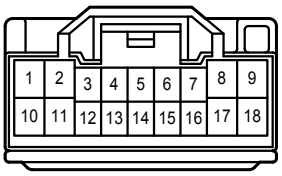


2E
White

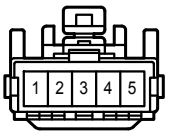


2J
White

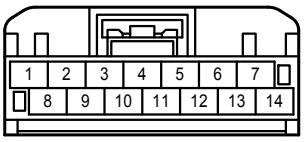


2L
Black

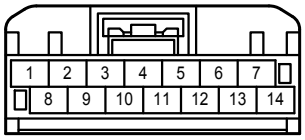


2N
Gray

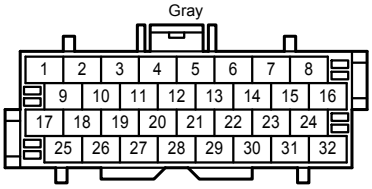


2O
White

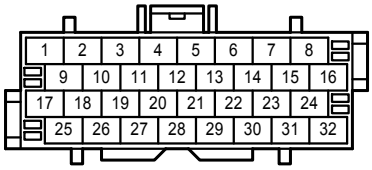


2Q
Gray

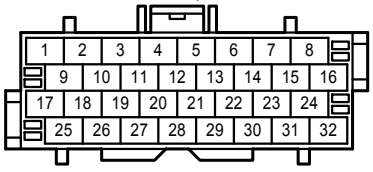

2R
Gray

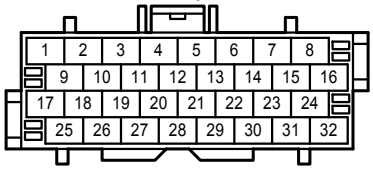

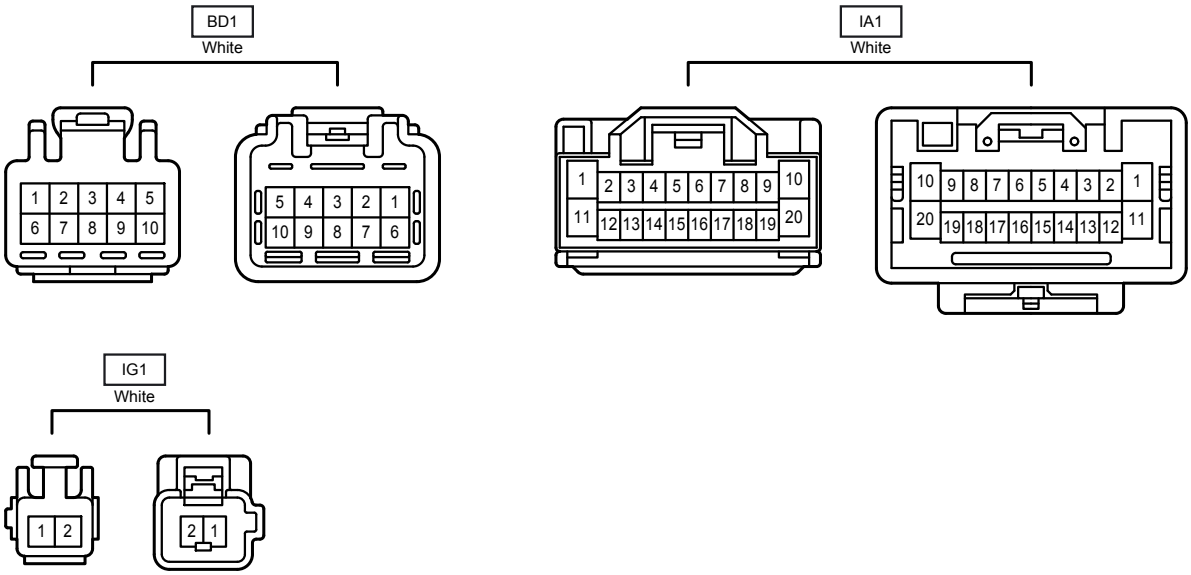
BD1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6
IA1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11
IG1
White
1 2
2 1