




P 6(A), (B)
Power Window Master SW
BW
7 B (*2)
L–B
9 IC2
L–B
(IG)
(BAT)
10A
ECU–IG&
GAUGE
40A
IG1
8 2K
2 2H
R–L
R–L
W–R
W–R
7 A
11 B
J22(A), J23(B)
Junction
Connector
R–L
1
3
3
IG1 Relay
3
5
3
3
1
25A
DOOR
2
3
LG
L–B
W–G
3
W–B
(*4)
W–B
(*3)
1
30A
PWR
2
3
4 2H
5
ALTB
Integration
Relay
L
L
* 1 : w/o Driver' s Window Jam Protection
* 2 : w/ Driver' s Window Jam Protection
* 3 : Before Oct. 2008 Production
* 4 : From Oct. 2008 Production
W–B
(*4)
9
J21
Junction
Connector
IF
W–B
(*3)



P 6(A), (B)
Power Window Master SW
E
B
U
D
PLS2
VCC
PLS
GND
W–B
L
R
L–R
B
BR
P–G
L–O
(*1)
(*2)
J32(A), J33(B)
Junction
Connector
J22(A), J23(B)
Junction
Connector
J19(A), J20(B)
Junction
Connector
P 7
Power Window Regulator
Motor (Front LH)
PLS2
SSRB
PLS
E
M
IC2
J34
Junction
Connector
(*3)


P 6(A), (B)
Power Window Master SW
* 1 : w/o Driver' s Window Jam Protection
* 2 : w/ Driver' s Window Jam Protection
U
D
18 A
13 B
15 A
15 B
10 A
18 B
16 A
16 B
12 A
12 B
13 A (*1)
10 B (*2)
R–L
G–W
R–B
G–B
R–Y
G–Y
10 IC2
3 IC2
6 IC2
5 IC2
2 IC2
1 IC2
L
3 IL2
4 IL2
8 BC1
6 BC1
7 BC1
8 BB1
6 BB1
7 BB1
R
L–R
G–B
Up
Down
P11
Power Window SW
(Front Passenger' s
Side)
P13
Power Window SW
(Rear RH)
P12
Power Window SW
(Rear LH)
M
P 8
Power Window Regulator
Motor (Front RH)
P10
Power Window Regulator
Motor (Rear RH)
P 9
Power Window Regulator
Motor (Rear LH)


J 19
Black

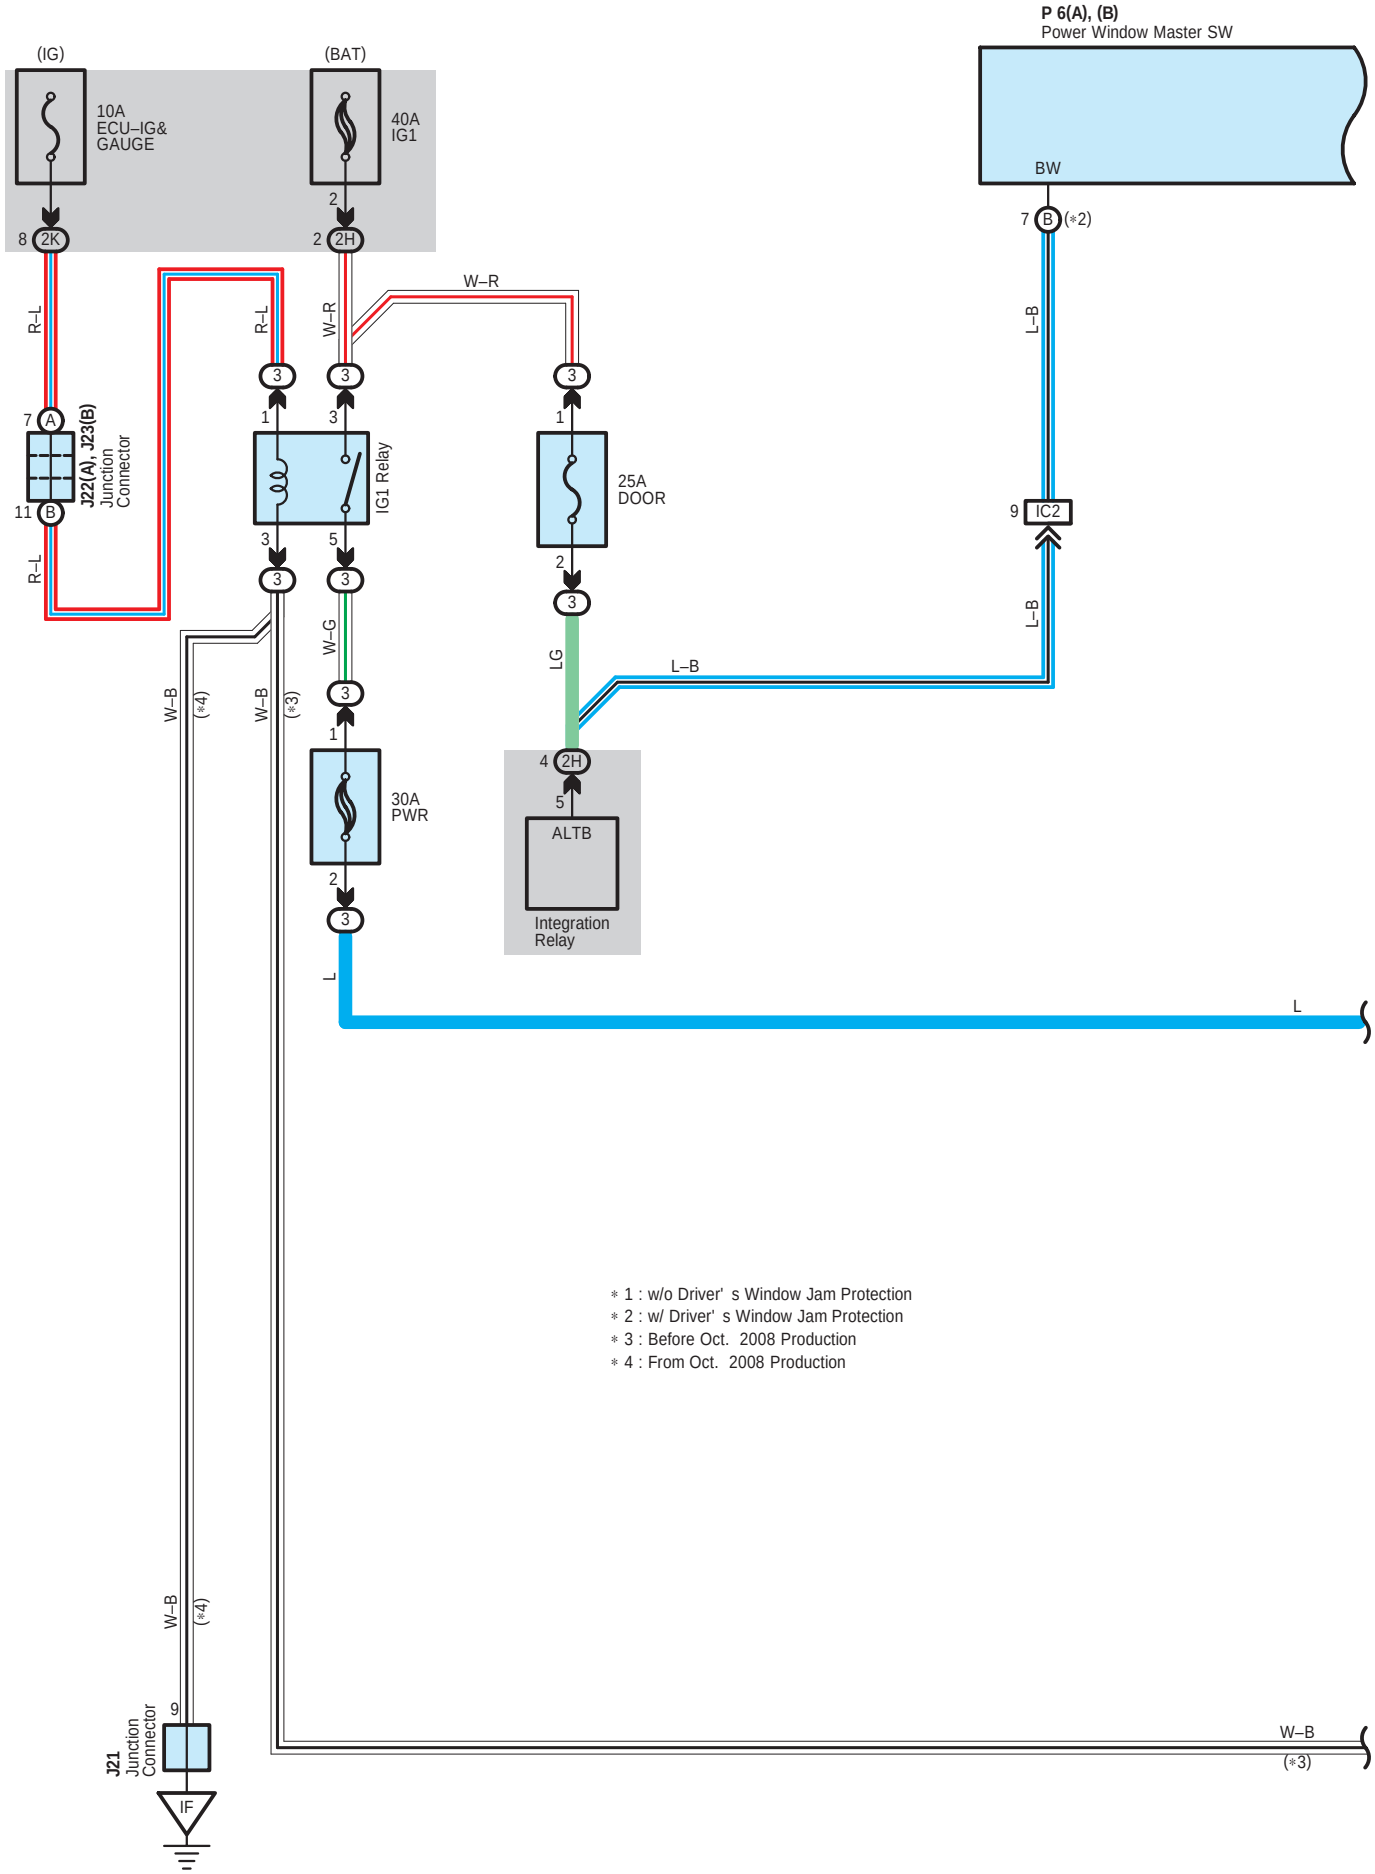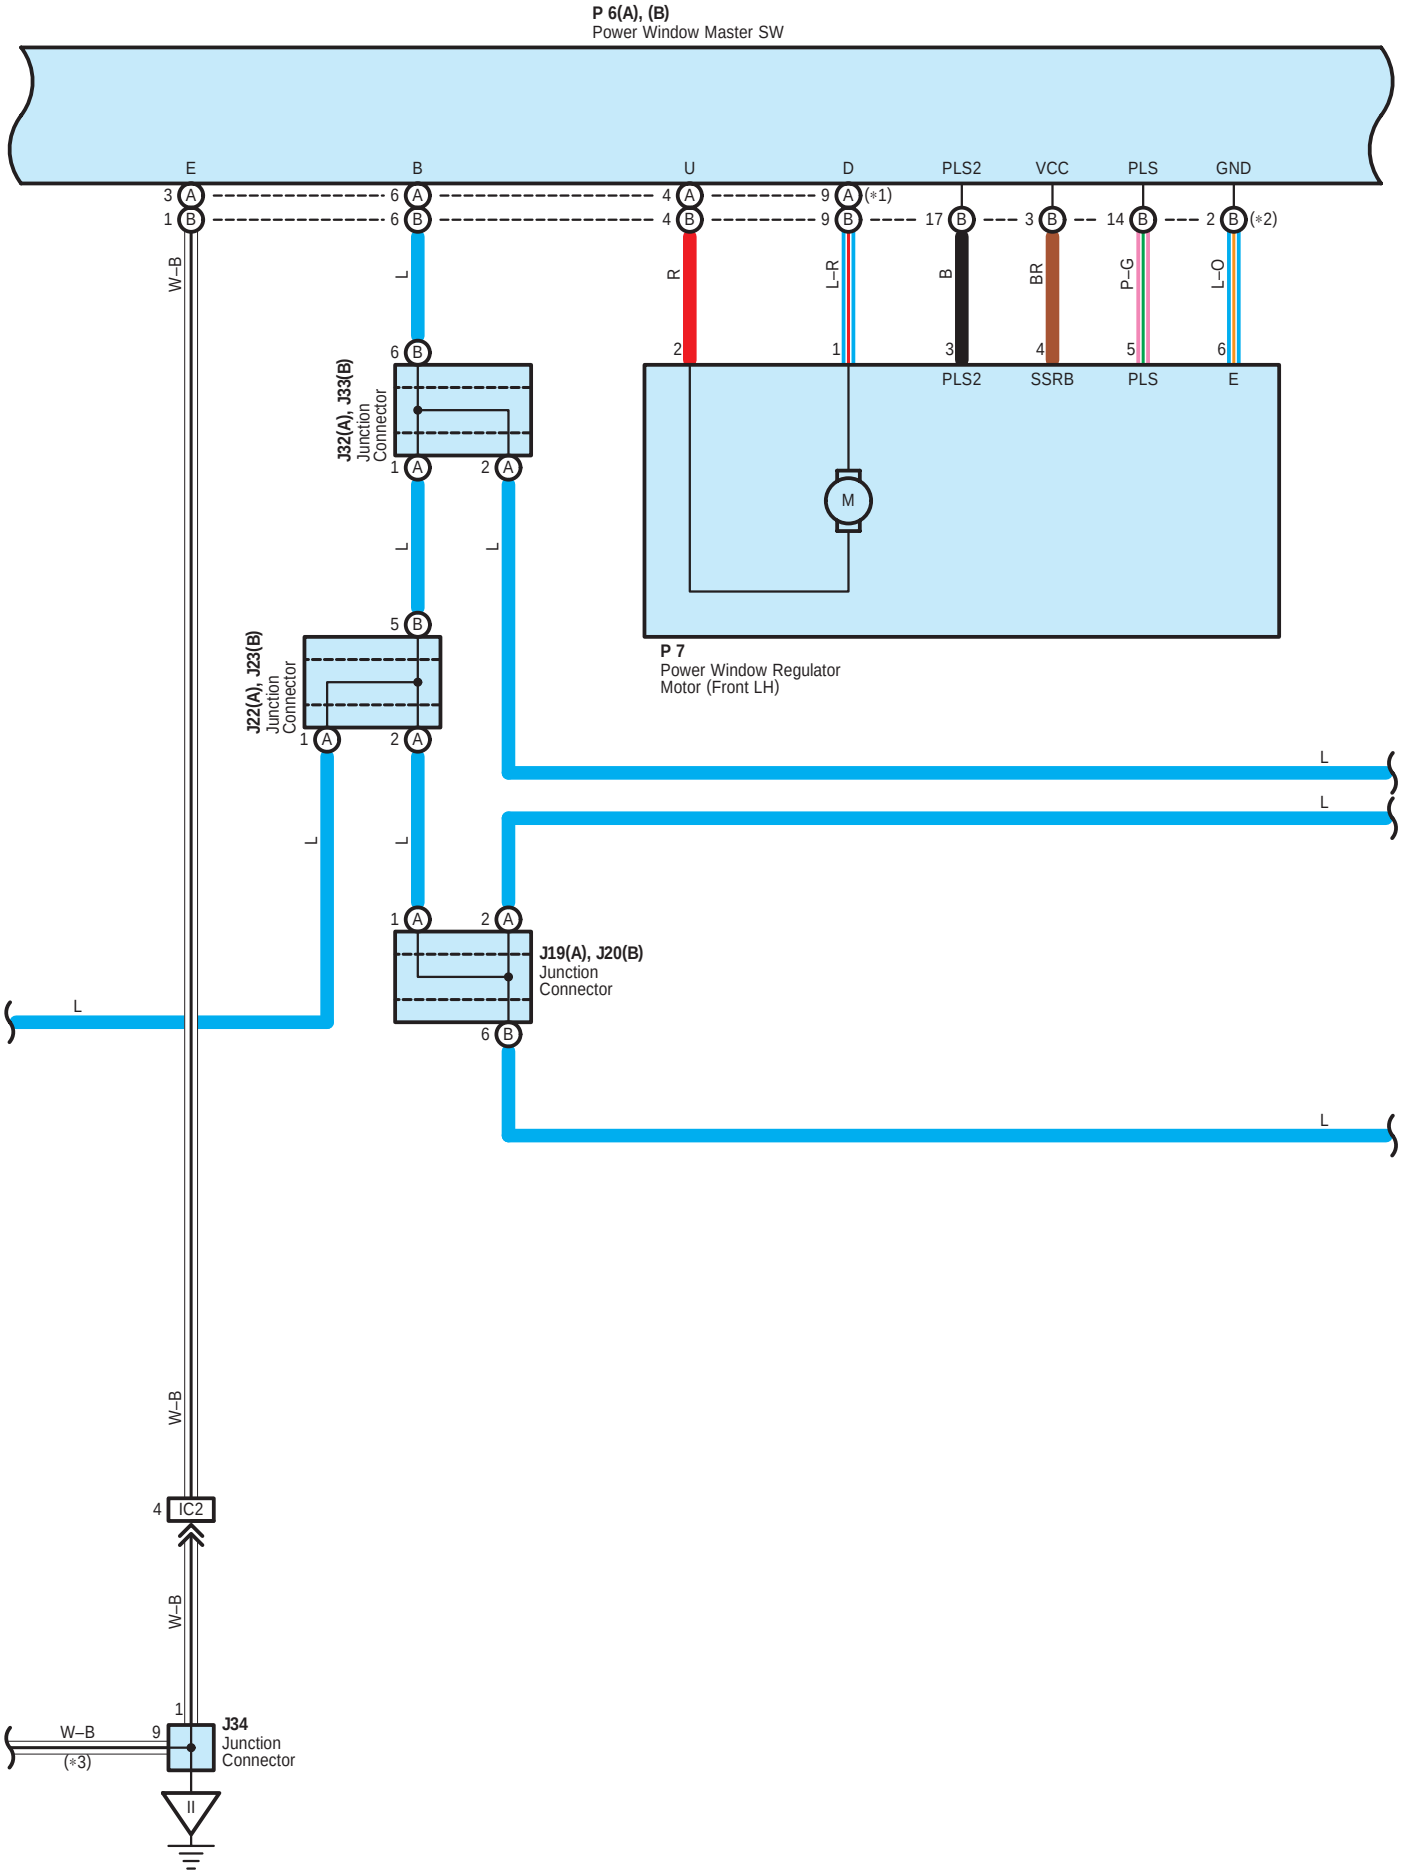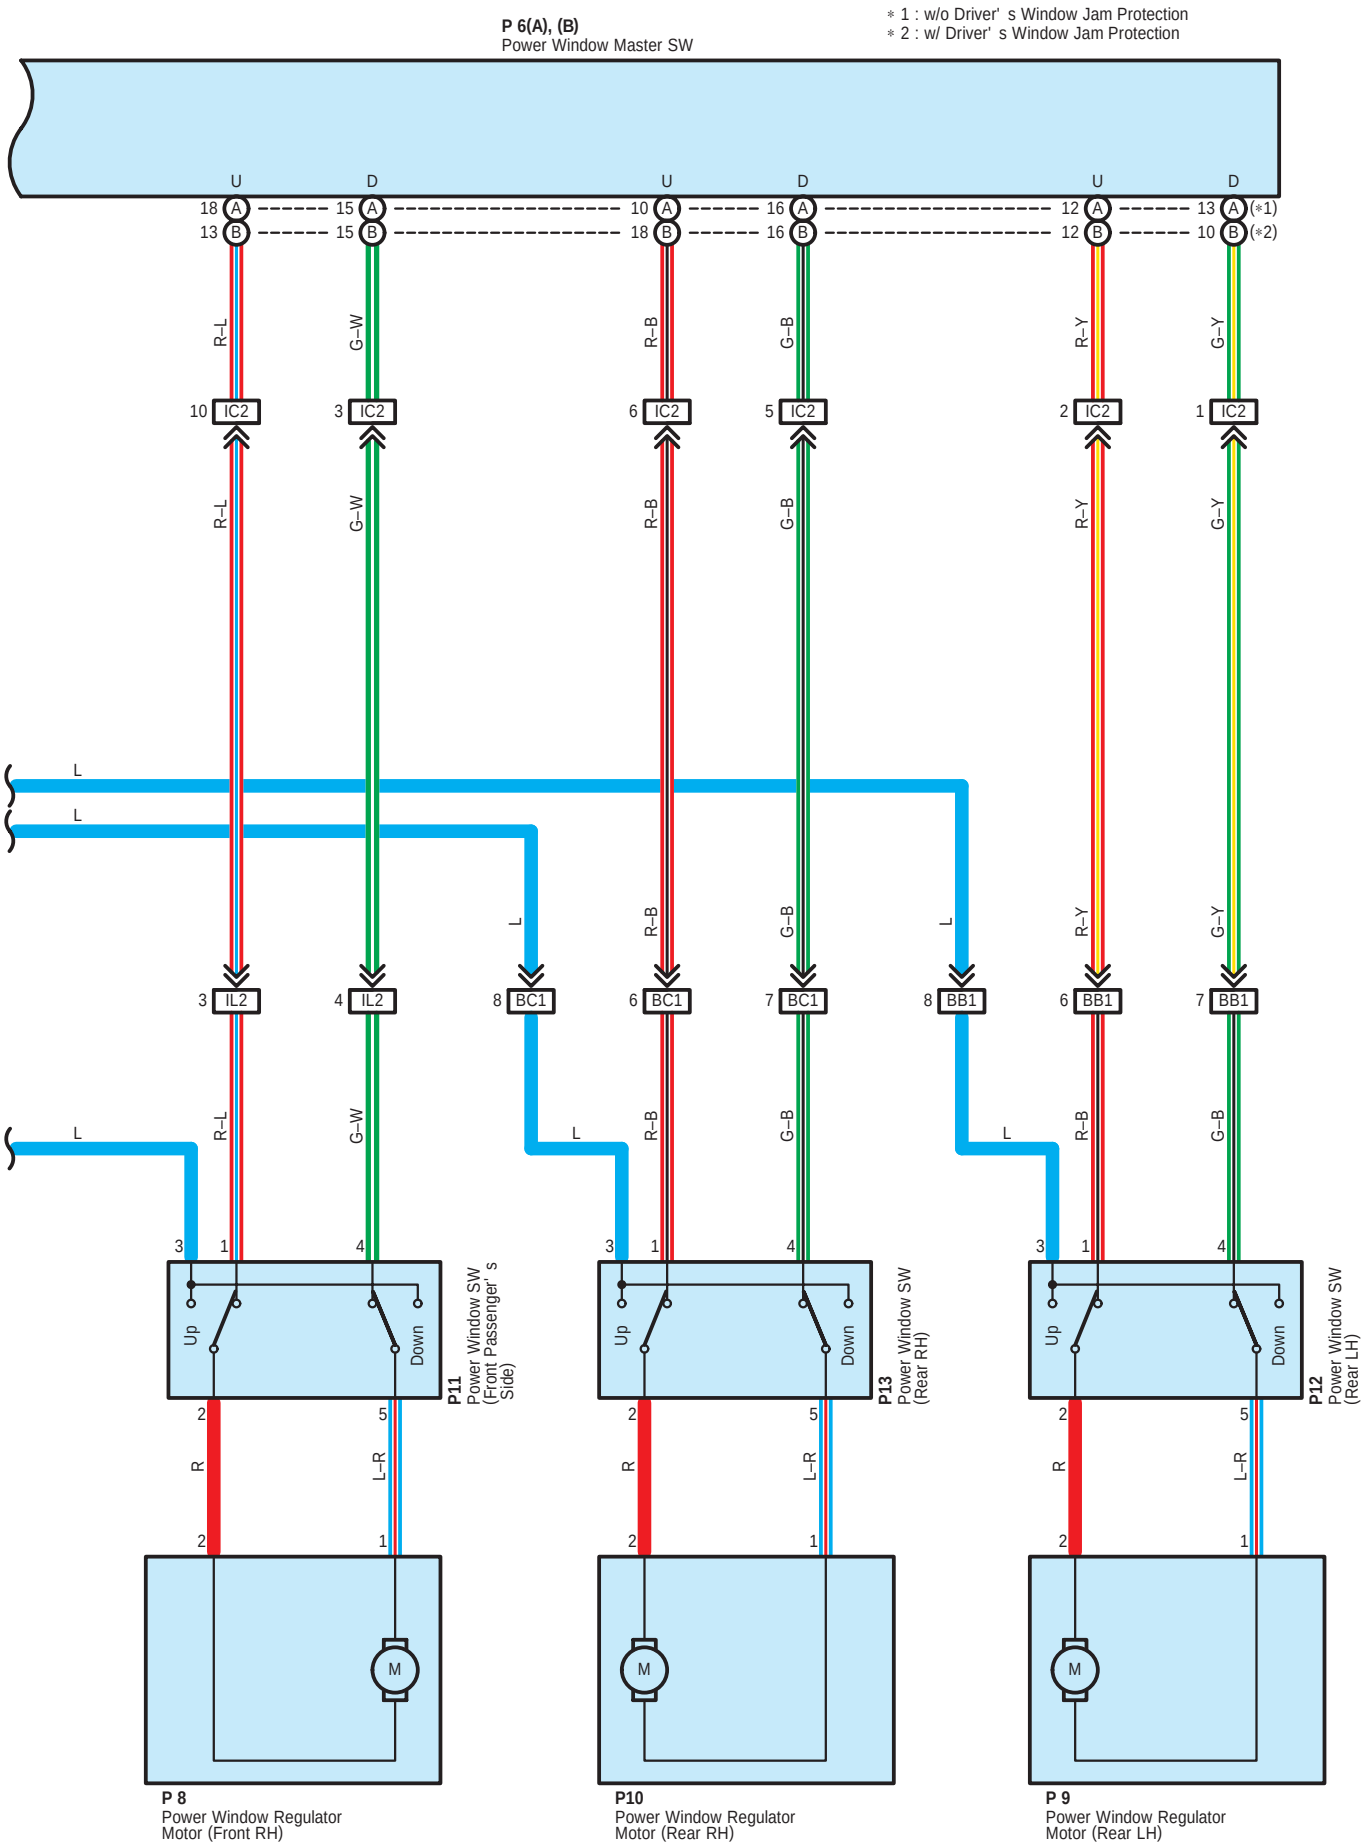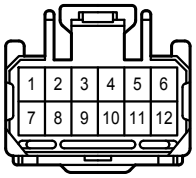


J 20
Black

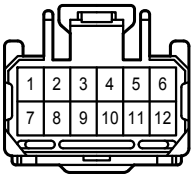


J 21
White

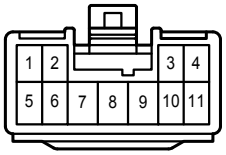


J 22
White

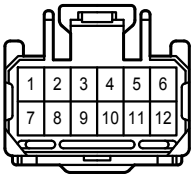


J 23
White

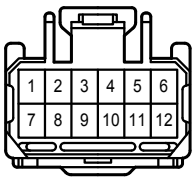


J 32
Black

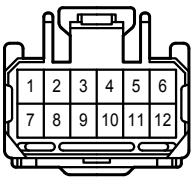


J 33
Black

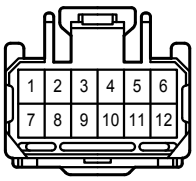

J 34
White

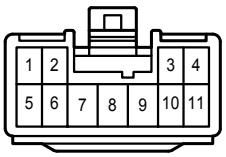

P 6
White

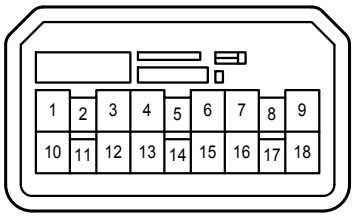

P 7
Black



P 8
Black




P 9
Black




P 10
Black




P 11
Black

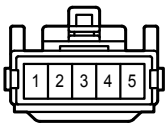


P 12
Black

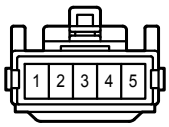


P 13
Black

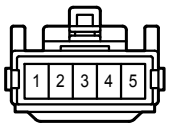


2H
White

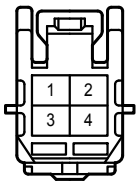


2K
Black

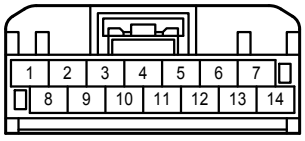


BB1
White

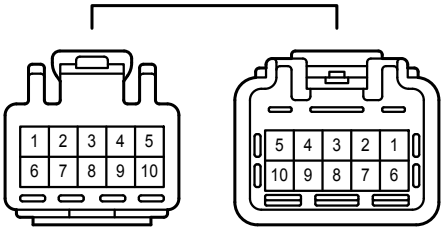


BC1
White

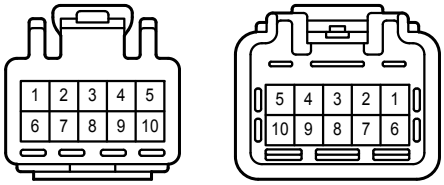

IC2
White

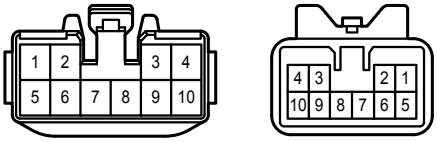

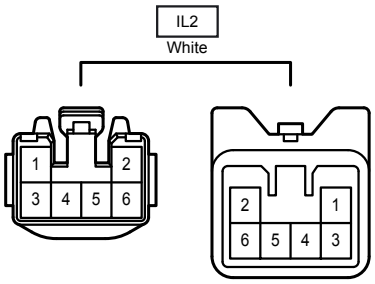
IL2
White
1
2
3
4
5
6
2
1
6
5
4
3