



(IG)
10A
ECU–IG&GAUGE
(IG)
7. 5A
MET
∗ 1 : w/ Accessory Meter
∗ 2 : w/o Accessory Meter
∗ 3 : w/ Power Seat
∗ 4 : w/o Power Seat
∗ 5 : w/ Front Passenger' s Seat Belt Warning
31 2S
14 2R
1 2D
R–B (∗1)
R–L (∗2)
B–O
BR (∗2)
C10
Combination Meter
21
12
IG
Front Passenger' s Seat Belt Warning
PBEW
A23
Accessory Meter
3
1
Flashing Circuit
P14
Passenger Seat Belt Warning Lamp
Driver' s Seat Belt
CPU
8
2
11
22
G–W (∗1)
G–W (∗2)
R–Y
Y
BR (∗2)
31 2Q
15 2P
19 IA1
14 2I
G–W (∗5)
R–Y
4
J32
Junction Connector
10 A
12 B
J28(A), J29(B)
Junction Connector
5 A
6 B
J26(A), J27(B)
Junction Connector
F12
Front Seat Inner Belt Assembly
(Front Passenger' s Side)
1
3
R–Y (∗3)
W–B (∗3)
R–Y (∗4)
16 A
17 A
J47(A), J48(B)
Junction Connector
11 B
10 B
1
F11
Front Seat Inner Belt Assembly
(Driver' s Side)
Buckle SW
Occupant Detection Sensor
2
R–Y (∗3)
W–B (∗3)
2
W–B (∗5)
4
W–B (∗4)
W–B
W–B (∗2)
F22
Front Seat Inner Belt Assembly
(Driver' s Side)
3
1
11
W–B
4
J21
Junction Connector
J34
Junction Connector
II
IF
IG


A 23
Gray

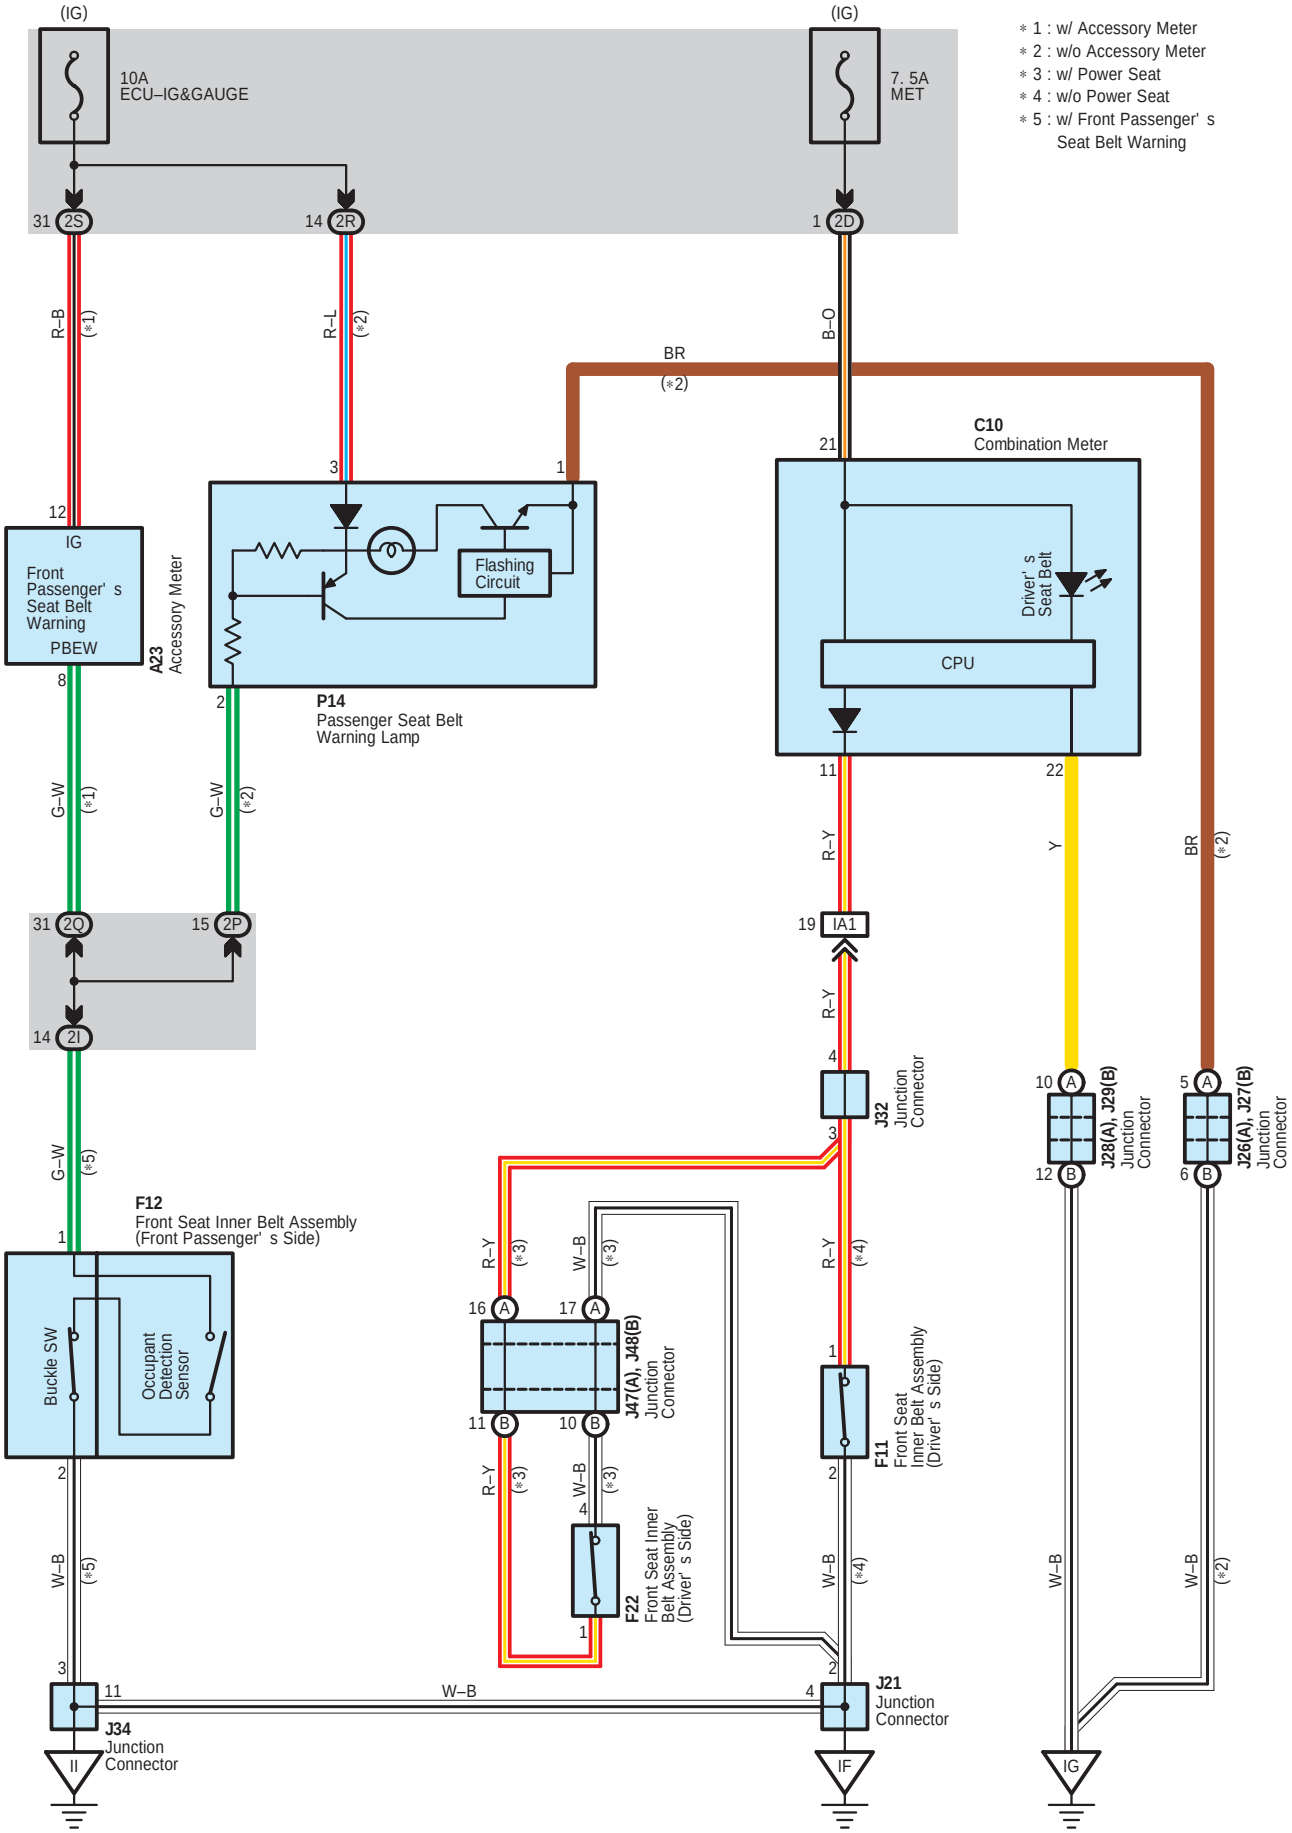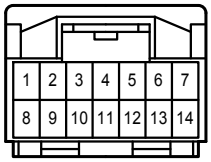


C 10
White

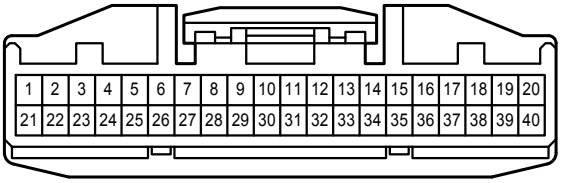


F 11
White




F 12
White




F 22
White

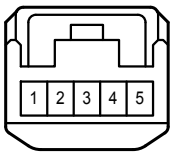


J 21
White

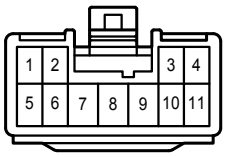


J 26
White

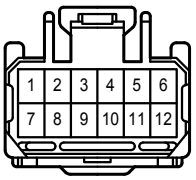


J 27
White

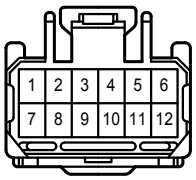


J 28
White

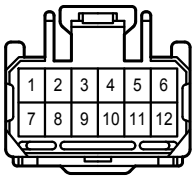


J 29
White

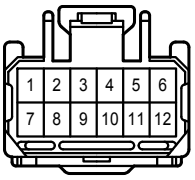


J 32
Black

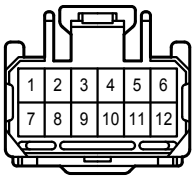


J 34
White

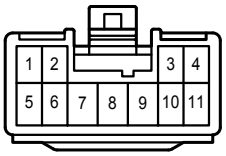


J 47
White

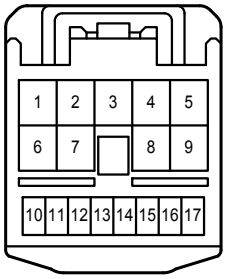


J 48
White

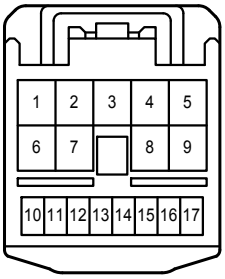


P 14
Black

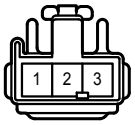


2D
White

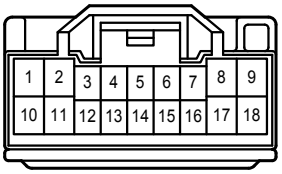


2I
White

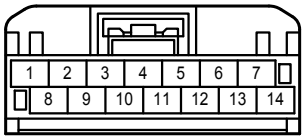


2P
White

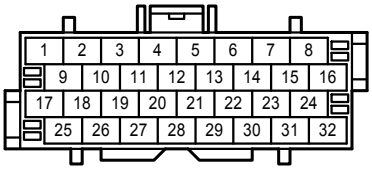


2Q
Gray

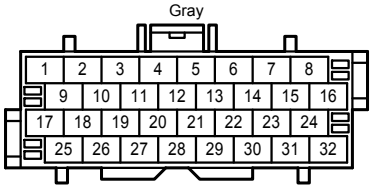


2R
Gray

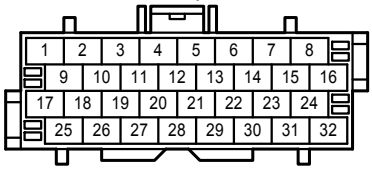

2S
White

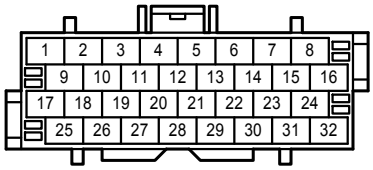

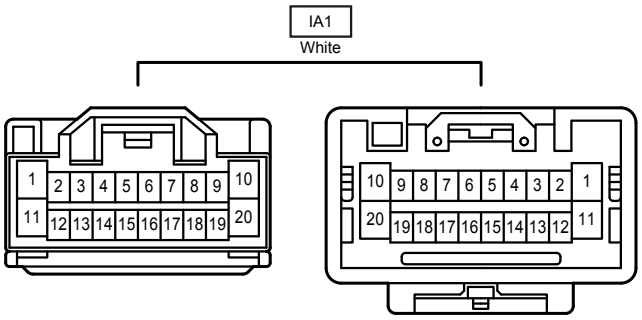
IA1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11