

* 1 : 2TR–FE
* 2 : 1GR–FE
(IG)
7. 5A
MET
(IG)
7. 5A
IGN
1 2D
8 2B
B–O
C10
Combination
Meter
21
SRS
CPU
22
20
Y
B–Y
D 3
DLC3
A/B
SIL
TC
11
7
13
B–Y
R–Y
P–B
22 2Q
21 2Q
7 2B
4 2B
W
P–B
16
15
B–O
21
E 9(A), E13(B)
Engine ECU
F/PS
32 A (*1)
32 B (*2)
B
(*1, *2)
2 IF1
B
(*1, *2)
22
A10
Airbag Sensor
(Front LH)
–SL
+SL
1
2
BR
W–R
4 II1
3 II1
BR
W–R
28
30
A11
Airbag Sensor
(Front RH)
–SR
+SR
1
2
BR–W
B–W
2 II1
1 II1
BR–W
B–W
27
29
SIL
TC
IG2
GSW2
–SL
+SL
–SR
+SR
A24
Airbag Sensor Assembly Center
LA
D+
D–
P+
P–
E1
E2
14
5
6
4
3
25
26
10 A
12 B
J28(A), J29(B)
Junction Connector
W–B
21 2O
5 2O
3 2B
B–Y
B–Y
Y–B
Y
Y–R
Y–G
W–B
W–B
1 IH1
2 IH1
Y
Y–B
1
2
1
2
Spiral
Cable
A26
Airbag Squib
(Steering Wheel Pad)
A25
Airbag Squib
(Front Passenger' s
Airbag Assembly)
1 2B
2 2B
18 2D
9 2D
W–B
W–B
W–B
IG
IH


A 10
Yellow

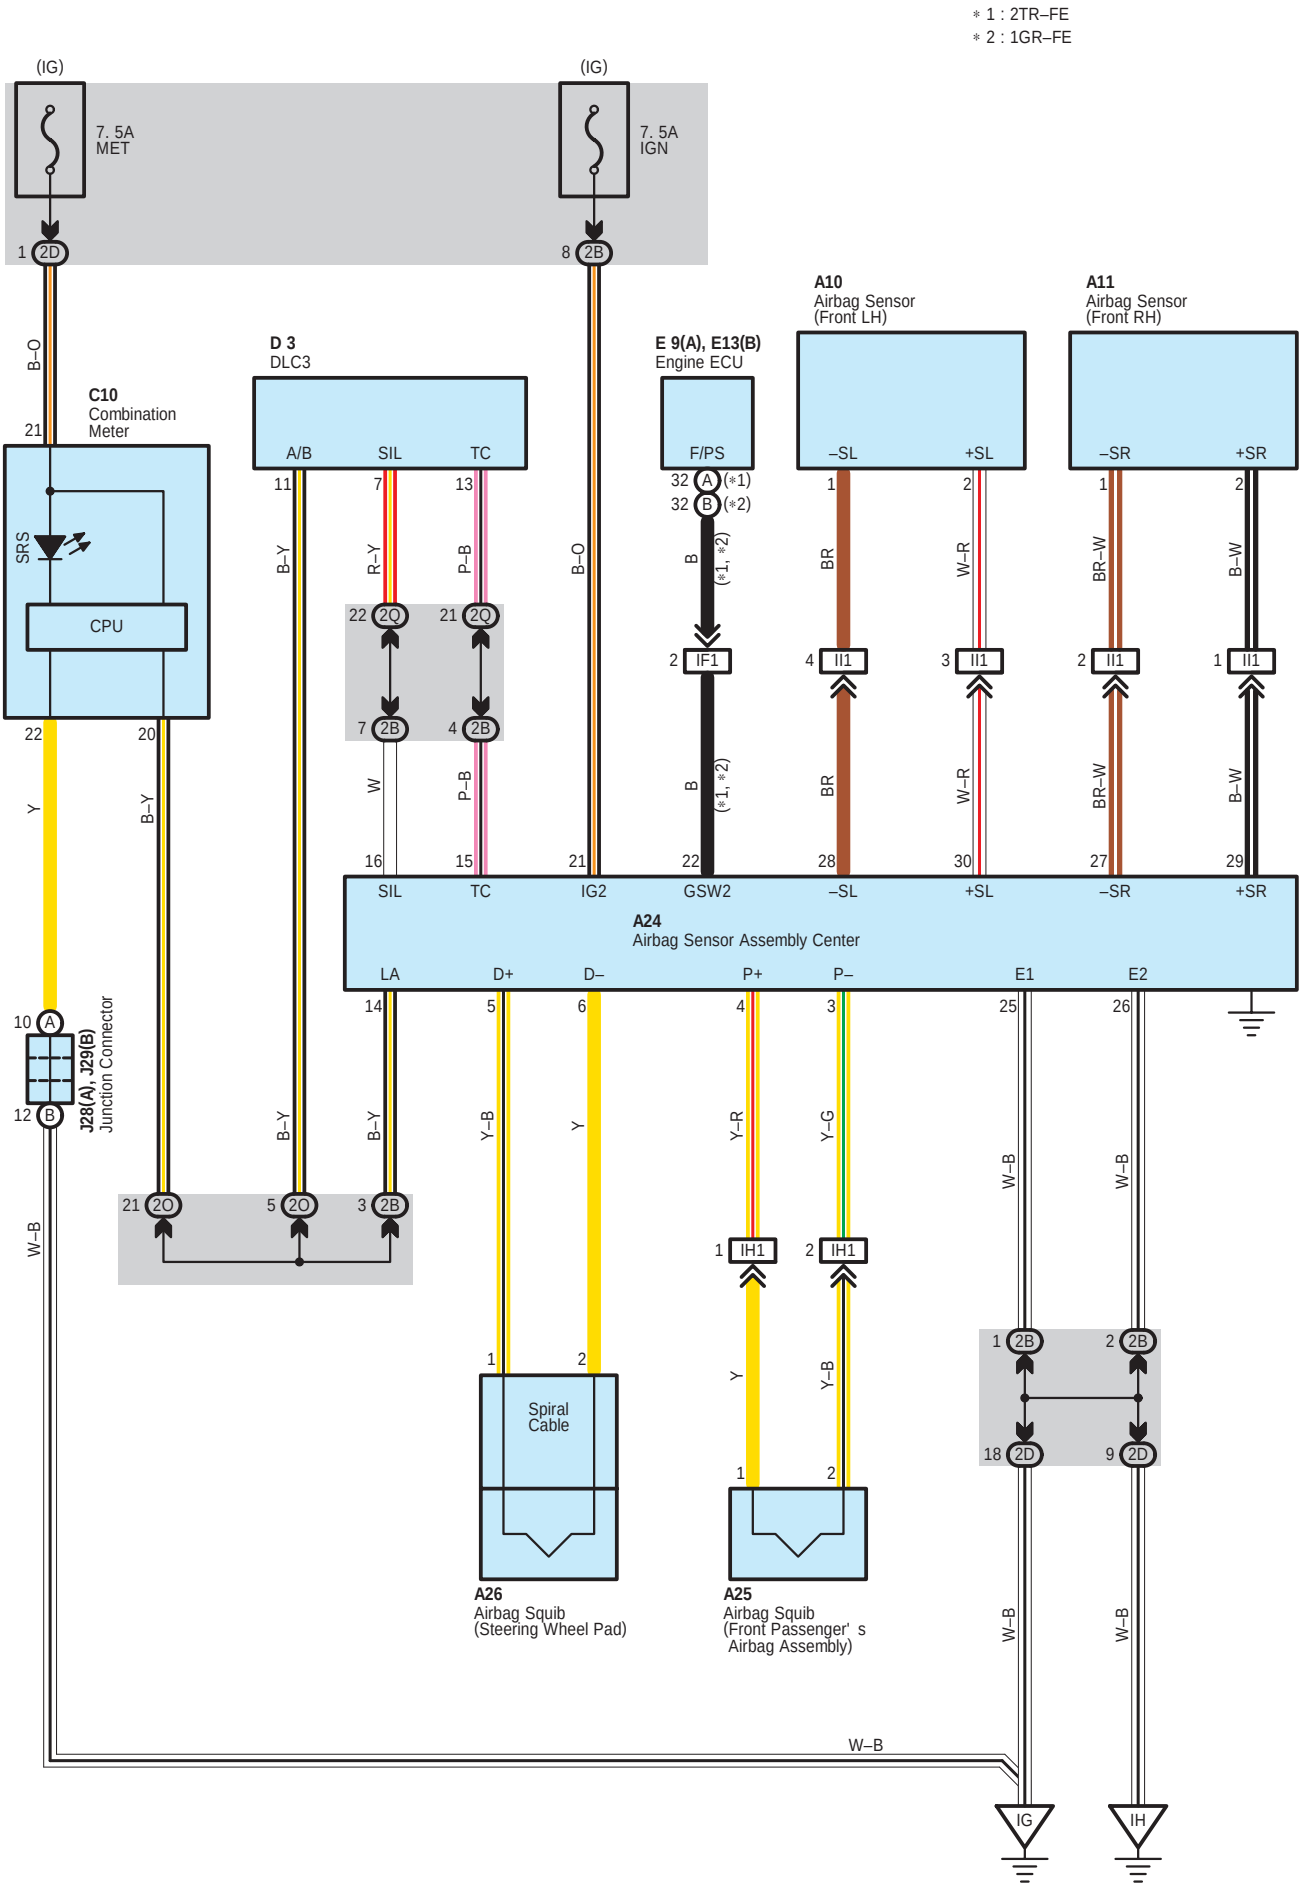


A 11
Yellow




A 24
Yellow

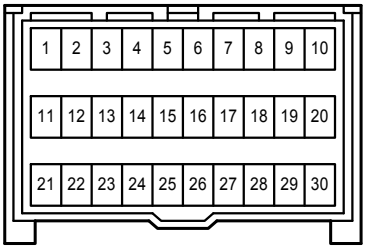


A 25
Orange




A 26
Yellow

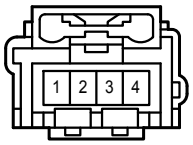


C 10
White

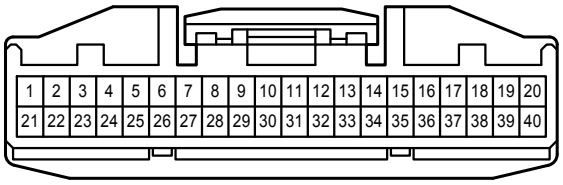


D 3
White

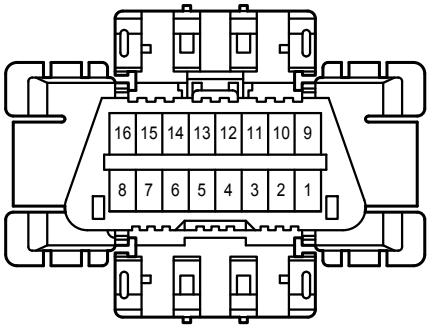


E 9
White

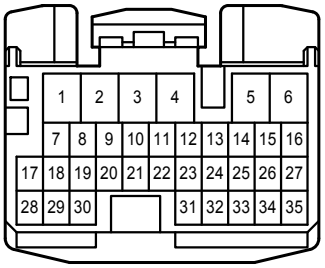


E 13
White

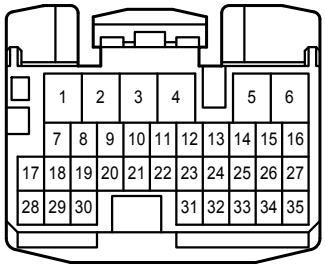


J 28
White

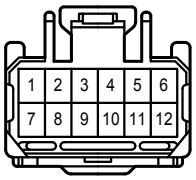


J 29
White

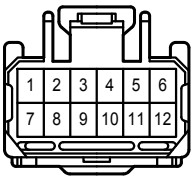


2B
Yellow

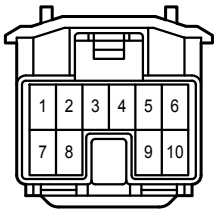


2D
White

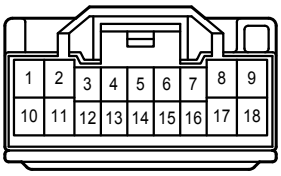


2O
White

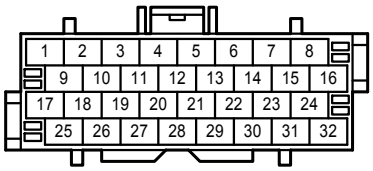


2Q
Gray

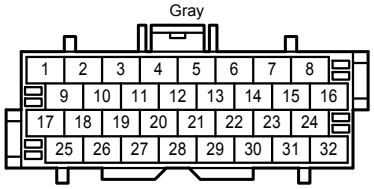

IF1
White

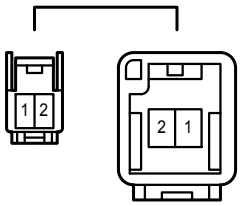

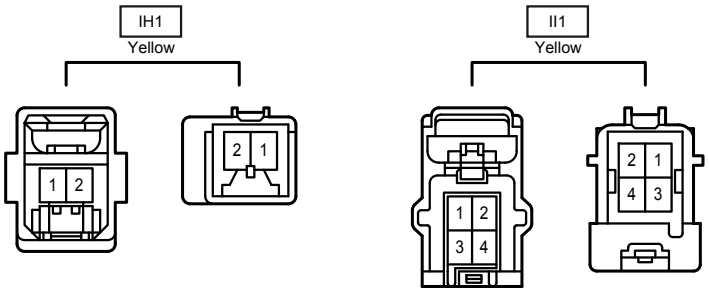
IH1
Yellow
1
2
2
1
II1
Yellow
1
2
3
4
2
1
4
3