




(ST)
7. 5A
ST
3 2O
L–Y
1 ID2
L–Y
(M/T)
L–Y
(A/T)
B–Y
(A/T)
4 EA1
W–R
B–Y
1
1
(*1, *3)3
(*2)5
2
ST
Relay
(*1, *3)5
(*2)3
1
1
1
L
W–B
10 II4
W–B
W–B
12
SRLY
4
N 1
Park/Neutral
Position SW
B
L
P
N
5
B–Y
(A/T)
J15(E), J17(A), J40(C)
Junction
Connector
4 E (*1)
8 A (*2)
10 C (*3)
3 E (*1)
7 A (*2)
9 C (*3)
(BAT)
25A
DOOR
2
3
LG
7 IK1
LG
14
+B2
(BAT)
7. 5A
ECU–B (*5)
10A
ECU–B (*6)
2
1
L
12 2L
13 2S
L–Y
4
+B1
(BAT)
10A
HORN
2
HORN
Relay
8 1I
B
1
H 7
Horn
(Low)
B
1
H 6
Horn
(High)
7 1I
W–R
12 II4
W–R
16 2N
16 2O
W–R
11
HORN
T16
Theft Warning ECU
SH–
13
B
13 II4
B
1
S 1
Security
Horn
DSWH
9
G–R
15 II4
G–R
1
E 2
Engine Hood
Courtesy SW
2
W–B
2
J1
Junction
Connector
1
W–B
EB



(IG)
10A
ECU–IG&GAUGE
16 2S
R–L
T23
Turn Signal
Flasher
HAZ
8
G–O
25 2O
9 2N
G–O
28
HAZD
18
IG
T16
Theft Warning ECU
L2
UL3
25
26
L
L–W
L
L–W
17 A
13 A
16 A
12 A
J30(A), J31(B)
Junction
Connector
17 B
21 B
L
L–W
9
10
Key
Lock
Key
Unlock
D 8
Door Lock Assembly
(Driver ' s Side)
3 A
4 B
J32(A), J33(B)
Junction
Connector
R–Y
7
R–Y
(*8)
1
2
F11
Front Seat Inner
Belt Assembly
(Driver ' s Side)
W–B
(*8)
2
J21
Junction
Connector
IF
R–Y
(*7)
W–B
(*7)
16 A
17 A
J47(A), J48(B)
Junction
Connector
11 B
10 B
R–Y
(*7)
W–B
(*7)
4
1
F22
Front Seat Inner
Belt Assembly
(Driver ' s Side)
4 2D
4 2A
11
14
UL1
L1
Integration
Relay
DCTY
16
27 2O
R–B
* 1 : 2TR–FE
* 2 : 1KD–FTV
* 3 : 1GR–FE
* 5 : Before Oct. 2008 Production
* 6 : From Oct. 2008 Production
* 7 : w/ Power Seat
* 8 : w/o Power Seat


∗ 4 : Argentina From Oct. 2007 Production Automatic A/C, Venezuela
∗ 5 : Before Oct. 2008 Production
∗ 6 : From Oct. 2008 Production
(BAT)
7. 5A
DOME
R
(∗4)
2
1
8 2J
4 2E
DOOR
OFF
ON
R14
Room Lamp (Center)
R15
Room Lamp (Luggage)
P
2 IG1
3
DMLP
T16
Theft Warning ECU
CTY
KSW
E
IND
7
14 2N
31 2O
15 2O
R–L
J35
Junction Connector
11
3
8
10
9
5 BD1
13 IA1 (∗5)
14 IA1 (∗6)
C10
Combination Meter
17
15
16
R–B
4 IA1 (∗6)
3 IA1 (∗5)
D 4
Door Courtesy SW
(Driver' s Side)
D 5
Door Courtesy SW
(Front Passenger' s Side)
D 6
Door Courtesy SW (Rear LH)
D 7
Door Courtesy SW (Rear RH)
B 9
Back Door Lock Assembly
Courtesy SW
W–B
BK
5
10 2N
10 2O
G–Y
U 1
Unlock Warning SW
GR
1
B–W
27
2 2C
4 2C
G–R
S10
Security
Indicator Lamp
L–Y
8 A
11 A
11 B
12 B
J28(A), J29(B)
Junction
Connector
IG

B 9
White

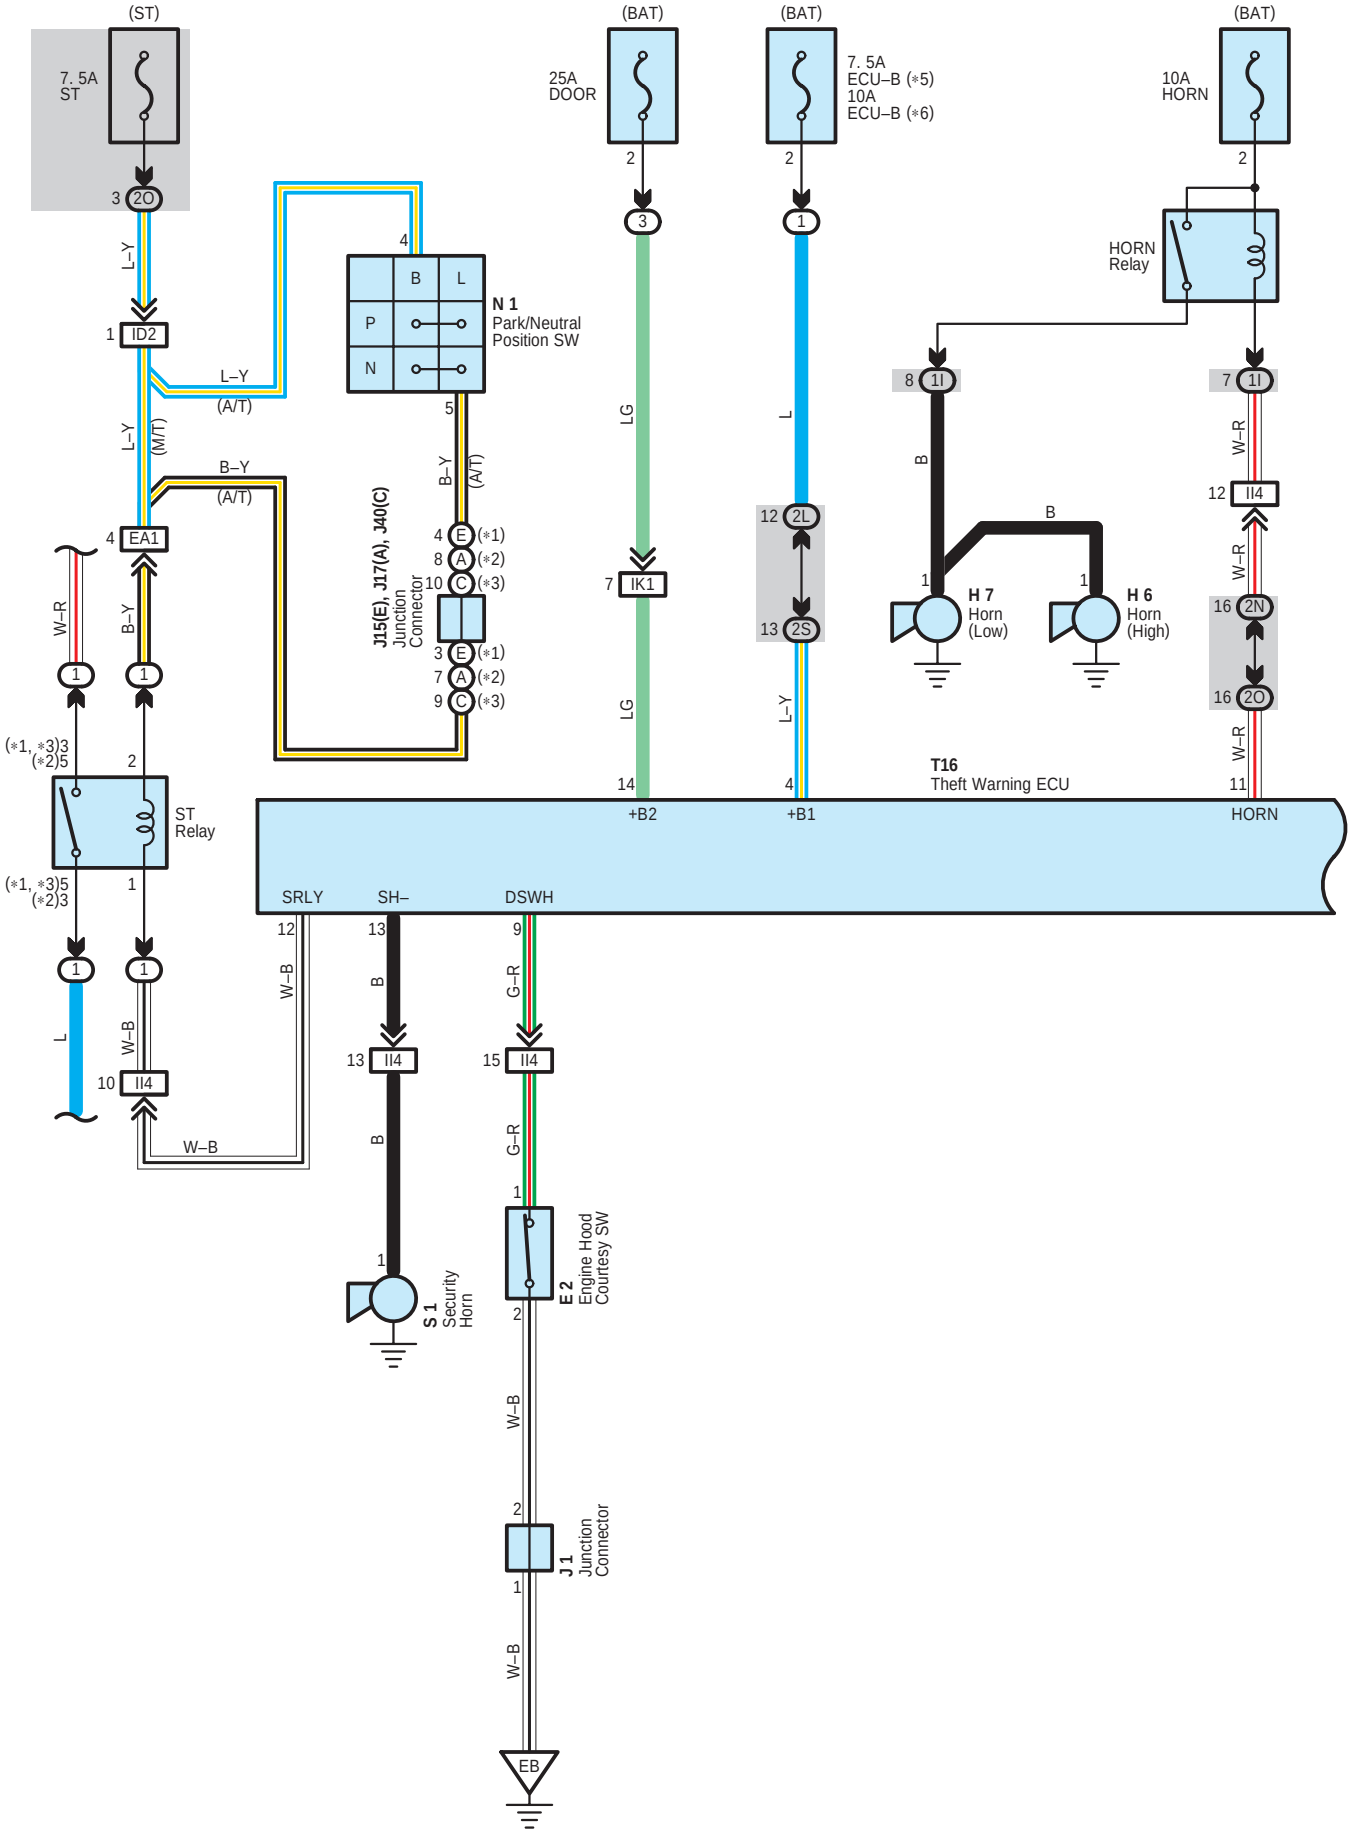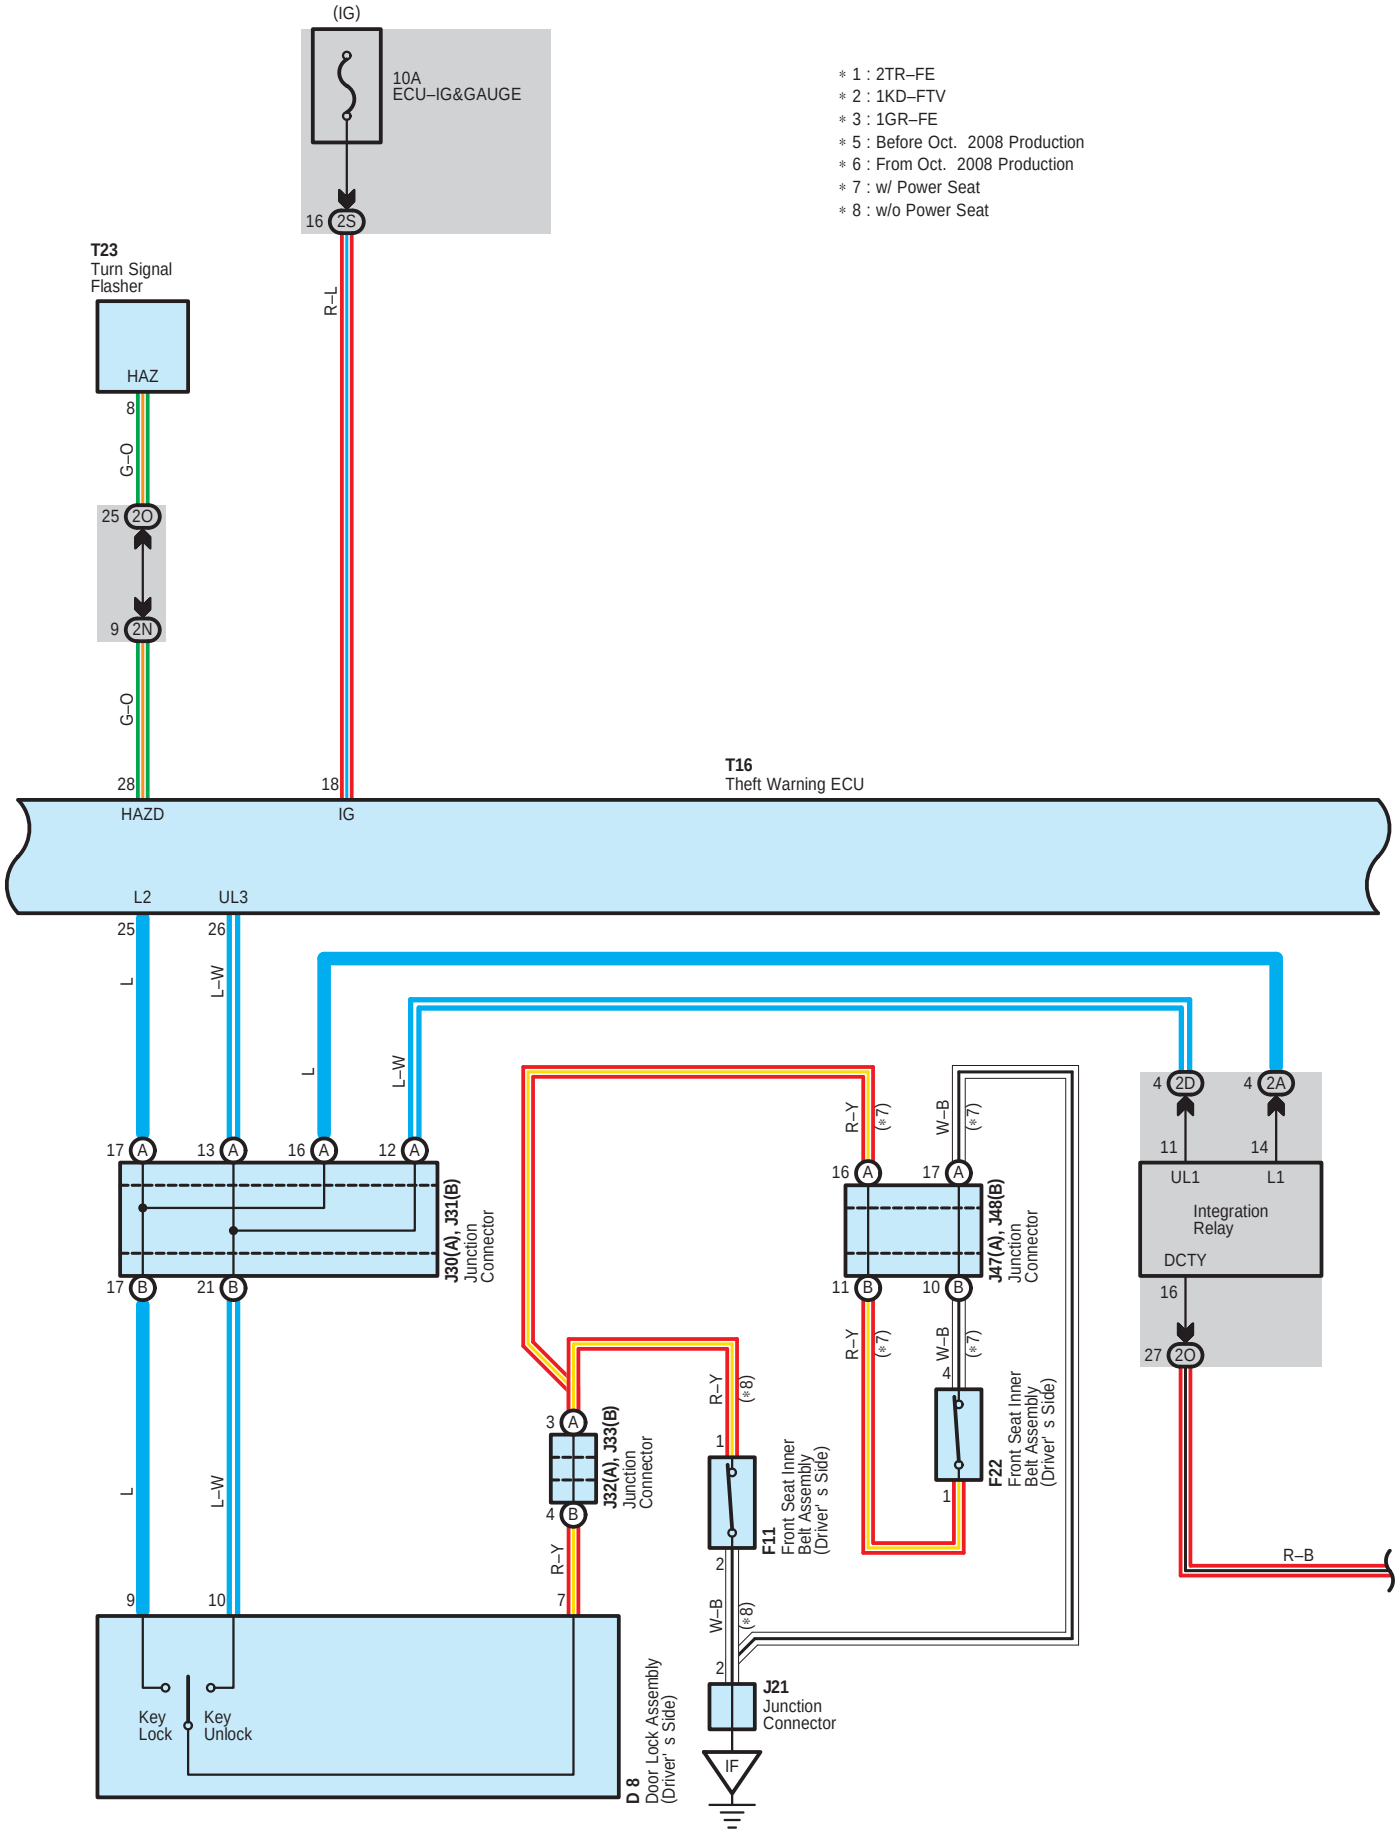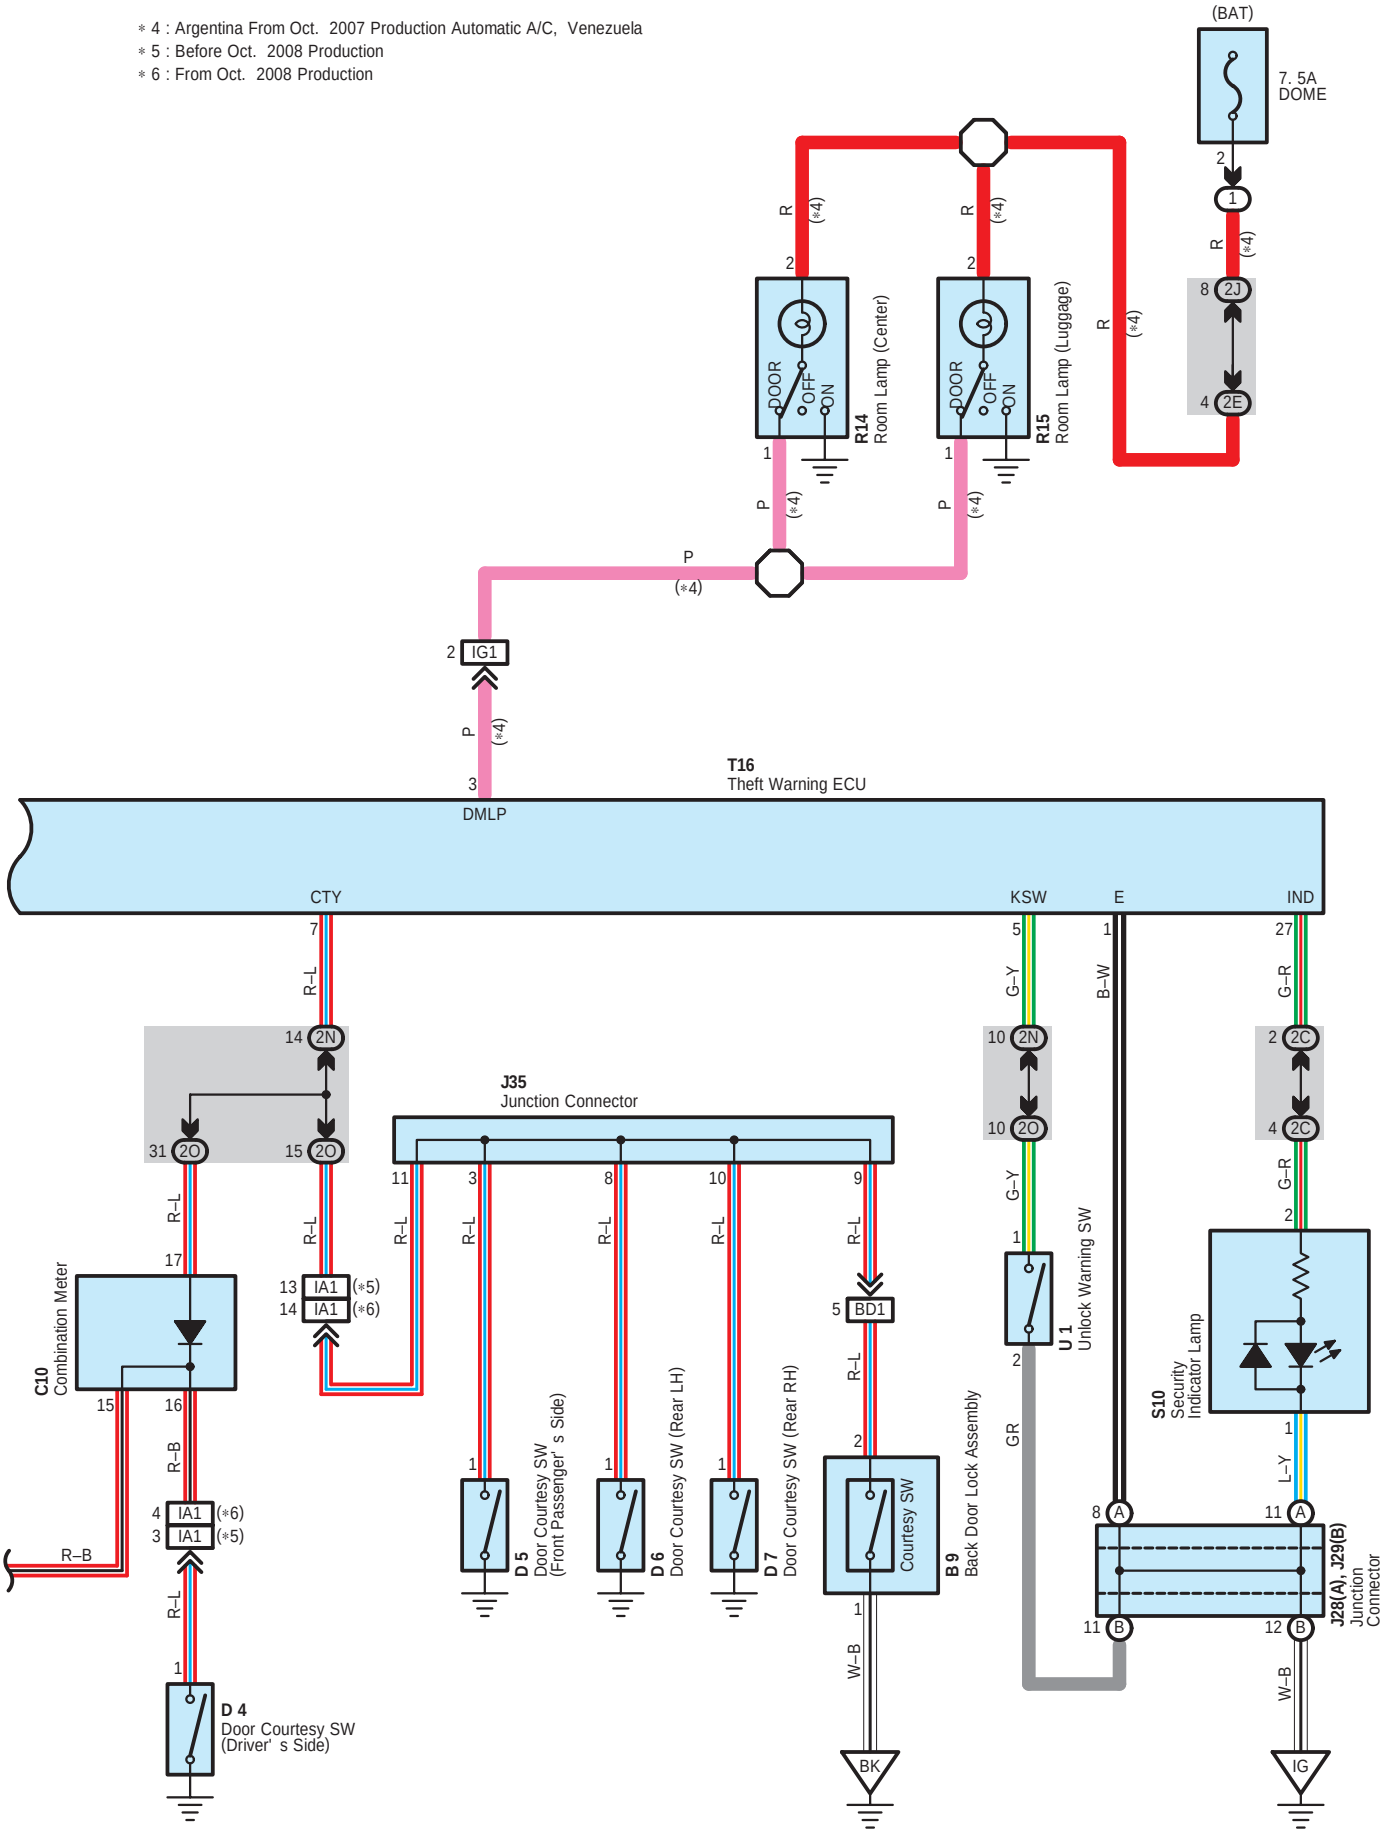

C 10
White

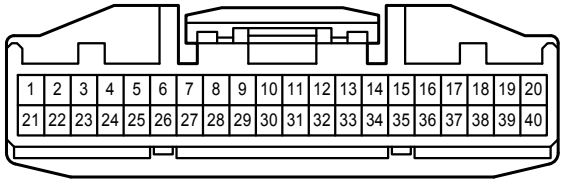

D 4
White



D 5
White




D 6
White



D 7
White




D 8
White

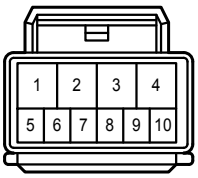


E 2
White



F 11
White




F 22
White

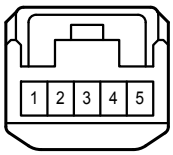


H 6
Black




H 7
Black




J 1
White




J 15
White

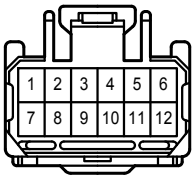


J 17
White

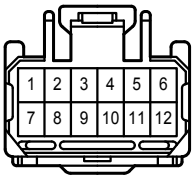


J 21
White

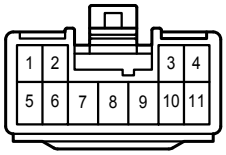


J 28
White

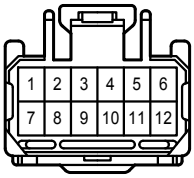


J 29
White

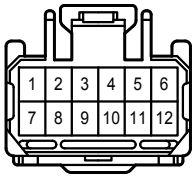


J 30
Blue

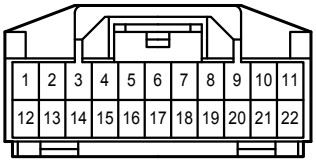


J 31
Blue

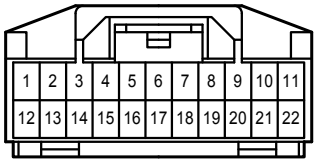


J 32
Black

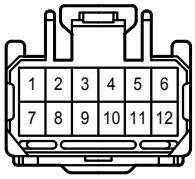


J 33
Black

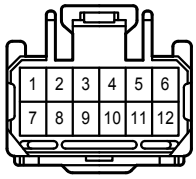


J 35
White

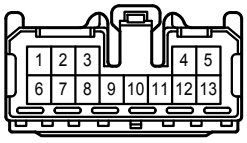


J 40
White

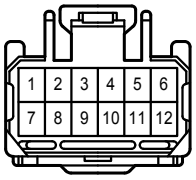


J 47
White

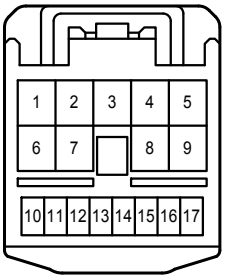

J 48
White

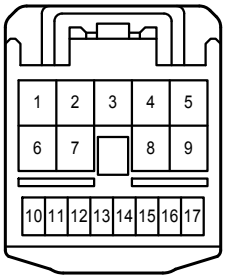

N 1
Gray

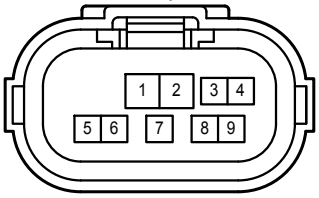

R 14
White




R 15
White




S 1
Black



S 10
White




T 16
White

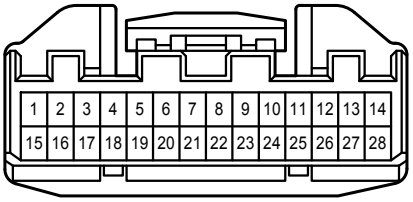


T 23
Black




U 1
White




1I
White

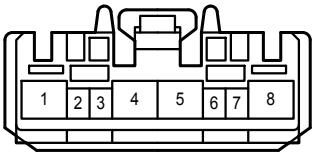


2A
White

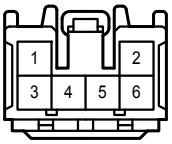


2C
White

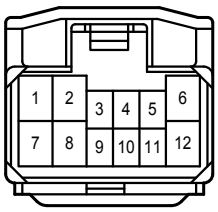


2D
White

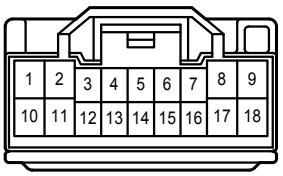


2E
White

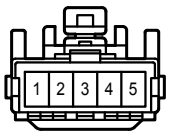


2J
White

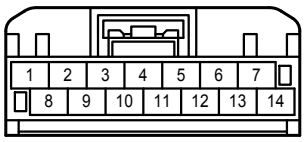


2L
Black

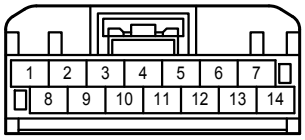


2N
Gray

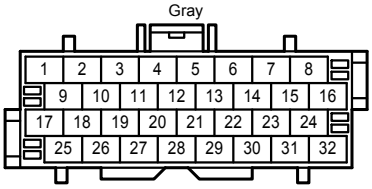


2O
White

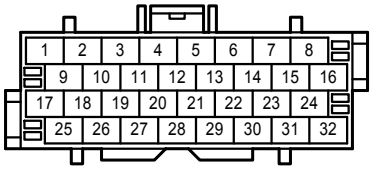


2S
White

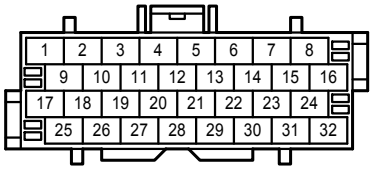


BD1
White

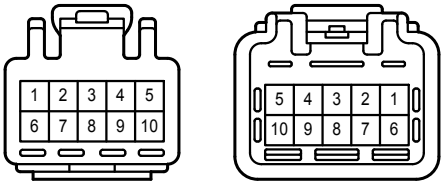


EA1
White

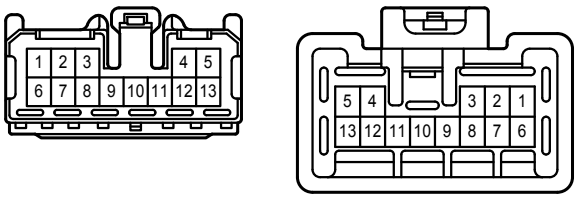


IA1
White

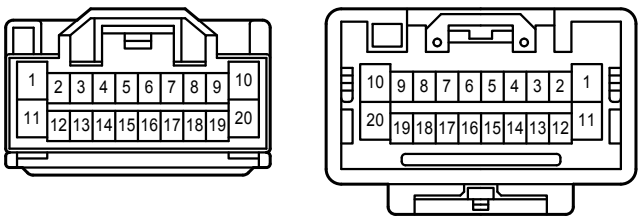


ID2
White

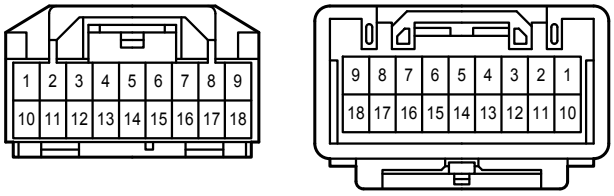

IG1
White

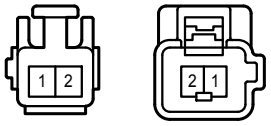

II4
White

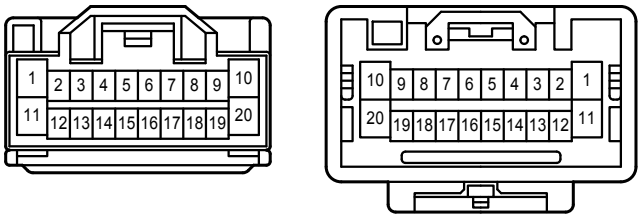

IK1
White

