
TOYOTA PARKING ASSIST-SENSOR SYSTEM

■ DESCRIPTION

- A TOYOTA parking assist-sensor system is provided as standard equipment on models for Thailand and Vietnam with automatic transmission, and all models for Indonesia and G.C.C Countries.
- This system operates with the ignition switch ON, clearance warning switch ON, and the shift lever in the "R" position.
- When the vehicle approaches an obstacle behind, the clearance warning ECU detects the presence of the obstacle through the ultrasonic sensors that are provided on the rear bumper. Then, the clearance warning ECU sounds the clearance warning buzzer in order to warn the driver.
- This system consists of the clearance warning ECU, clearance warning switch, ultrasonic sensors and clearance warning buzzer.

▶ System Diagram ◀

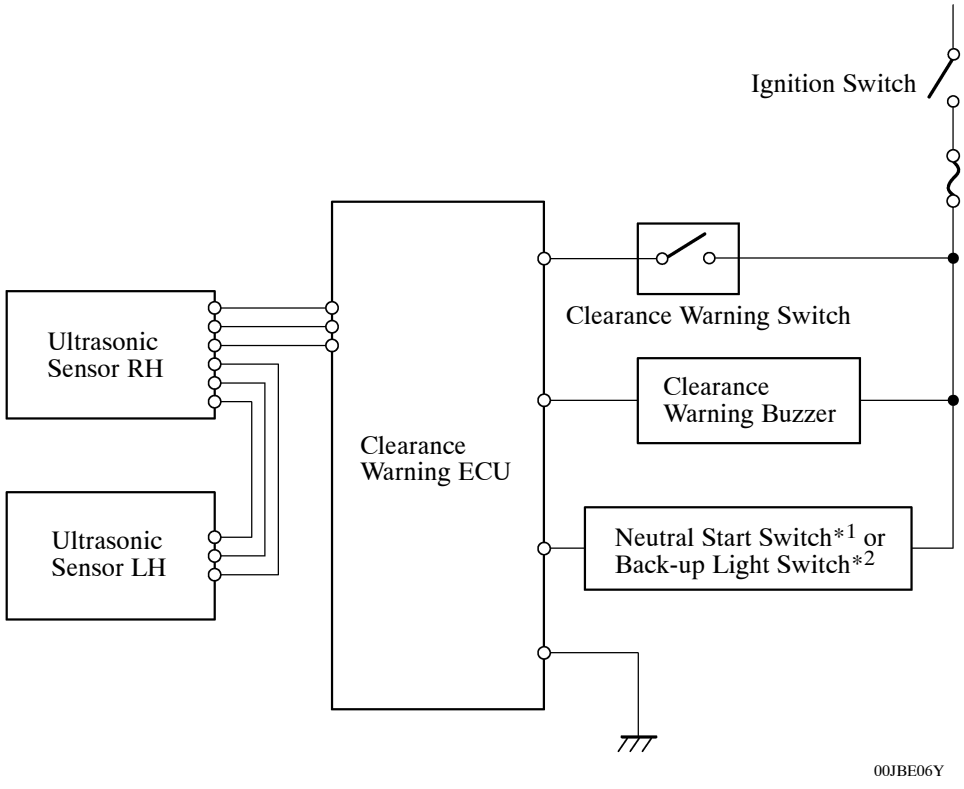

*1: Models with automatic transmission
*2: Models with manual transmission

BE