POWER WINDOW SYSTEM


■ DESCRIPTION

- The new Fortuner/Hilux SW4 uses a power window system. For details on the provision, see Equipment List on page MO-23.
- This system has the following functions:

Function	Outline
Manual Up-and-down	This function causes the window to open or close while the power window switch is being pulled halfway down. The window stops as soon as the switch is released.
Driver's Door One-touch Auto Down	The driver's door one-touch auto down function enables the window of driver's door to be fully opened at a touch of the power window switch.
Driver's Door One-touch Auto Up-and-down*	The driver's door one-touch auto up-and-down function enables the window of driver's door to be fully opened or closed at a touch of the power window switch.
Jam Protection*	A jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the driver's door window during one-touch auto-up operation.
Remote Control	The up-and-down operations of the front passenger door window and the rear door window can be controlled by operating the power window master switch.

*: Models with jam protection function

▶ System Diagram ◀

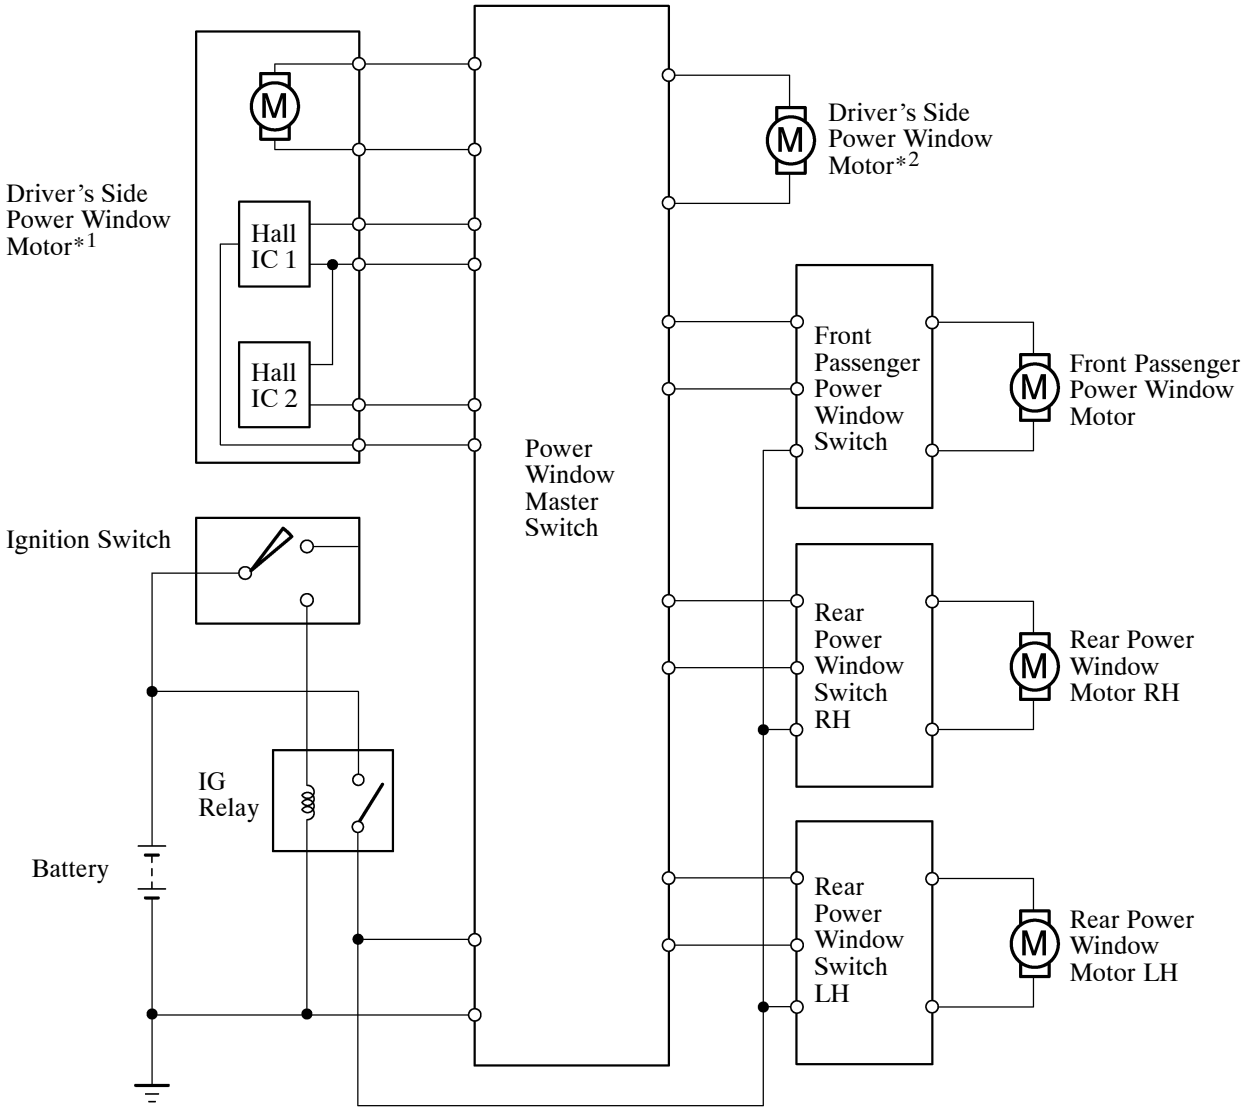

LHD Model

*1: Models with jam protection function
*2: Models without jam protection function

BE