
SRS AIRBAG SYSTEM


■ DESCRIPTION

- The new Fortuner/Hilux SW4 uses a SRS (Supplemental Restraint System) airbag system. For details on the provision, see Equipment List on page MO-23.
- The SRS driver and front passenger airbags are used to help reduce the shocks to the heads and chests of the driver and front passenger in the event of a frontal collision as supplements to the seat belts.
- The SRS side and curtain shield airbags are used to help reduce the shocks to the heads and chests of the driver, front passenger, and outer rear passengers in the event of a side collision.
- As a countermeasure against an interruption in the power supply in the event of a collision involving the vehicle, a backup power supply which consists of a power supply capacitor and a voltage boost circuit (DC-DC converter) is provided in the airbag sensor assembly.
- On the models with the gasoline engine, the airbag sensor assembly includes a fuel cut control that stops the fuel pump when an airbag is deployed.

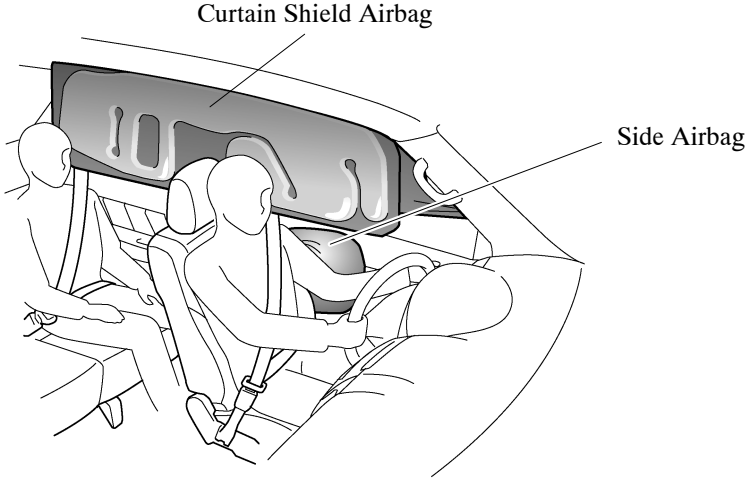

00MBE64Y


LHD Model

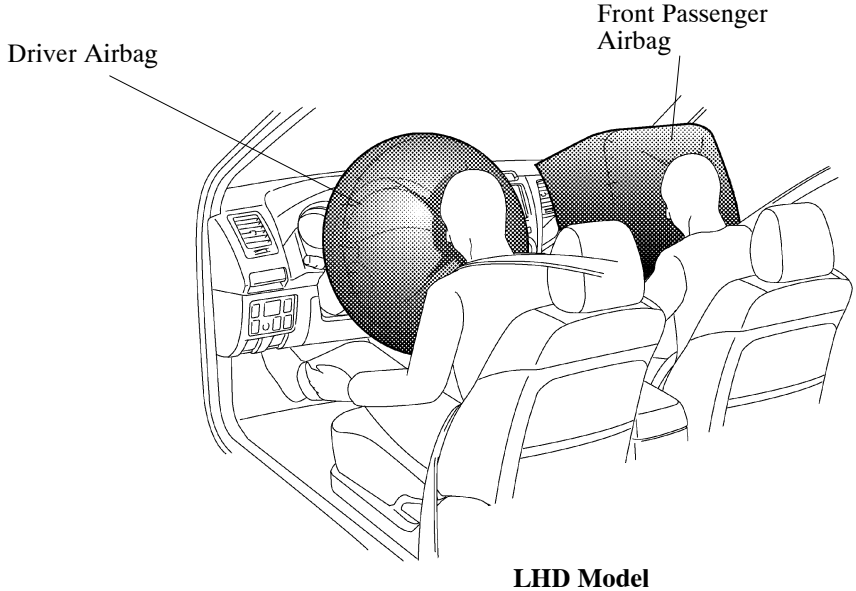

LHD Model

280BE40

▶ Wiring Diagram ◀

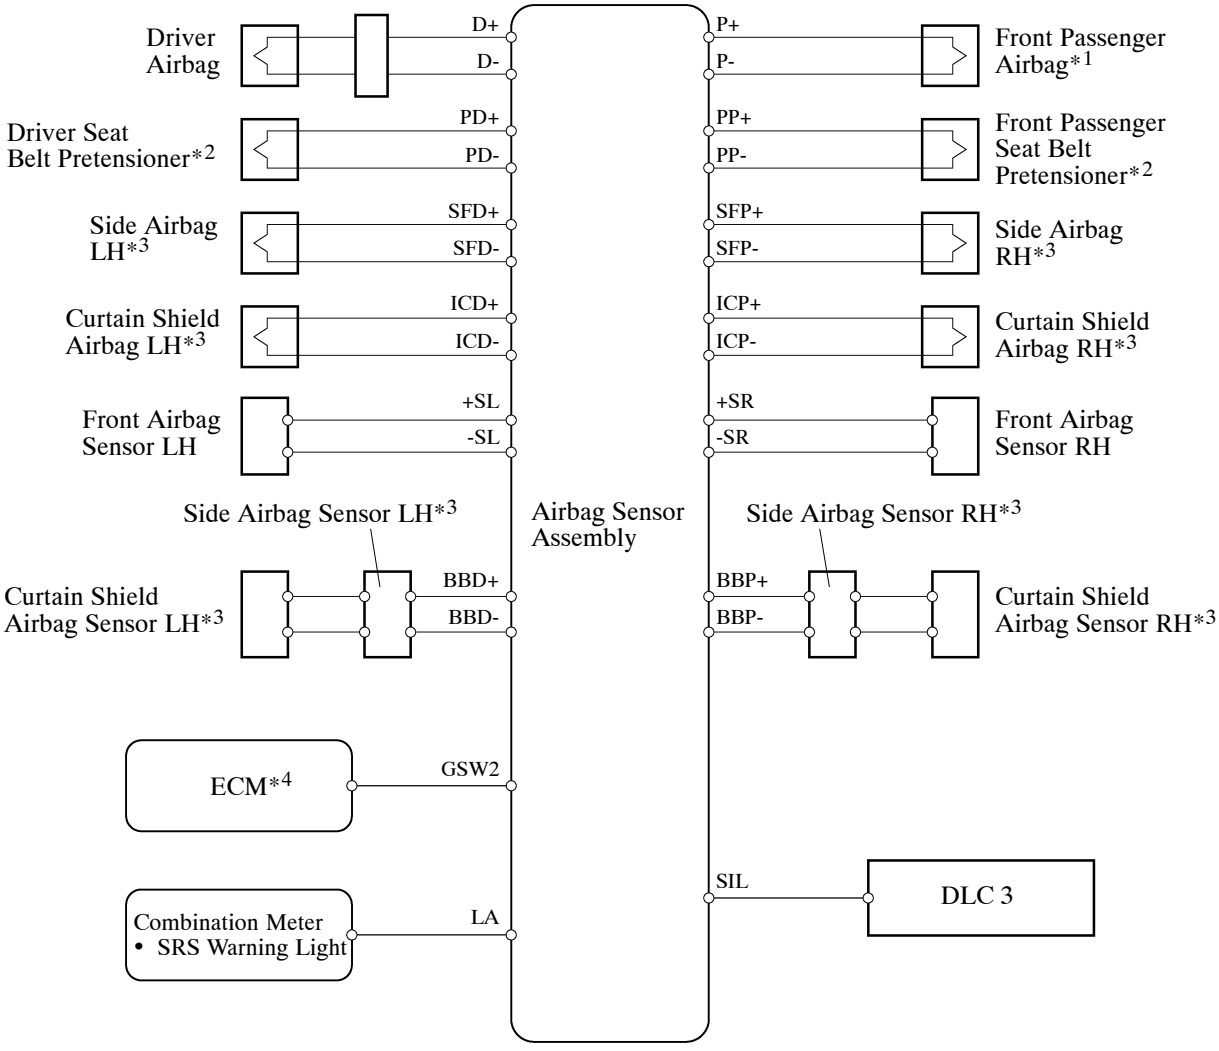

*1: Models with front passenger airbag
*2: Models with driver and front passenger seat belt pretensioners
*3: RHD models for South Africa with 1KD-FTVand 1GR-FE engines
*4: Models with gasoline engine

00MBE38Y

BE