# SEAT BELT WARNING SYSTEM

## ■ DESCRIPTION

- A seat belt warning system is used. If the seat belt is not buckled, the seat belt warning light blinks.
- When the ignition switch is turned ON, this system determines whether or not the seat belt is buckled depending on whether the signal from the switch in the seat belt buckle is ON or OFF.
- The occupant detection sensor provided in the seat cushion of the front passenger seat determines whether or not an occupant is seated in the front passenger seat.
- On models for G.C.C. Countries, when the driver seat belt is unbuckled, the buzzer sounds for approx. 6 seconds, 1.8 seconds after the ignition switch is turned ON.
- The specifications of this system vary by destination as indicated in the table below.


| Destination | | Thailand | | | South Africa | | |
|---|---|---|---|---|---|---|---|
| Grade | | SR | | | SR | | |
| Engine Type | | 2TR-FE | 1KD-FTV | 2TR-FE | 1KD-FTV | 5L-E | 1GR-FE |
| Seat Belt Warning Light | For Driver Seat | OP*1 | ●*2 | ● | ●*6/ OP*7 | ● | — |
| | For Driver and Front Passenger Seat | ● | ●*3/ OP*4 | OP*5 | ●*8/ OP*9 | OP*5 | ● |

| Destination | | Central and South America | | | | Indonesia | Philippines |
|---|---|---|---|---|---|---|---|
| Grade | | Deluxe | | SR | | SR | SR |
| Engine Type | | 2TR-FE | 1KD-FTV | 1GR-FE | 1KD-FTV | All | All |
| Seat Belt Warning Light | For Driver Seat | ●*2 | ● | — | — | — | — |
| | For Driver and Front Passenger Seat | OP*4 | OP*5 | ● | ● | ● | ● |

| Destination | | G.C.C. Countries | Malaysia | Vietnam | ANCOM | General Countries |
|---|---|---|---|---|---|---|
| Grade | | SR | All | SR | SR | SR |
| Engine Type | | All | All | All | 1GR-FE | All |
| Seat Belt Warning Light | For Driver Seat | ● | — | — | — | — |
| | For Driver and Front Passenger Seat | OP*5 | ● | ● | ● | ● |
| Buzzer for Driver Seat | | Sounds | — | — | — | — |


*1: Models with driver SRS airbag system
*2: Models with manual transmission
*3: Models with automatic transmission
*4: Models with manual transmission and driver and front passenger SRS airbag system
*5: Models with driver and front passenger SRS airbag system
*6: LHD models
*7: Models without SRS airbag system
*8: RHD models
*9: LHD models with driver and front passenger SRS airbag system

## ▶ System Diagram ◀

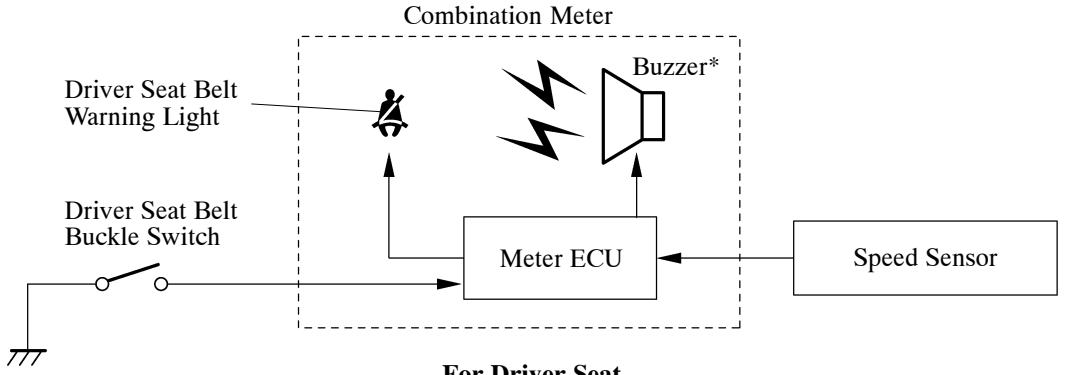


**For Driver Seat**

271BE57

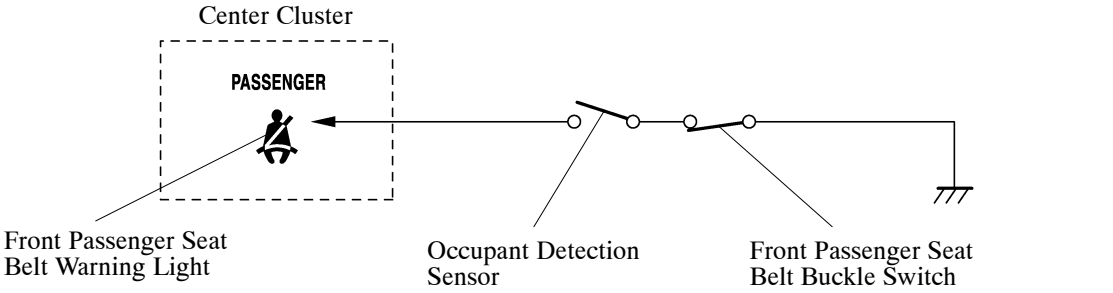


271BE58

**For Front Passenger Seat**

*: Models for G.C.C. Countries

BE