■SEAT BELT

1. General


The following types of seat belts are provided.

Seat		Seat Belt Type	Remarks
Front Seat	Driver	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*3
	Passenger	3-point ELR*1	Electrical Sensing Type Pretensioner & Force Limiter*3
Rear No. 1 Seat	Outer	3-point ELR*1 × 2	-
	Center	2-point NR*2	-
Rear No. 2 Seat	Outer	3-point ELR*1 × 2	-

*1: Emergency locking retractor
*2: No retractor
*3: Used on some models for G.C.C. Countries and South Africa

2. Pretensioner & Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioners activate simultaneously with the deployment of the SRS airbags for frontal collision.
In the beginning of the collision, if the tension of the seat belt applied to the occupant reaches a predetermined level, the force limiter activates to control the force.

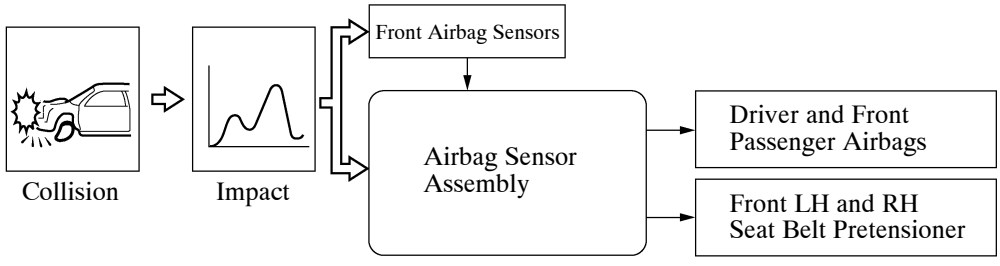

255BO24