
■ATF (AUTOMATIC TRANSMISSION FLUID)

1. General

Toyota Genuine ATF WS is used to reduce the resistance of the ATF and improve fuel economy by reducing its viscosity in the practical operating temperature range. At higher fluid temperatures, the viscosity is the same as that of ATF Type T-IV, maintaining the durability of the automatic transmission.
Toyota Genuine ATF WS and other types of ATF (such as ATF Type T-IV and Dexron) are not interchangeable.

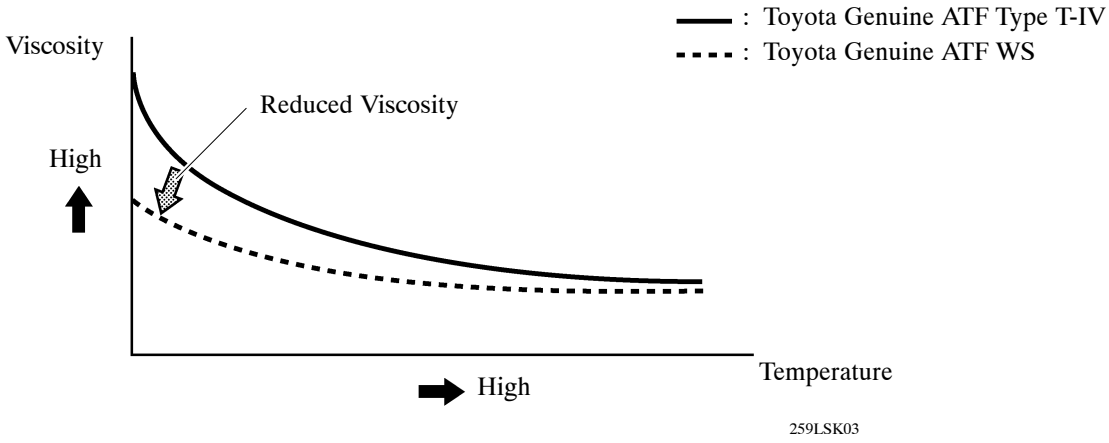

2. ATF Filling Procedures

An ATF filling procedure is used in order to improve the accuracy of the ATF level when the transmission is being repaired or replaced. As a result, the oil filler tube and the oil level gauge used in the conventional automatic transmission have been discontinued, eliminating the need to inspect the fluid level as a part of routine maintenance. For details, refer to the Fortuner/Hilux SW4 Repair Manual.

