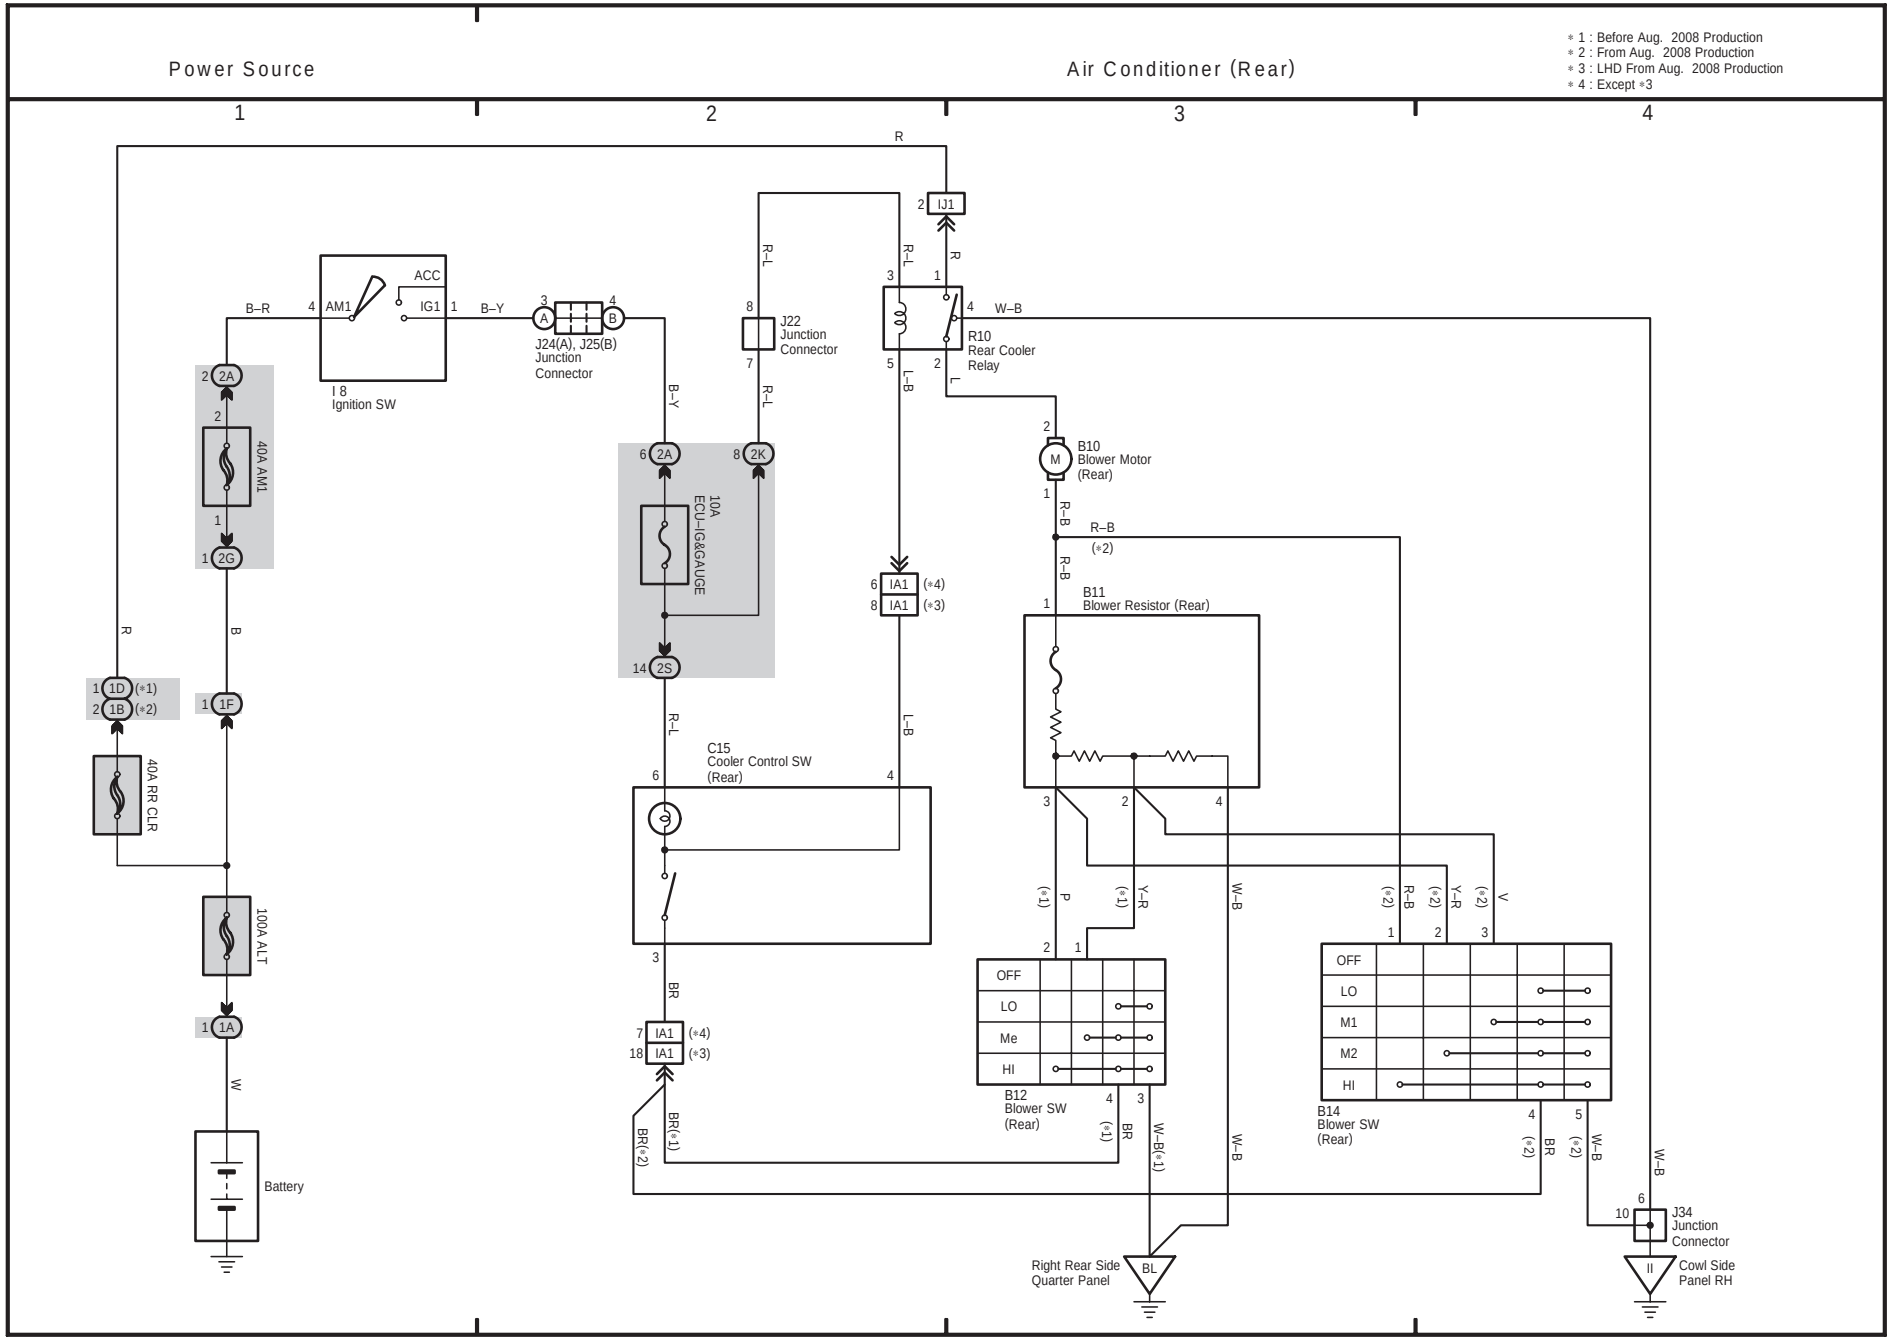

Power Source
Air Conditioner (Rear)
1
2
3
4
* 1 : Before Aug. 2008 Production
* 2 : From Aug. 2008 Production
* 3 : LHD From Aug. 2008 Production
* 4 : Except *3
ACC
AM1
IG1
I 8
Ignition SW
J24(A), J25(B)
Junction
Connector
J22
Junction
Connector
R10
Rear Cooler
Relay
B10
Blower Motor
(Rear)
B11
Blower Resistor (Rear)
C15
Cooler Control SW
(Rear)
B12
Blower SW
(Rear)
B14
Blower SW
(Rear)
OFF
LO
Me
M1
M2
HI
40A AM1
10A
ECU–IG&GAUGE
40A RR CLR
100A ALT
Battery
J34
Junction
Connector
Cowl Side
Panel RH
Right Rear Side
Quarter Panel
BL