


(Cont. next page)

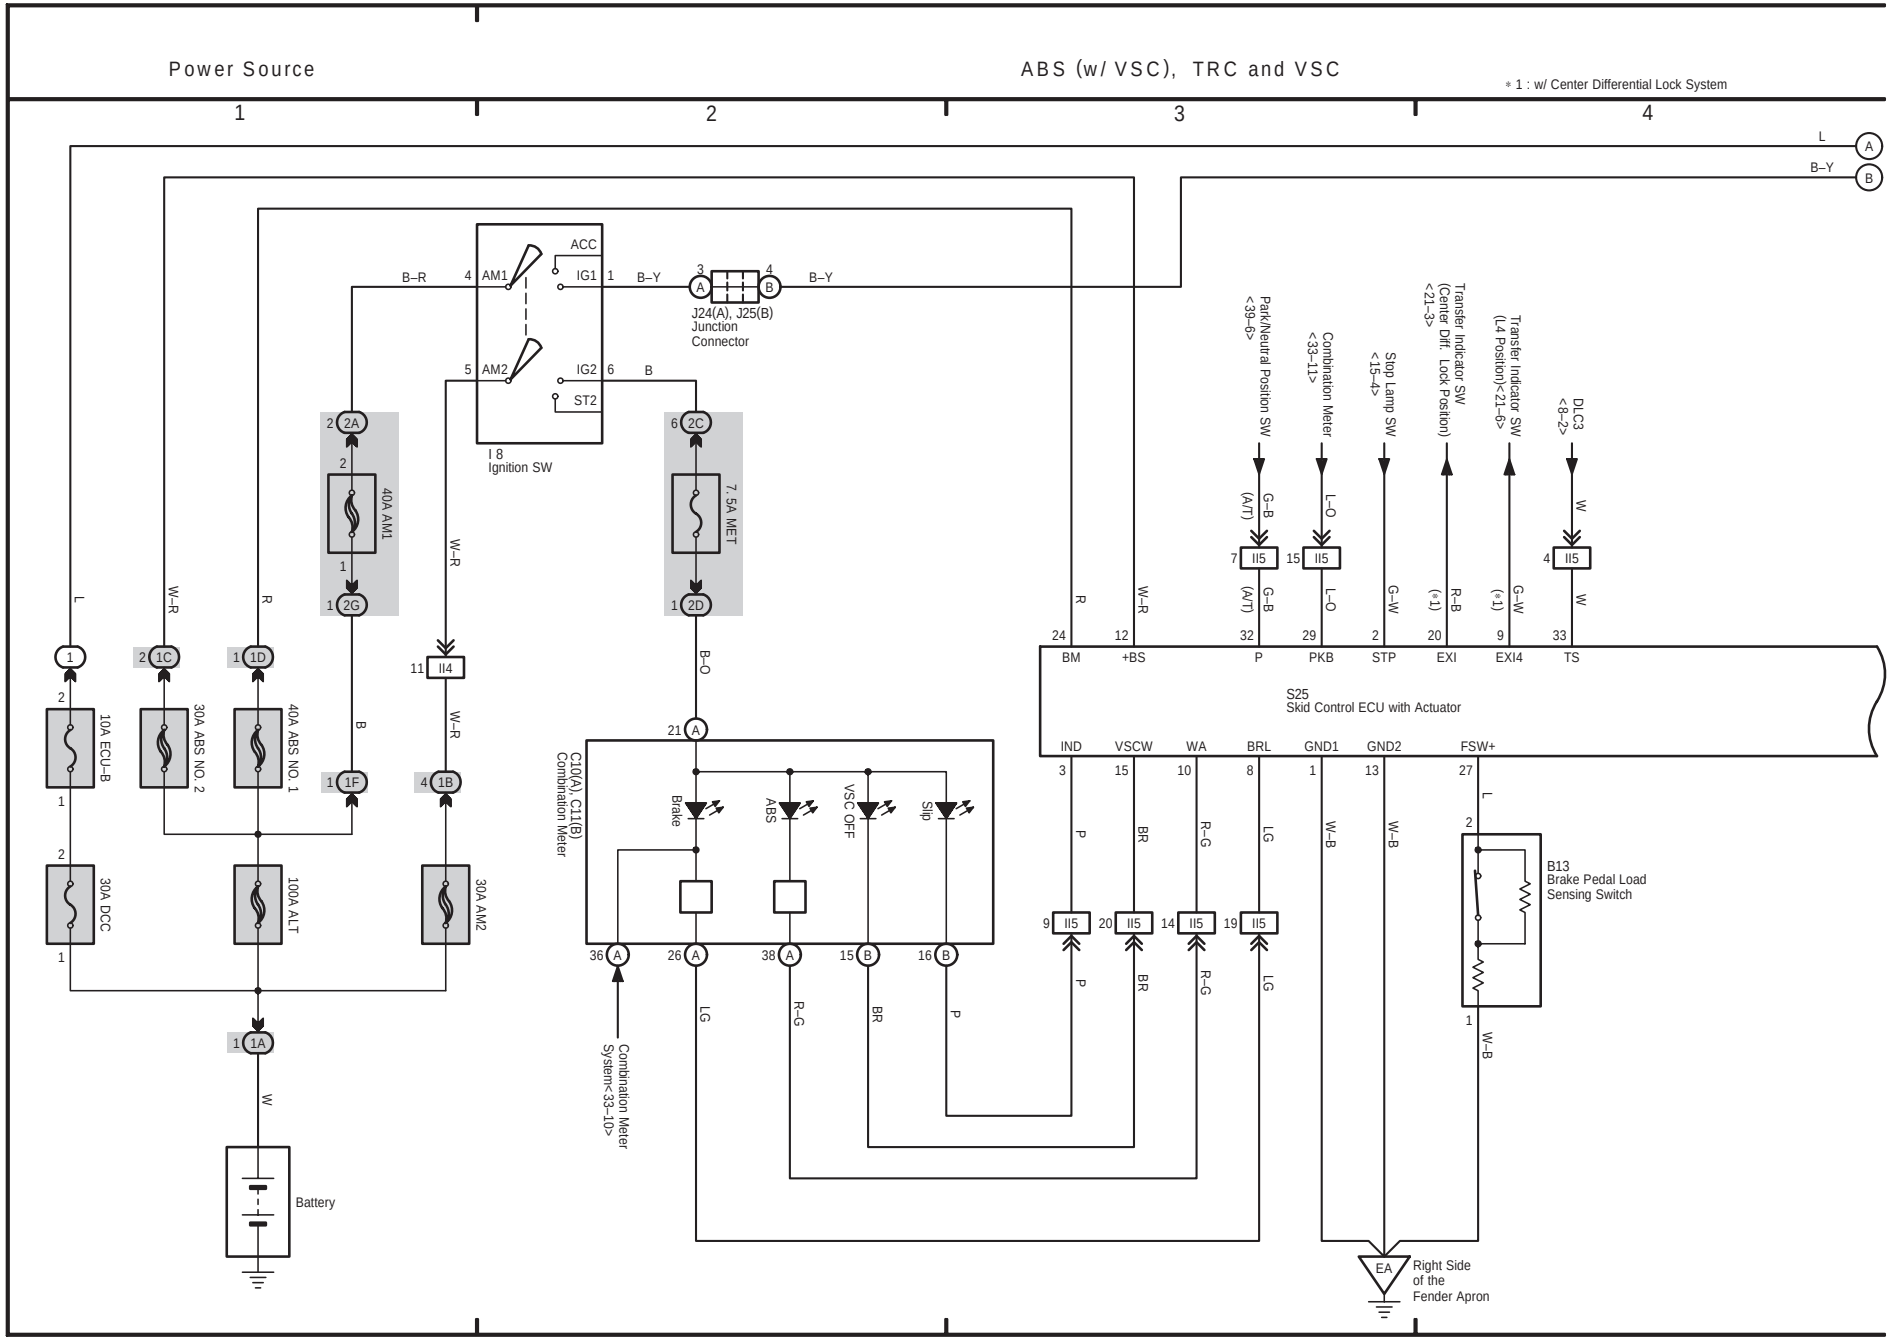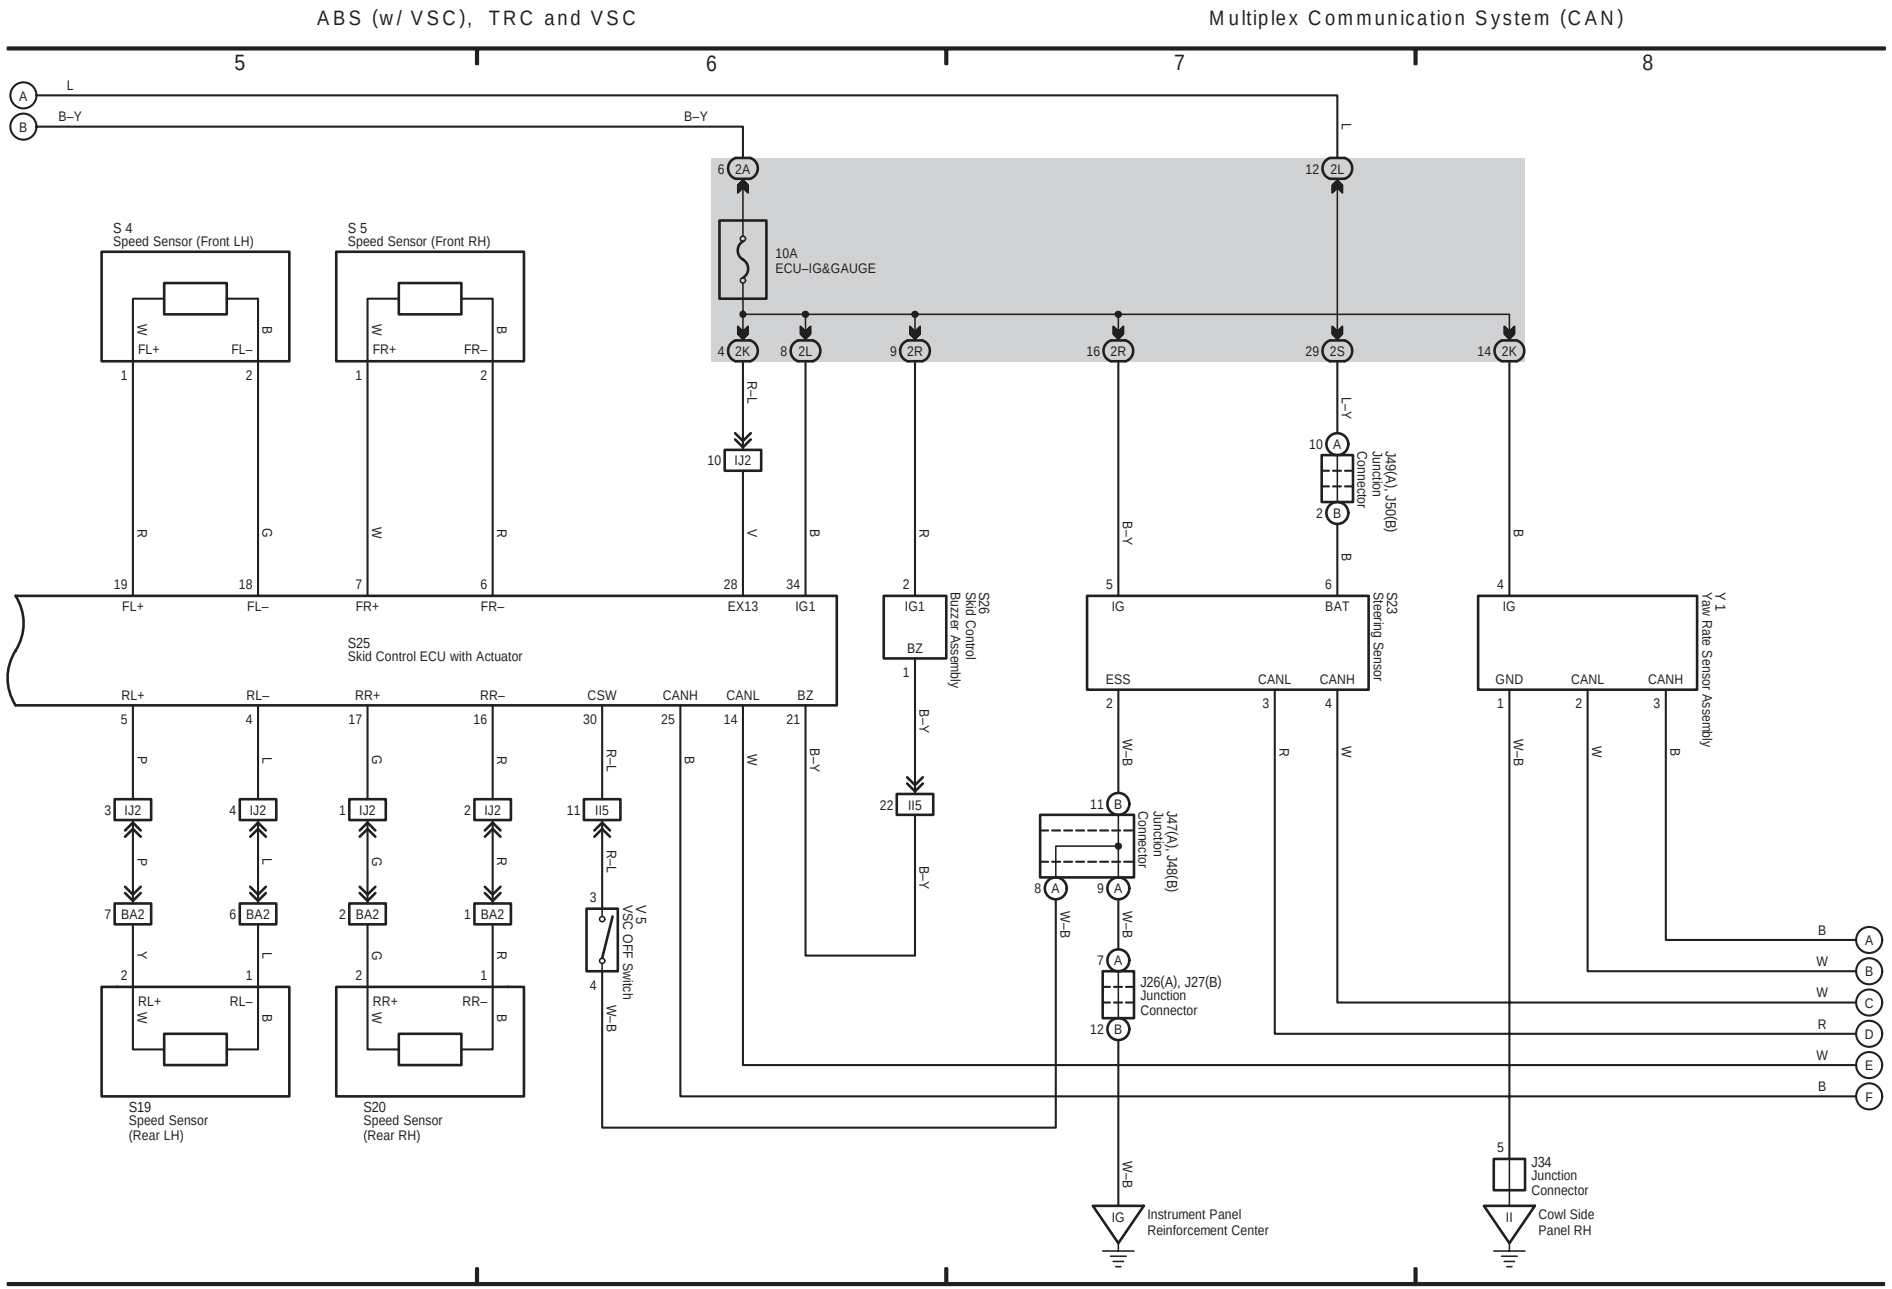

(Cont. next page)

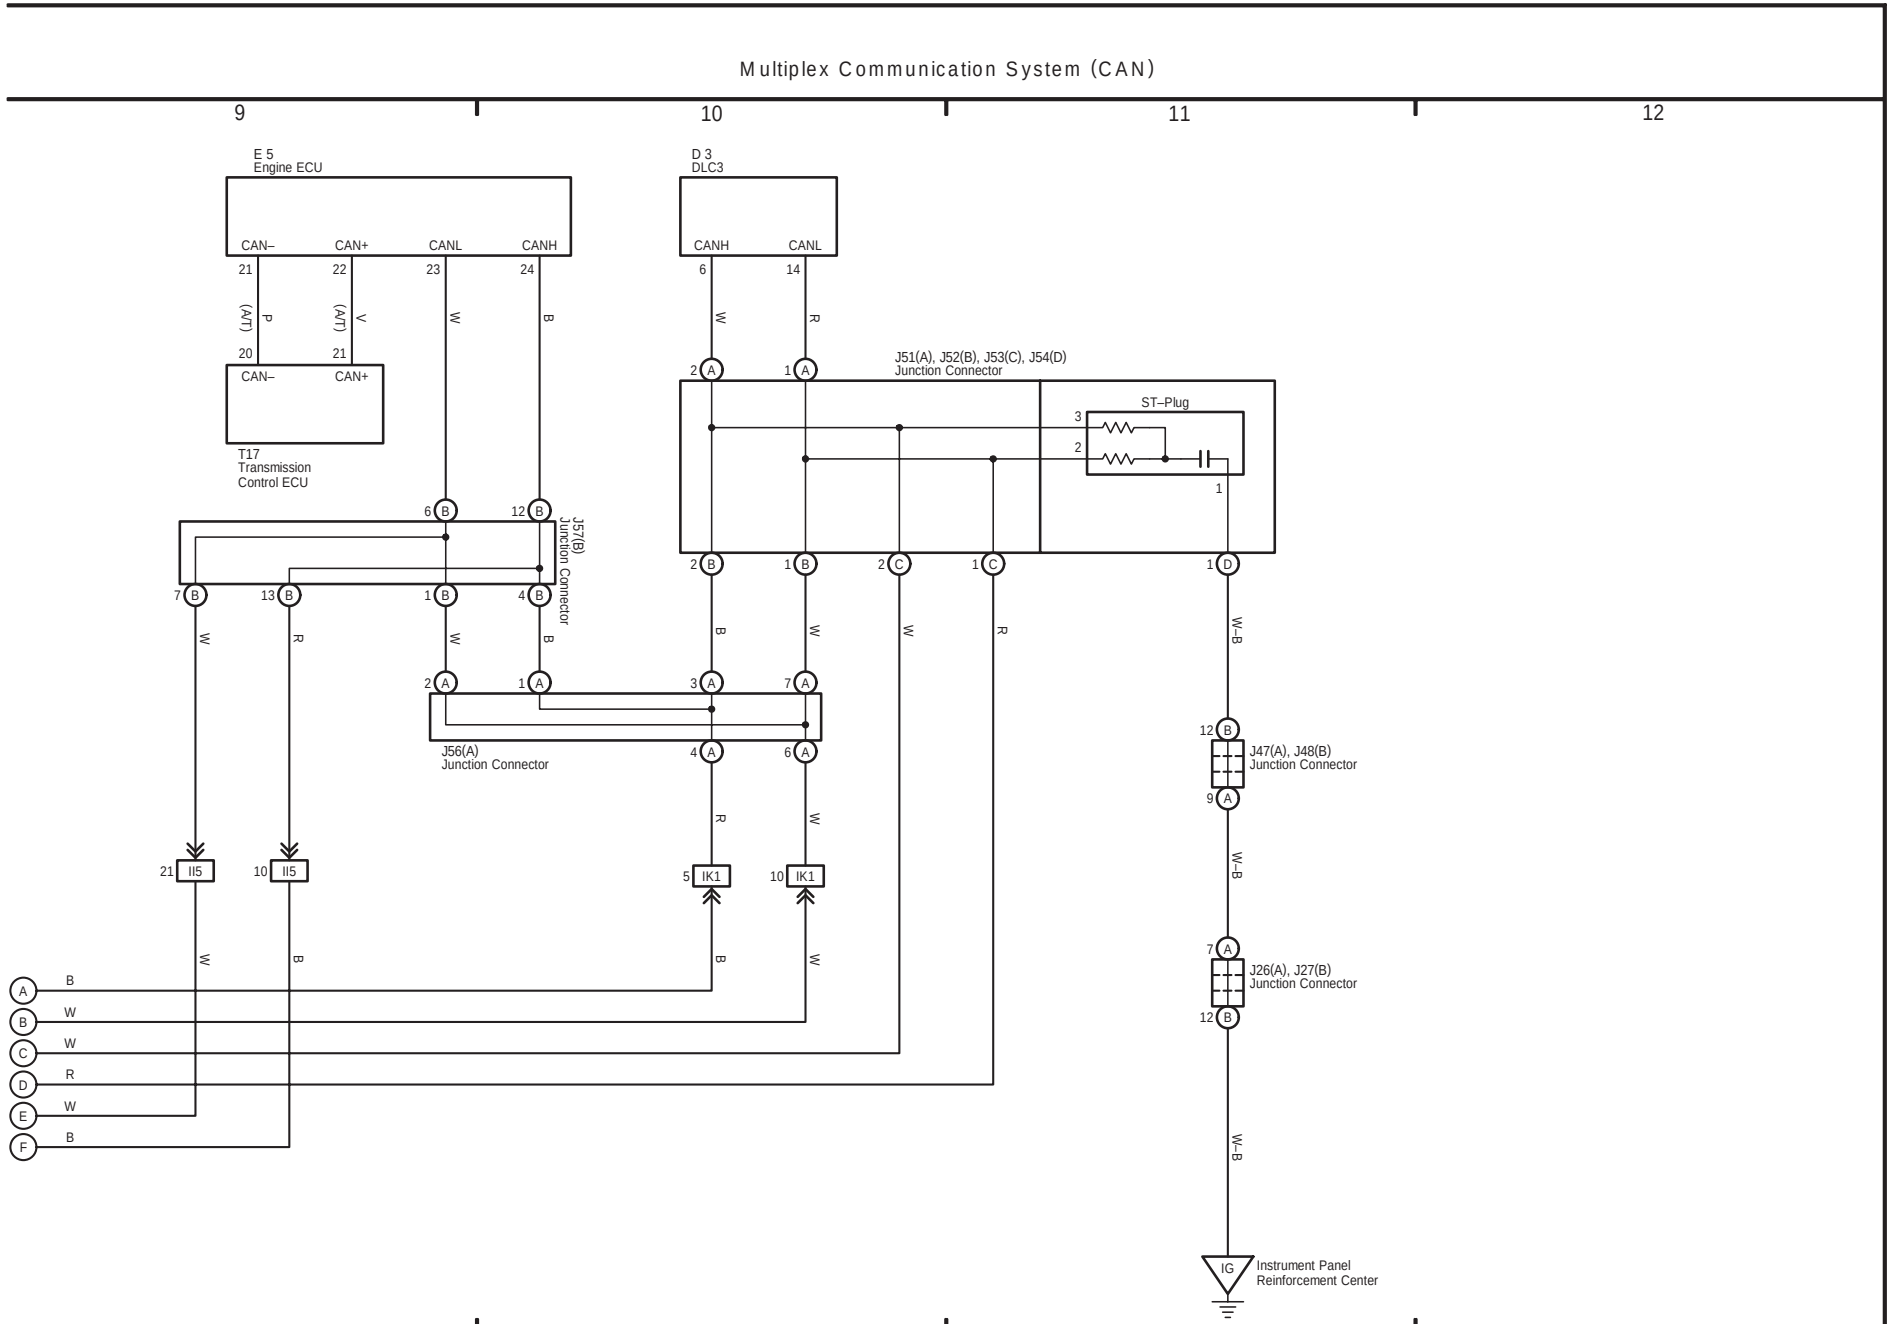


Multiplex Communication System (CAN)
9
10
11
12
E 5
Engine ECU
CAN–
CAN+
CANL
CANH
21
22
23
24
(A/T)
P
(A/T)
V
W
B
20
21
CAN–
CAN+
T17
Transmission
Control ECU
D 3
DLC3
CANH
CANL
6
14
W
R
J51(A), J52(B), J53(C), J54(D)
Junction Connector
ST–Plug
3
2
1
J57(B)
Junction Connector
6 B
12 B
7 B
13 B
1 B
4 B
2 A
1 A
2 B
1 B
2 C
1 C
1 D
W
R
W
B
B
W
W
R
W–B
J56(A)
Junction Connector
3 A
7 A
4 A
6 A
12 B
J47(A), J48(B)
Junction Connector
9 A
W–B
7 A
J26(A), J27(B)
Junction Connector
12 B
W–B
21 II5
10 II5
5 IK1
10 IK1
W
B
B
W
A B
B W
C W
D R
E W
F B
IG
Instrument Panel
Reinforcement Center