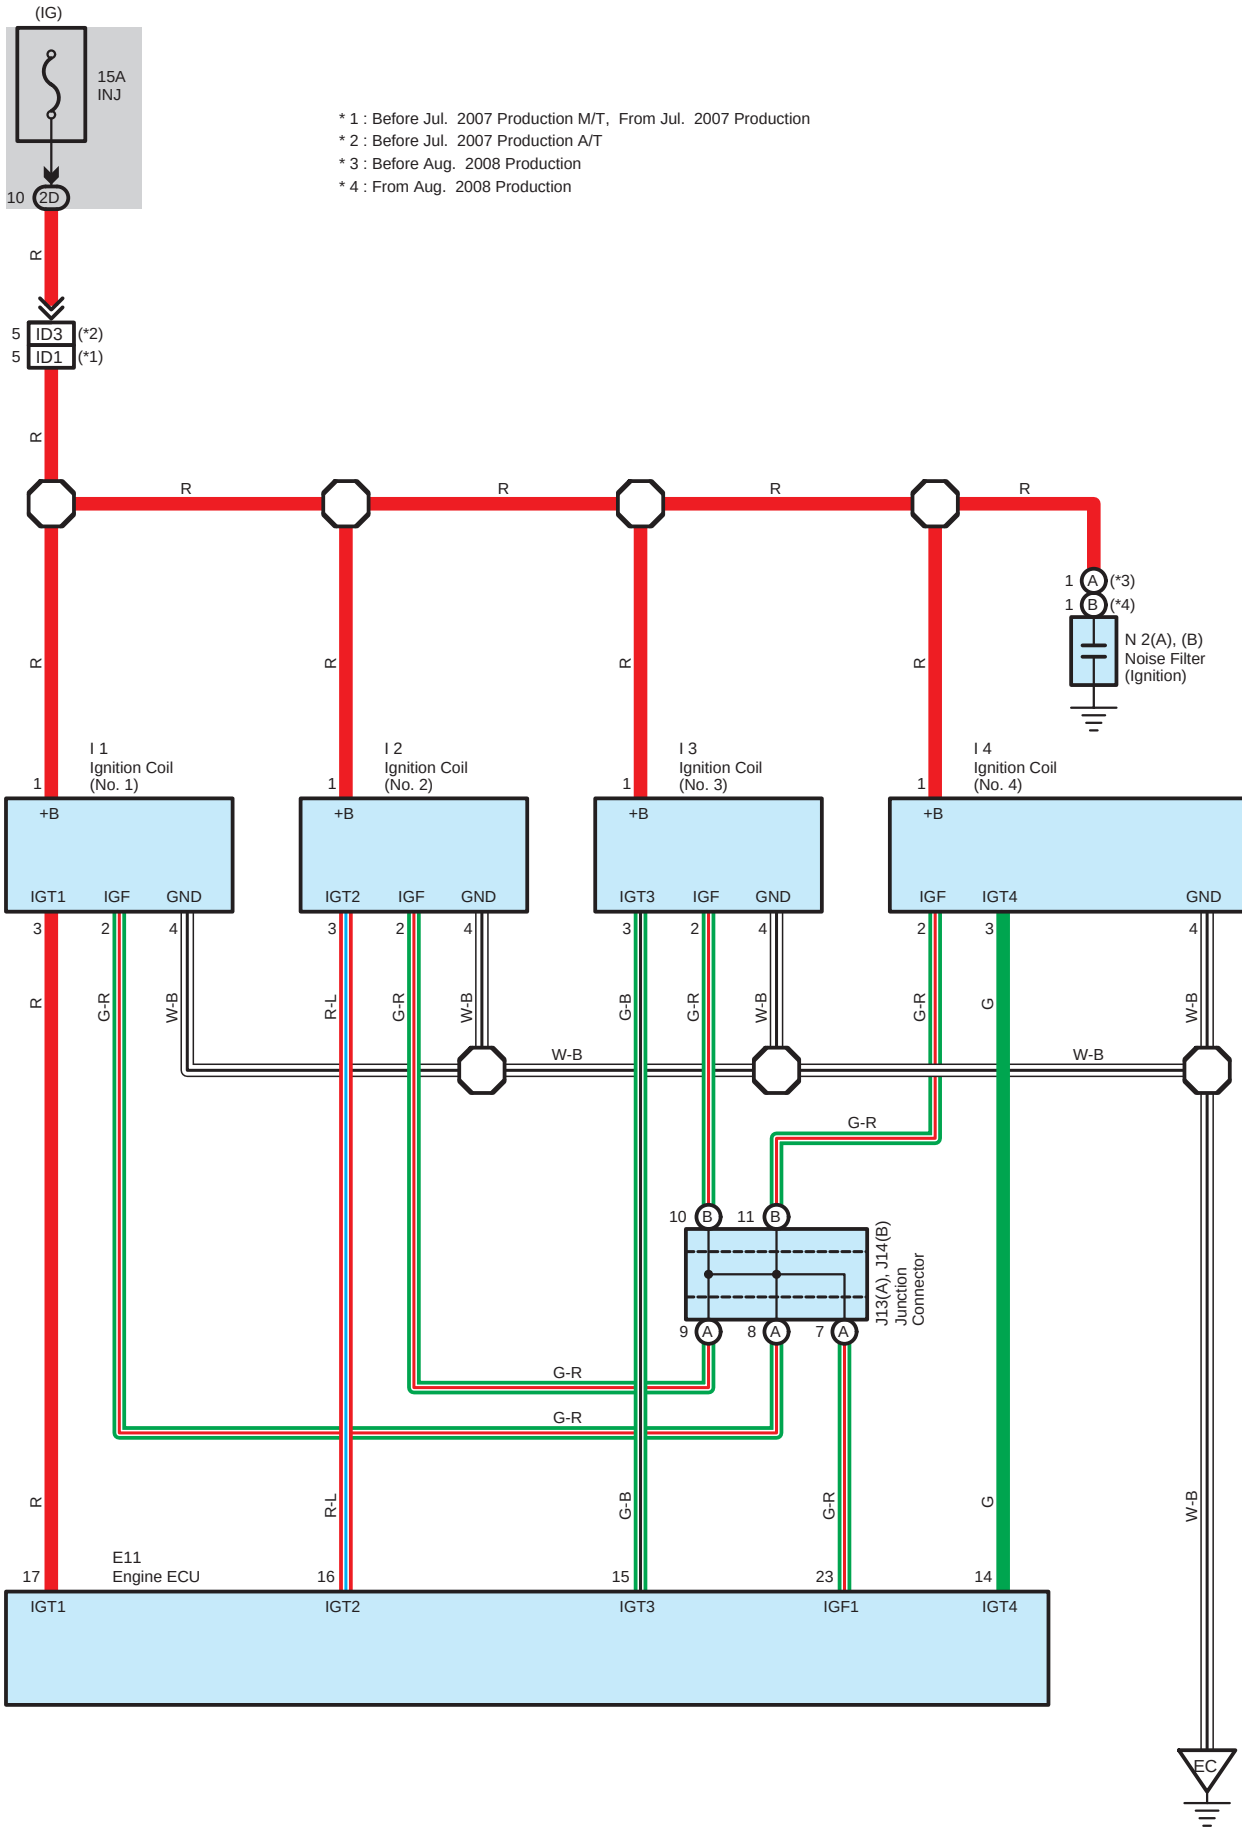

(IG)
15A
INJ
10 2D
R
5 ID3 (*2)
5 ID1 (*1)
* 1 : Before Jul. 2007 Production M/T, From Jul. 2007 Production
* 2 : Before Jul. 2007 Production A/T
* 3 : Before Aug. 2008 Production
* 4 : From Aug. 2008 Production
1 A (*3)
1 B (*4)
N 2(A), (B)
Noise Filter
(Ignition)
I 1
Ignition Coil
(No. 1)
I 2
Ignition Coil
(No. 2)
I 3
Ignition Coil
(No. 3)
I 4
Ignition Coil
(No. 4)
+B
IGT1
IGF
GND
IGT2
IGT3
IGT4
G-R
W-B
R-L
G-B
G
10 B
11 B
9 A
8 A
7 A
J13(A), J14(B)
Junction
Connector
E11
Engine ECU
17
16
15
23
14
IGF1
EC