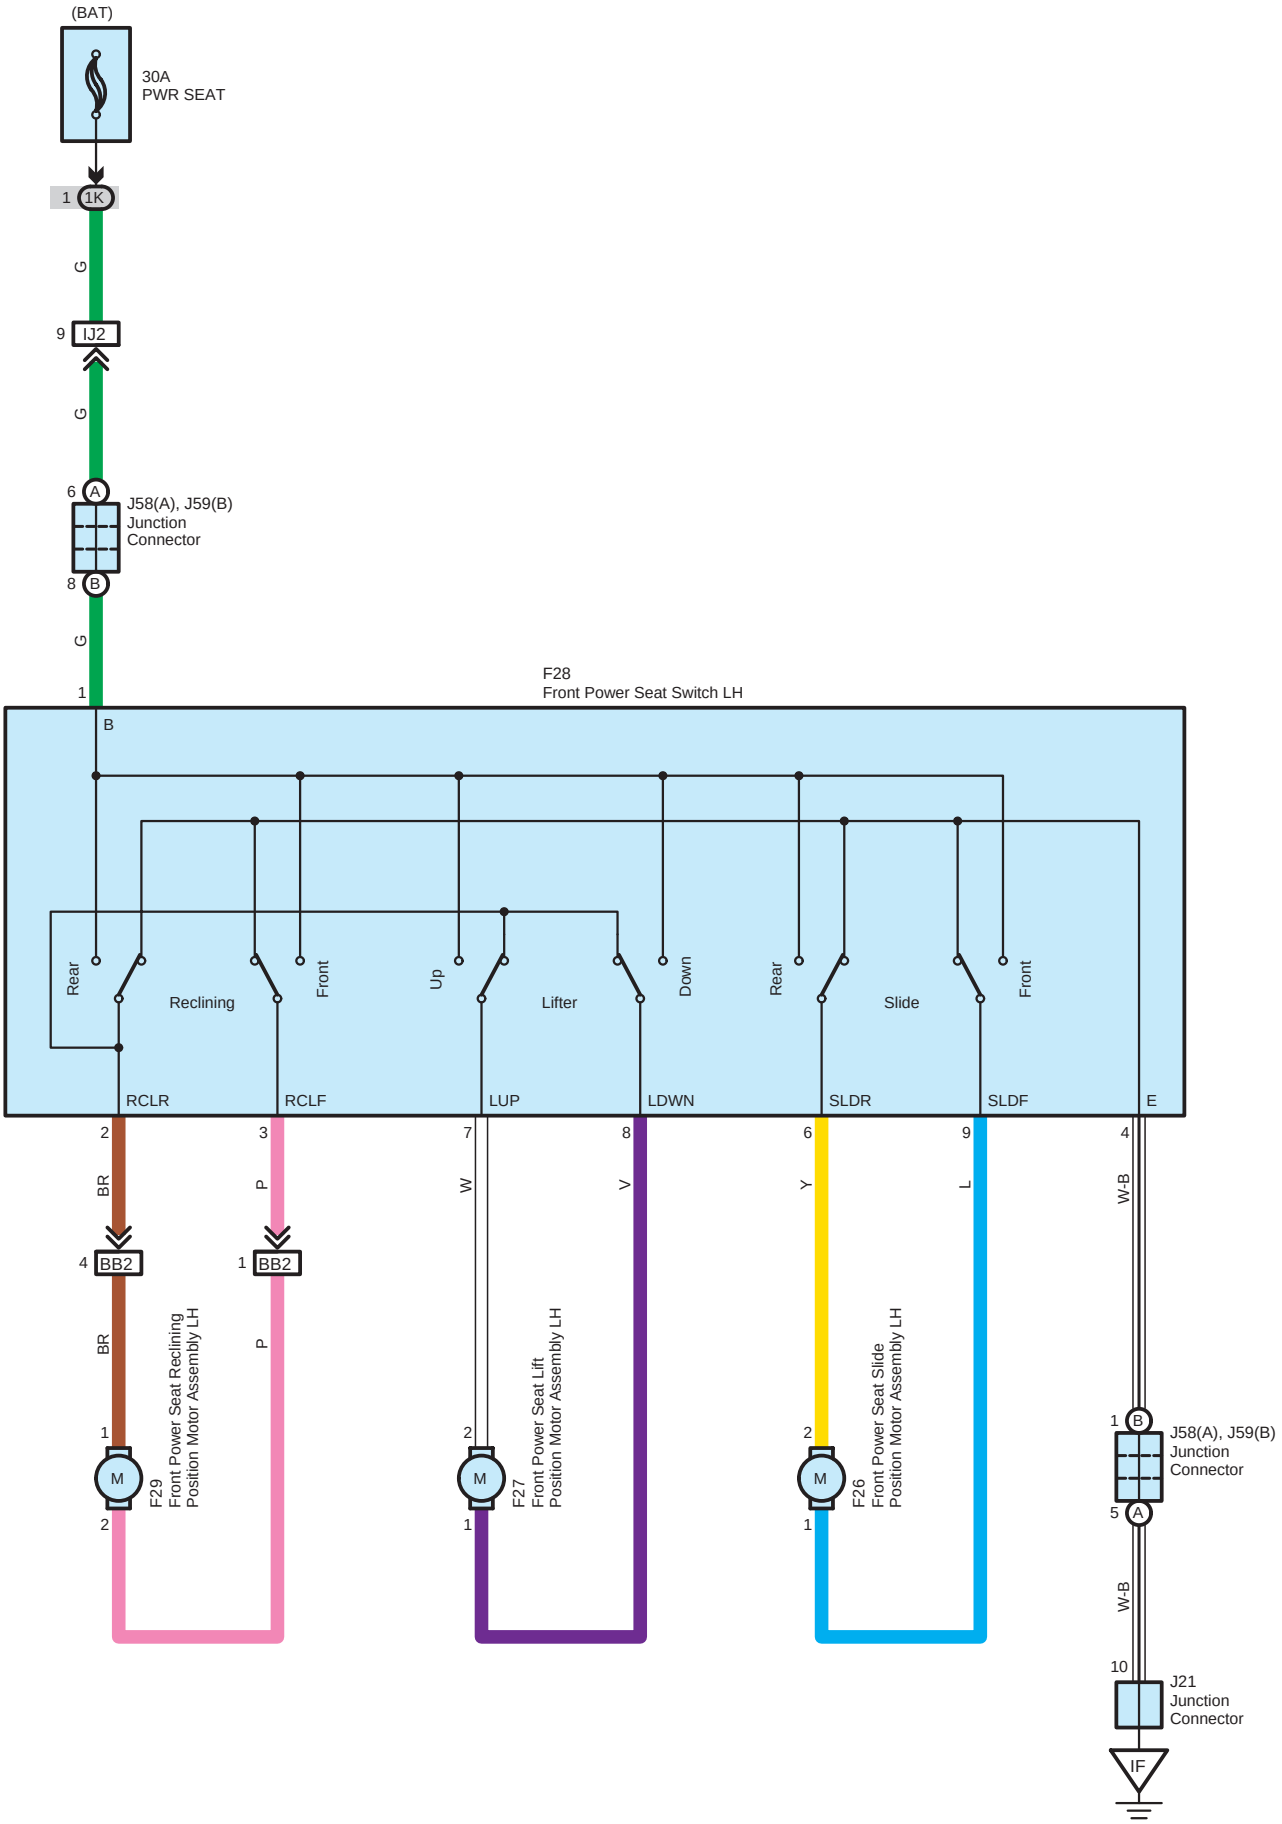

(BAT)
30A
PWR SEAT
1
1K
G
9
IJ2
G
6
A
J58(A), J59(B)
Junction
Connector
8
B
G
1
F28
Front Power Seat Switch LH
B
Rear
Reclining
Front
Up
Lifter
Down
Rear
Slide
Front
RCLR
RCLF
LUP
LDWN
SLDR
SLDF
E
2
BR
4
BB2
BR
1
M
2
F29
Front Power Seat Reclining
Position Motor Assembly LH
3
P
1
BB2
P
7
W
2
M
1
F27
Front Power Seat Lift
Position Motor Assembly LH
8
V
6
Y
2
M
1
F26
Front Power Seat Slide
Position Motor Assembly LH
9
L
4
W-B
1
B
J58(A), J59(B)
Junction
Connector
5
A
W-B
10
J21
Junction
Connector
IF