



(ACC)
7. 5A
ACC
24 2N
(BAT)
15A
RAD
2
1
S17
Speaker (Rear
Door LH)
S18
Speaker (Rear
Door RH)
R
W
1 BB1
2 BB1
1 BC1
2 BC1
B
Y
R
W
2 IK1
1 IK1
6 IK1
5 IK1
L–Y (*4)
L–Y (*3)
7 A
12 B
J 5(A), J 6(B)
Junction
Connector
2 II3
GR
3 A
ACC
4 A
B
2 B
RL+
6 B
RL–
1 B
RR+
3 B
RR–
R 2(A), R 3(B), R 4(C)
Radio Receiver Assembly
GND
FL+
FL–
FR+
FR–
7 A
2 A
6 A
1 A
5 A
P
V
LG
L
9 IK1
4 IK1
6 IM1
5 IM1
8 IC2
7 IC2
(*1)
(*2)
T24
Tweeter (LH)
T25
Tweeter (RH)
4
2
3
1
S15
Speaker
(Front Door LH)
S16
Speaker
(Front Door RH)
BR
IG

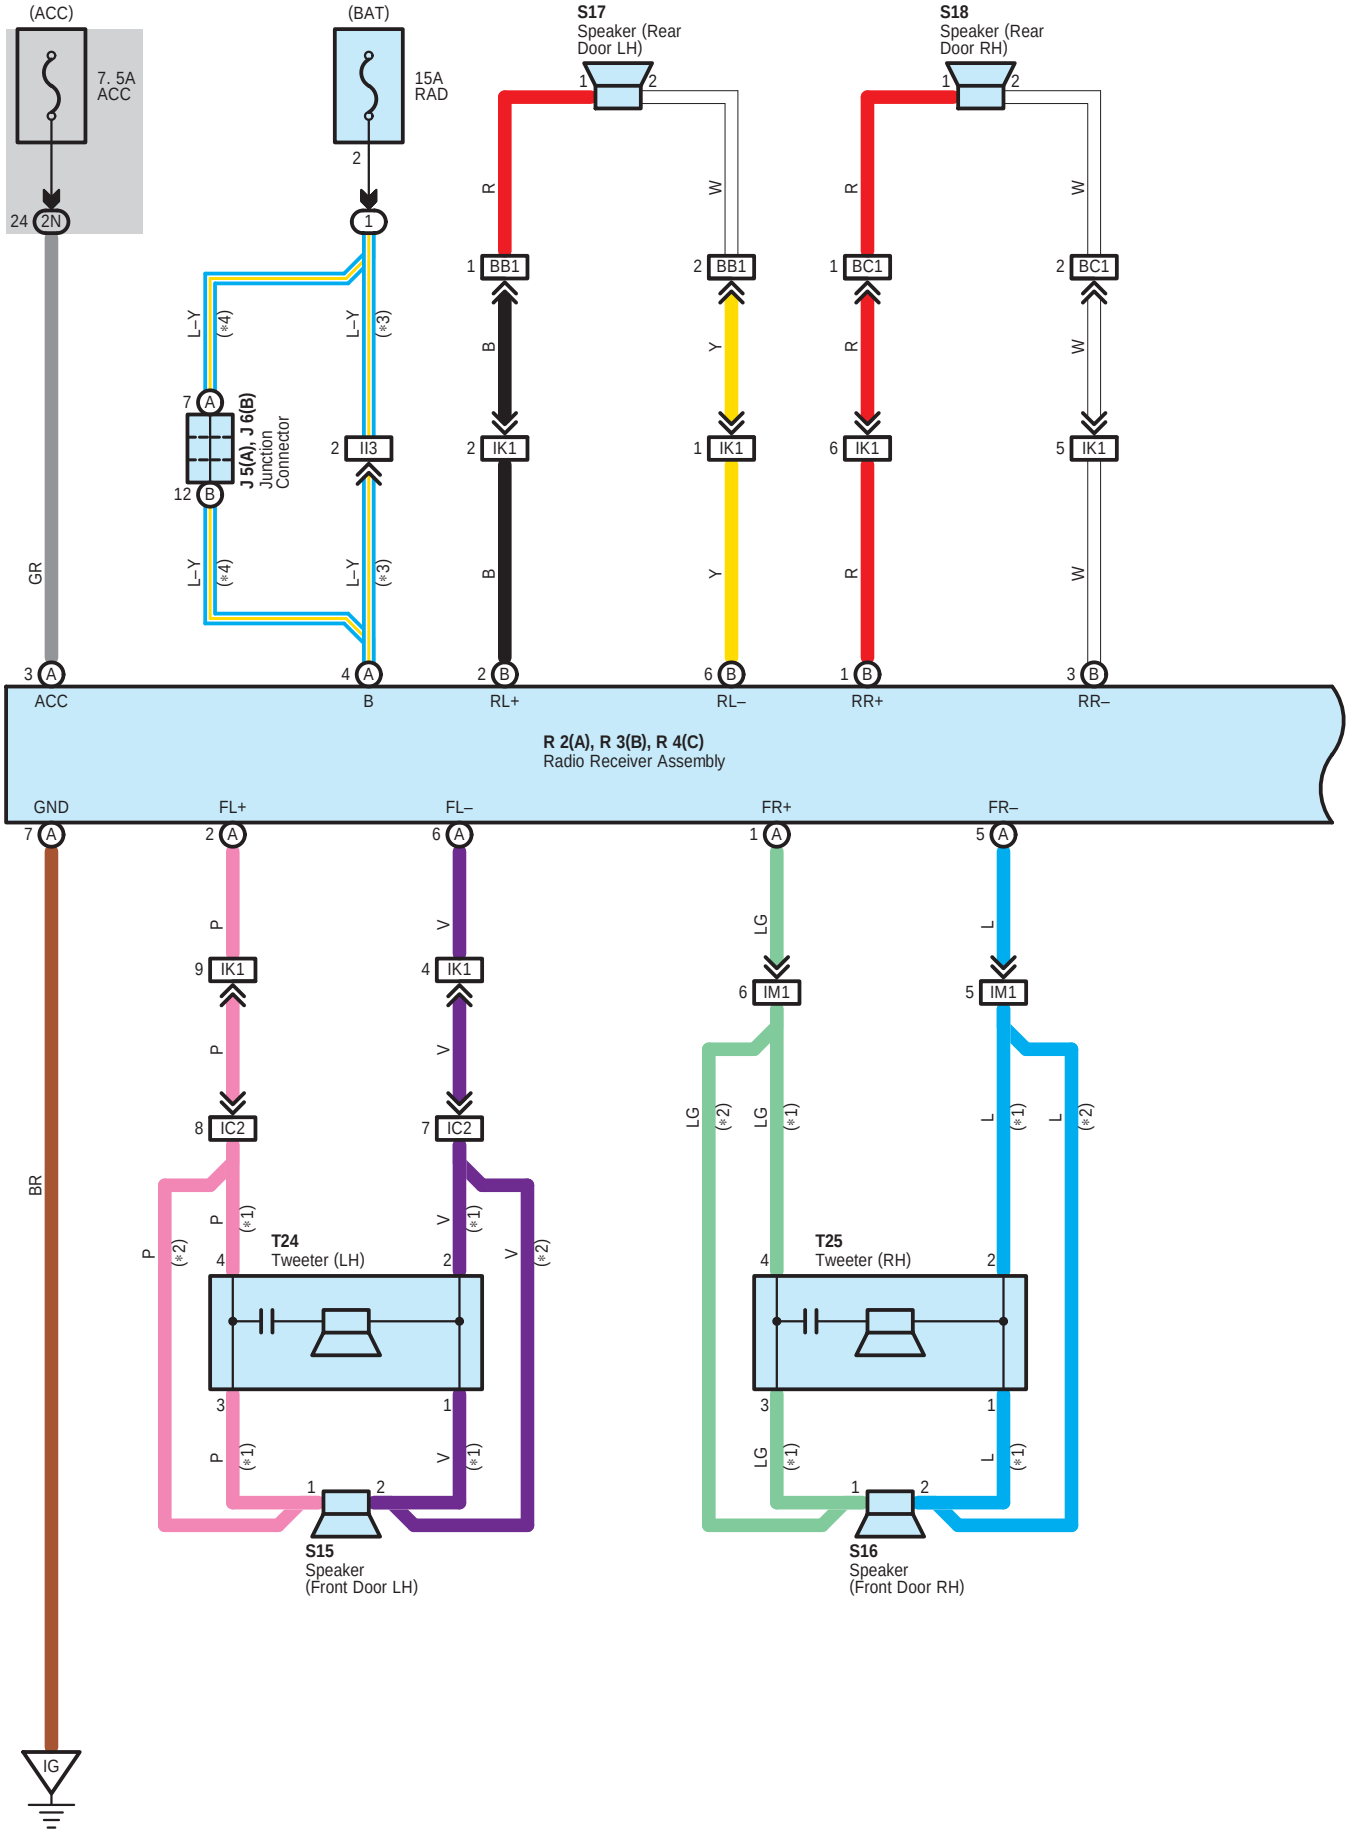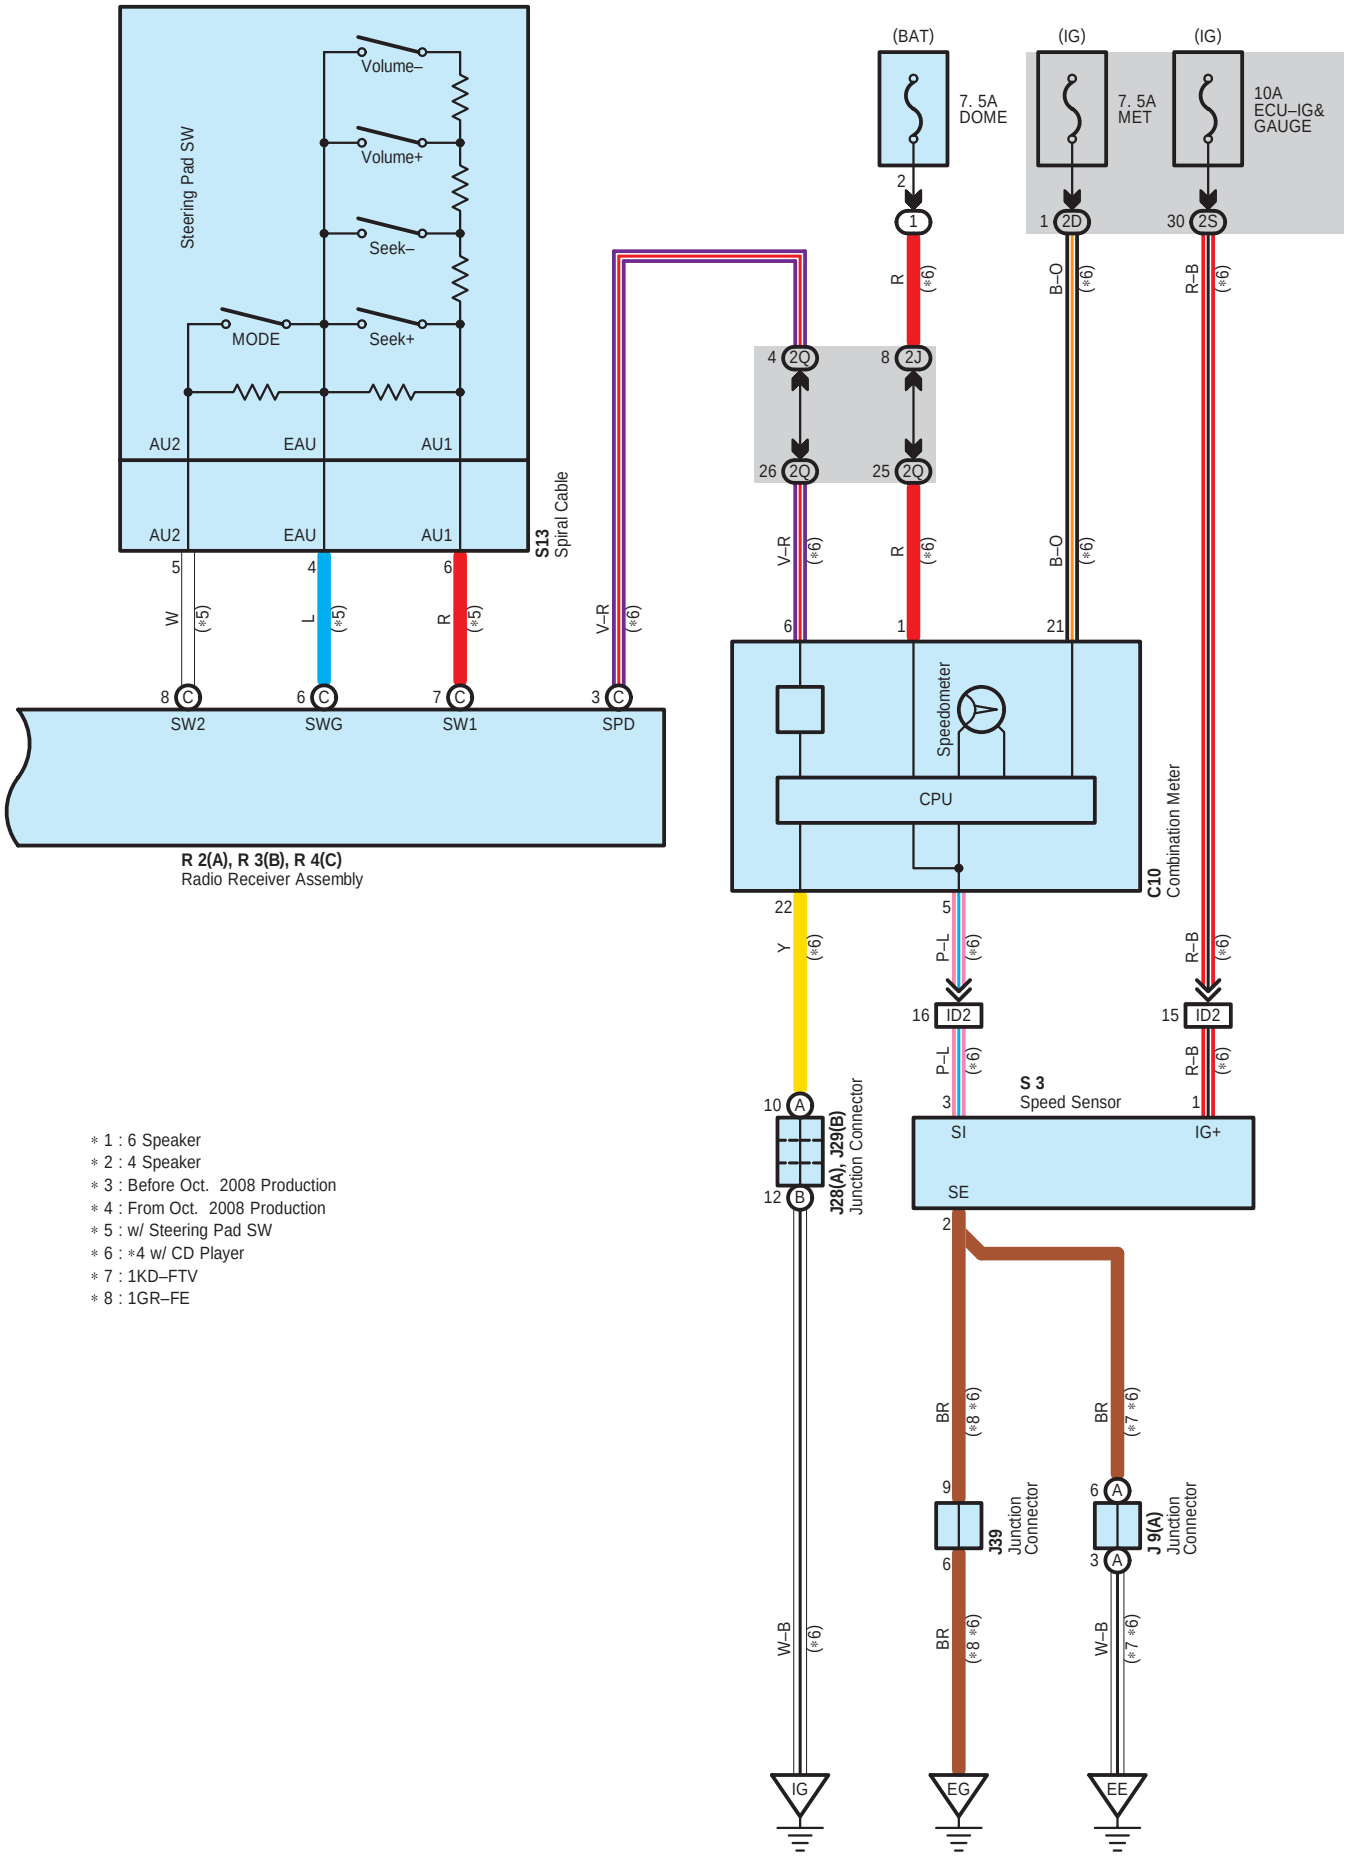


∗ 1 : 6 Speaker
∗ 2 : 4 Speaker
∗ 3 : Before Oct. 2008 Production
∗ 4 : From Oct. 2008 Production
∗ 5 : w/ Steering Pad SW
∗ 6 : ∗4 w/ CD Player
∗ 7 : 1KD–FTV
∗ 8 : 1GR–FE


C 10
White

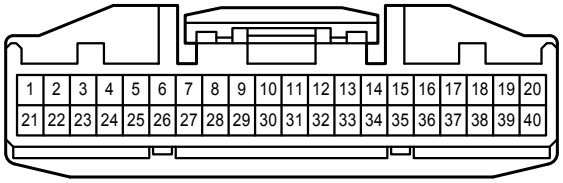


J 5
Black

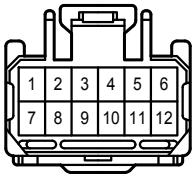


J 6
White

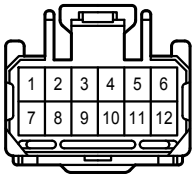


J 9
Blue

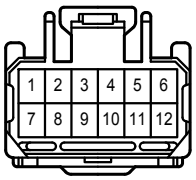


J 28
White

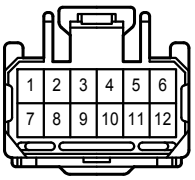


J 29
White

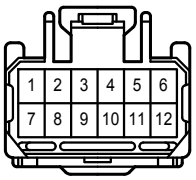

J 39
Blue




R 2
White

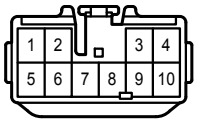

R 3
White



R 4
White

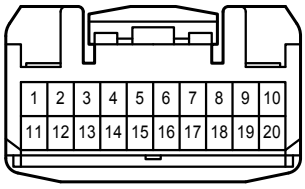

S 3
Black




S 13
Black



S 15
White



S 16
White




S 17
White




S 18
White




T 24
White




T 25
White




2D
White

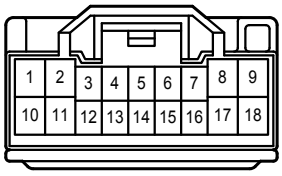


2J
White

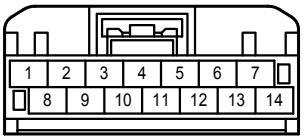


2N
Gray

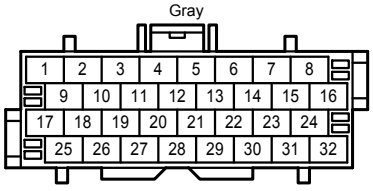


2Q
Gray

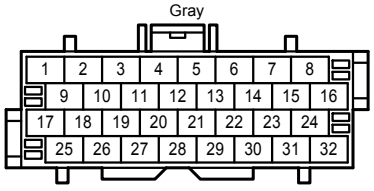


2S
White

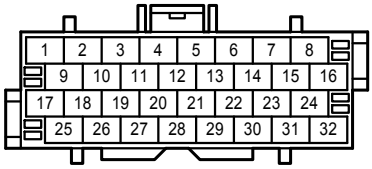


BB1
White

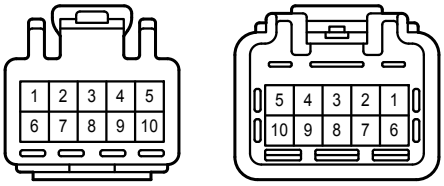


BC1
White

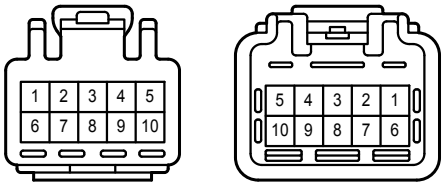


IC2
White

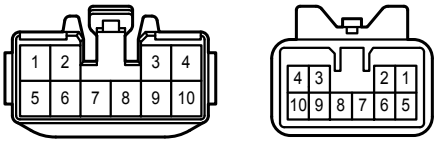

ID2
White

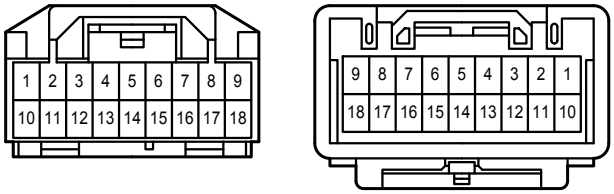


II3
White

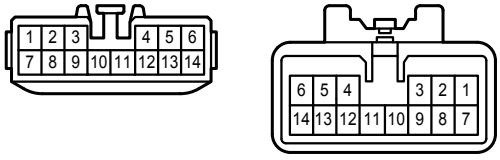

(Before Oct. 2008 Production)

IK1
White

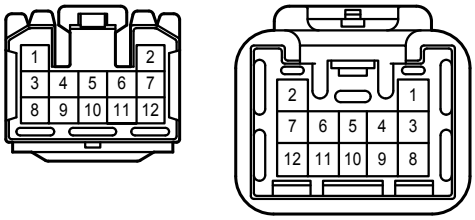

IM1
White

